


E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

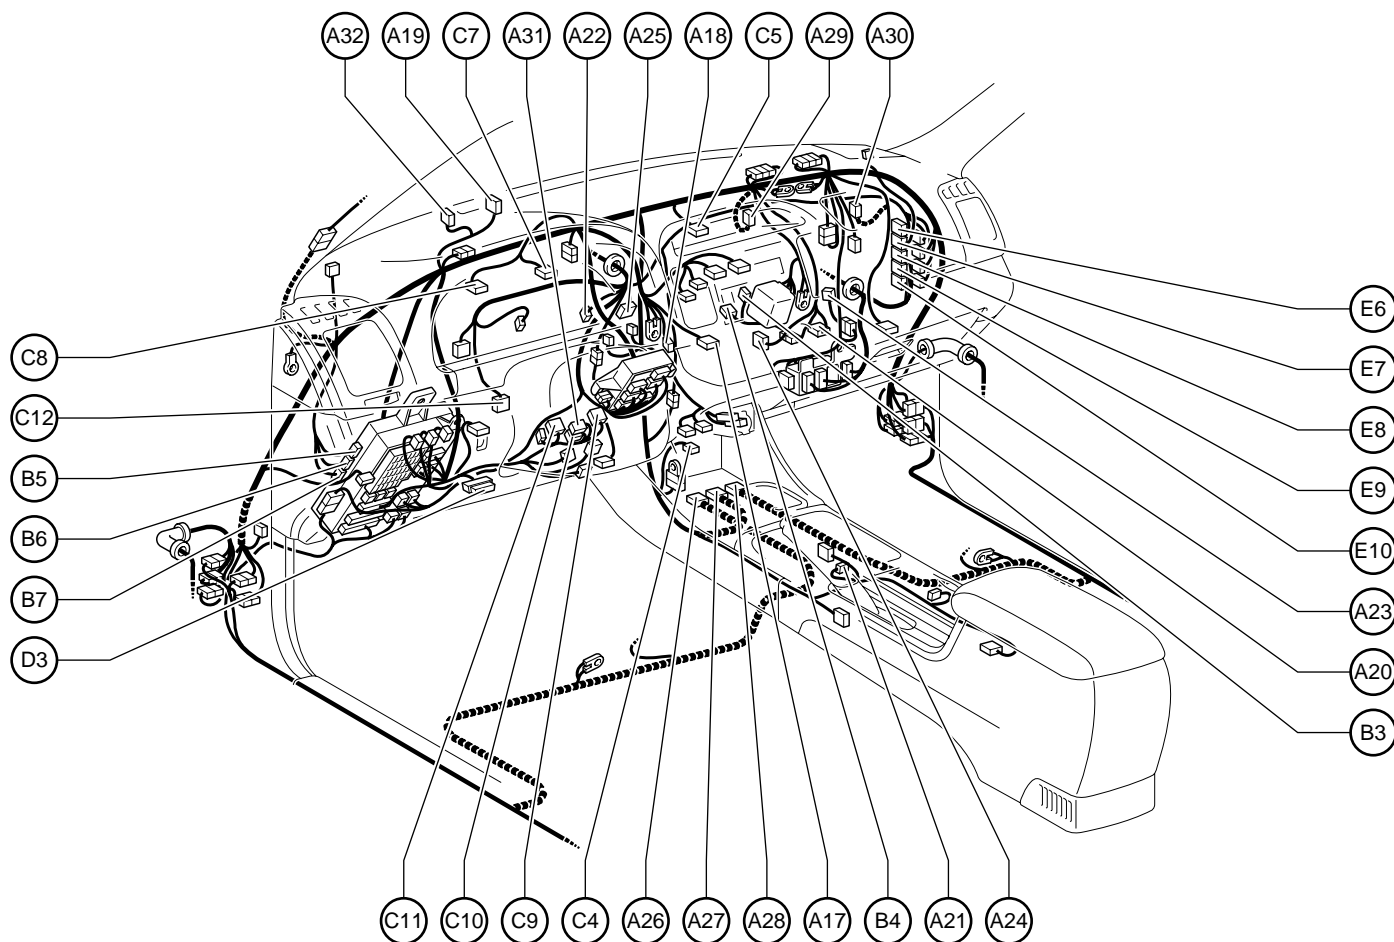

- | | |
|--|---|
| A17 A/C Control Assembly | C 4 Cigarette Lighter
Cigarette Lighter Illumination |
| A18 A/C Room Temp. Sensor | C 5 Clock |
| A19 A/C Solar Sensor | C 7 Combination Meter |
| A20 A/C Thermistor | C 8 Combination Meter |
| A21 A/T Shift Lever Illumination
O/D Main SW | C 9 Combination SW |
| A22 Accelerator Position Sensor | C10 Combination SW |
| A23 Air Inlet Control Servo Motor | C11 Combination SW |
| A24 Air Mix Control Servo Motor | C12 Cruise Control Clutch SW |
| A25 Air Vent Mode Control Servo Motor | |
| A26 Airbag Sensor Assembly | D 3 DLC3 |
| A27 Airbag Sensor Assembly | |
| A28 Airbag Sensor Assembly | E 6 Engine and ECT ECU (A/T)
Engine ECU (M/T) |
| A29 Airbag Squib (Front Passenger Airbag Assembly) | E 7 Engine and ECT ECU (A/T)
Engine ECU (M/T) |
| A30 Airbag Squib (Front Passenger Airbag Assembly) | E 8 Engine and ECT ECU (A/T)
Engine ECU (M/T) |
| A31 Airbag Squib (Steering Wheel Pad) | E 9 Engine and ECT ECU (A/T)
Engine ECU (M/T) |
| A32 Automatic Light Control Sensor | E10 Engine and ECT ECU (A/T)
Engine ECU (M/T) |
| B 3 Blower Motor | |
| B 4 Blower Motor Controller | |
| B 5 Body ECU | |
| B 6 Body ECU | |
| B 7 Body ECU | |