



INSPECTION

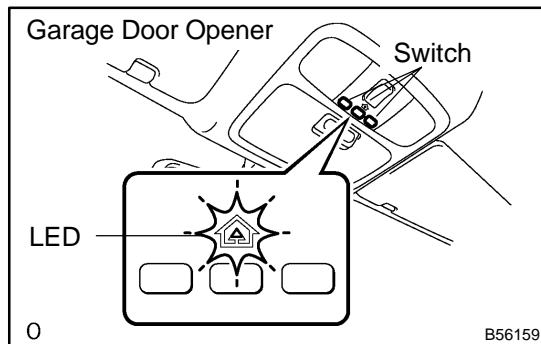

1. INSPECT GARAGE DOOR OPENER

- (a) Press the switch and check that each LED (red) lights up. Even if only one switch is found not to light up, replace it.

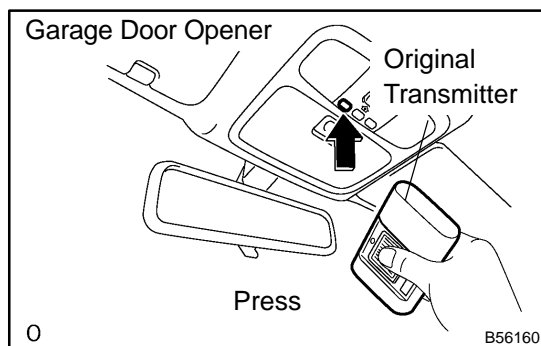

2. INSPECT GARAGE DOOR OPENER REGISTRATION AND TRANSMITTING


HINT:

Use the home link tester made by KENT MORE for this test. As it is necessary to register the transmitter code of the home link tester, erase the customer's code. When the inspection completes, please register the customer's code again.

- (a) Register the transmitter code of the home link tester for inspection (See page 69-5 for further details).

HINT:

If the transmitter code can not be registered, replace the garage door opener.

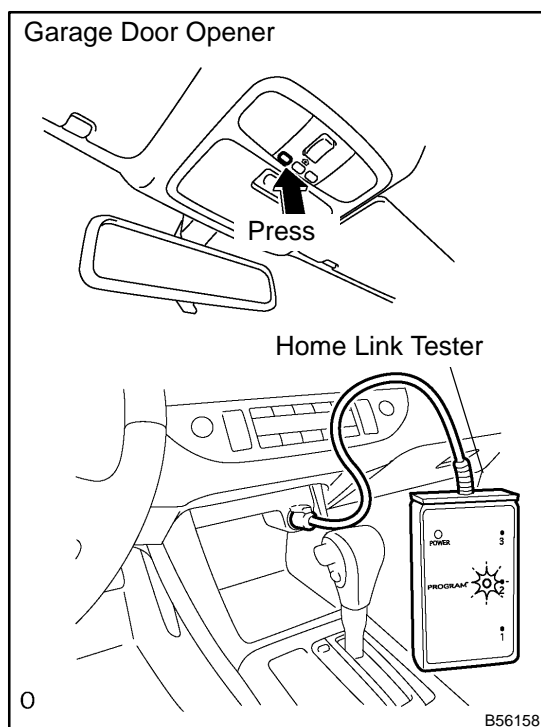

- (b) Press the switch in which an inspection code has been registered and check that the LED (green) of the home link tester lights up.

HINT:

If the LED (green) does not light up, replace the garage door opener.