

CD CANNOT BE INSERTED/IS EJECTED RIGHT AFTER INSERTION/CANNOT BE PLAYED

INSPECTION PROCEDURE

1 CHECK IF A PROPER CD IS INSERTED

(a) Check that a proper CD is inserted.

- (1) Make sure that the CD is normal audio CD, and that there is no deformation, flaw, stain, burr and other defects on the CD.

Standard: Normal audio CD.

Reference:

- Translucent or different-shaped CD cannot be played.
- CD-ROM for personal computers (with music recorded in) and recorded CD -R may not be played.
- Playing an 8-cm CD does not require an adapter.

NG

CD FAULTY

OK

2 CHECK THAT A PROPER CD IS INSERTED

(a) Check that a proper CD is inserted.

- (1) Check whether or not the CD is inserted upside down.

Standard: Not upside down.

NG

SET DISC CORRECTLY

OK

3 REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with another and recheck.

- (1) Replace the faulty CD with the normal one to see if the same trouble occurs again.

Standard: malfunction disappear.

OK

CD FAULTY

NG

4 CHECK IF RADIO AUTO-SEARCH FUNCTIONS PROPERLY

(a) Check if the radio auto-search function properly.

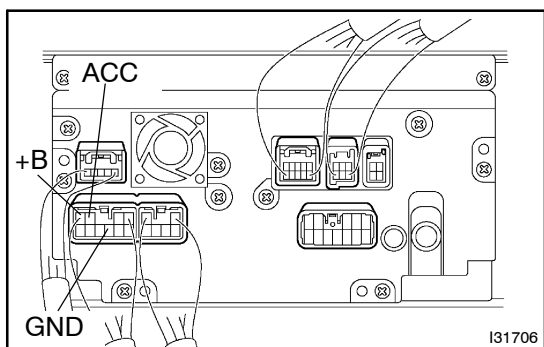
- (1) Perform the auto-research of the radio and check that the operation is normal.

Standard: malfunction disappear.

OK

REPLACE RADIO RECEIVER ASSY

NG

5 INSPECT RADIO RECEIVER ASSY(+B, ACC, GND)

- (a) Remove the radio receiver assy with connectors with still connected.
- (b) Check voltage.
 - (1) Measure voltage between terminals +B, ACC and GND of radio receiver assy at each conditions, as shown in the chart.

Standard:

Terminal	Condition	Voltage (v)
+B ⇄ GND	Constant	10 - 14 V
ACC ⇄ GND	Turn ignition switch ACC	10 - 14 V

- (c) Check continuity.
 - (1) Check that the continuity exists between terminal GND of radio receiver assy and body ground.

Standard: Continuity exists.**OK****REPLACE RADIO RECEIVER ASSY****NG****REPAIR OR REPLACE HARNESS OR CONNECTOR**