


FLOOR SHIFT SHIFT LEVER ASSY REPLACEMENT

4105A-01

1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY
2. REMOVE RR CONSOLE BOX
3. REMOVE CONSOLE BOX FRONT
(See page 71-10)
4. REMOVE AIR DUCT REAR NO.1
(See page 55-21)
5. REMOVE AIR DUCT REAR NO.2
(See page 55-21)
6. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT
 - (a) Remove the clip and separate the top of the select cable from the shift lever assy.
 - (b) Turn the lock and separate the select cable from the shift lever retainer.
7. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT
 - (a) Separate the top of the shift cable from the shift lever assy.
 - (b) Turn the lock and separate the shift cable from the shift lever retainer.
8. REMOVE FLOOR SHIFT SHIFT LEVER ASSY
 - (a) Remove the 4 bolts and shift lever assy.
9. INSTALL FLOOR SHIFT SHIFT LEVER ASSY
 - (a) Install the shift lever assy with 4 the bolts.
Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

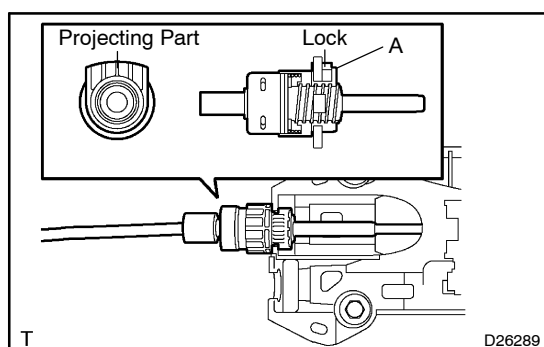

10. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT

- (a) Connect the shift cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the shift cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.


- (b) Install the top of the shift cable to the shift lever assy.


11. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

- (a) Connect the select cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the select cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.

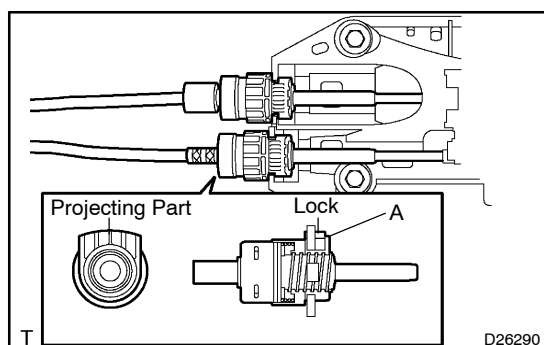

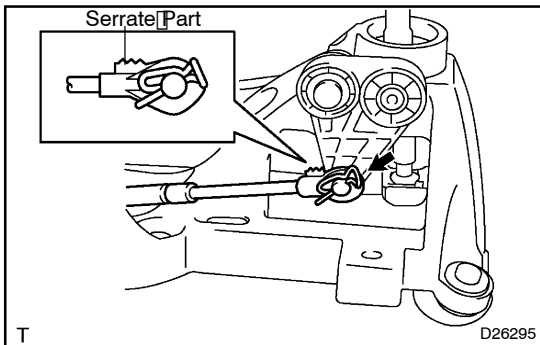

- (b) Connect the top of the select cable to the shift lever assy and install the clip.

NOTICE:

- The serrate part of the select cable point should face upward when the select cable point is connected.
- the clip should be inserted to the direction shown in the illustration.

12. INSTALL AIR DUCT REAR NO.2
(See page 55-21)
13. INSTALL AIR DUCT REAR NO.1
(See page 55-21)
14. REMOVE CONSOLE BOX FRONT
(See page 71-10)
15. REMOVE RR CONSOLE BOX
16. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY