


RADIATOR SUPPORT UPPER BRACE (ASSY) REPLACEMENT

1. REMOVE RADIATOR UPPER SUPPORT ([See page BP-1](#))
2. REMOVE RADIATOR SUPPORT UPPER BRACE

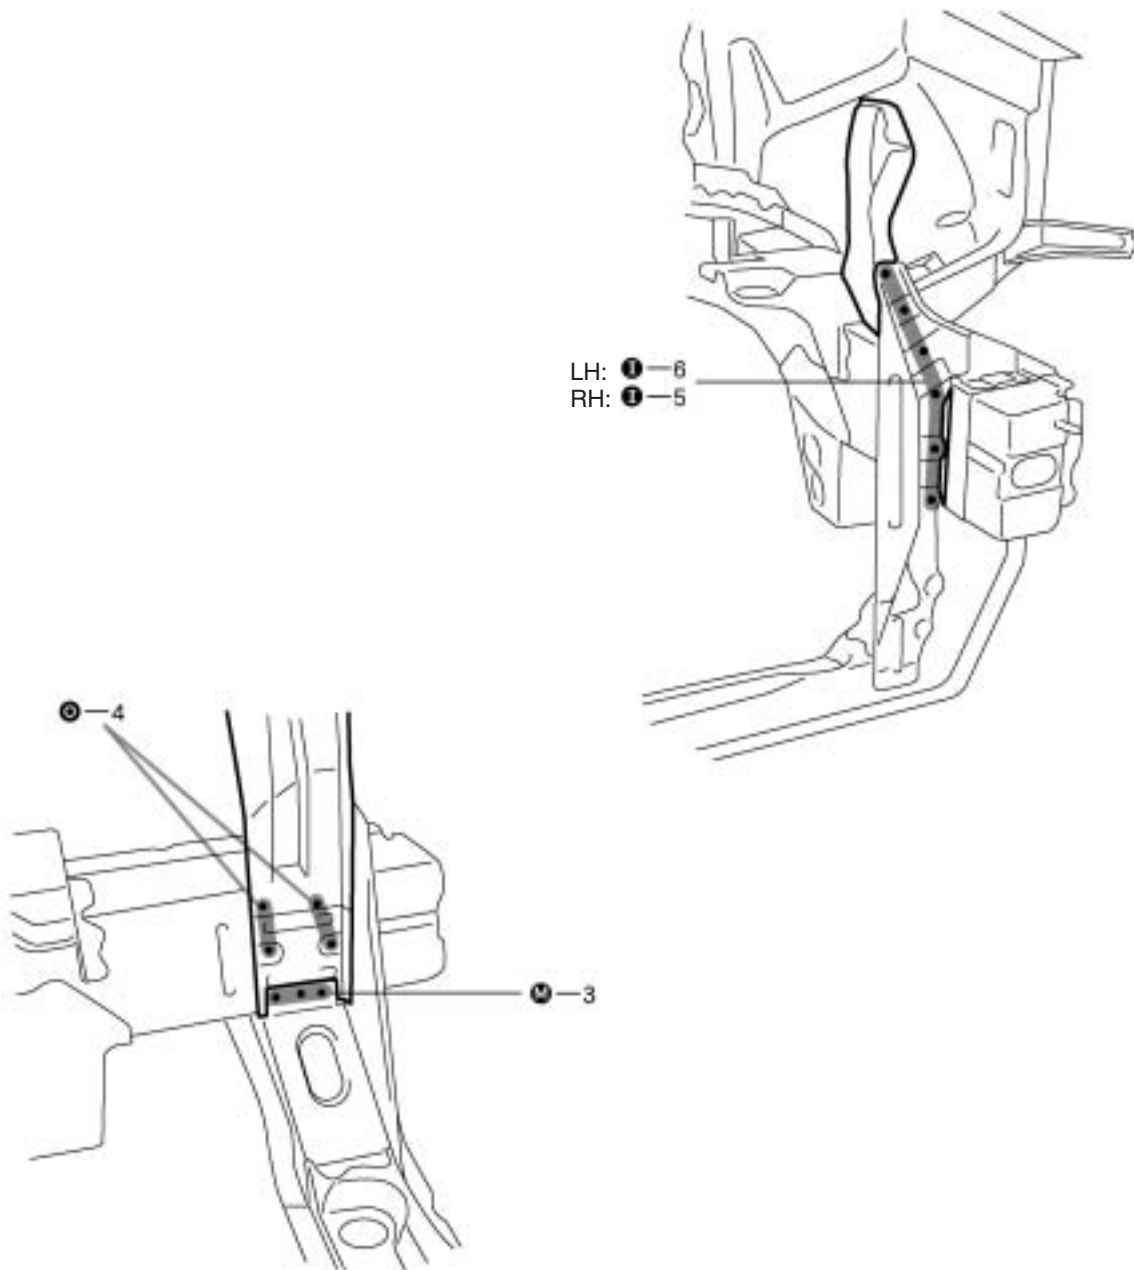


3. INSTALL RADIATOR SUPPORT UPPER BRACE

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

First install the radiator upper support and radiator upper center support.

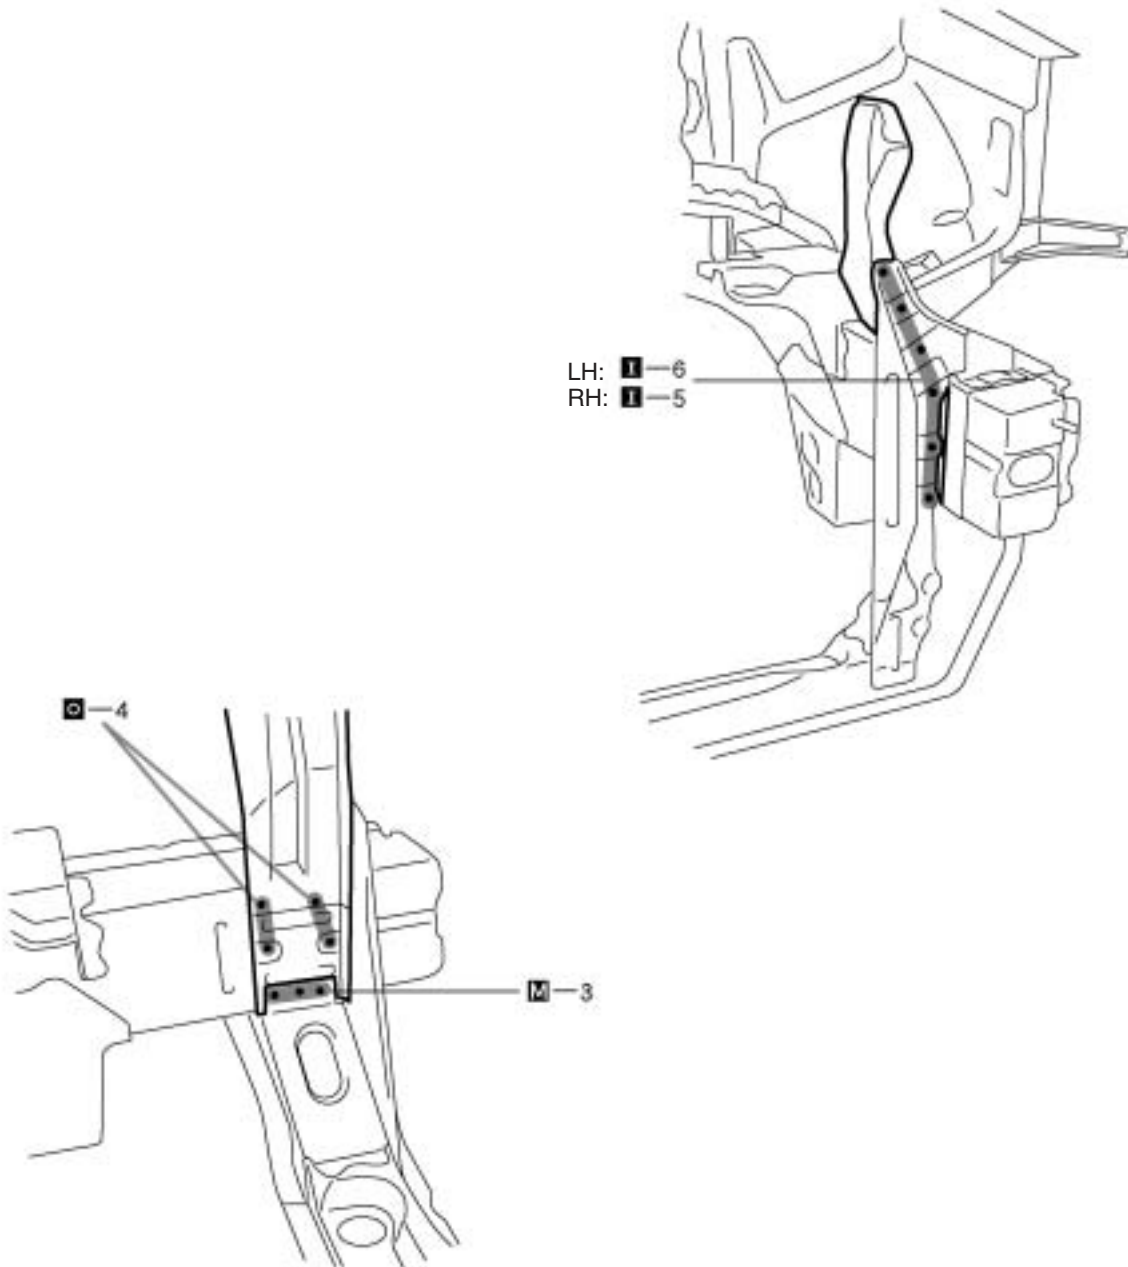

F12904A

4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-100)**5. INSTALL RADIATOR UPPER SUPPORT (See page BP-1)****6. APPLYING ANTI-RUST AGENT**

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.