


FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT REPLACEMENT


400GG-01

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY
(See page 71-10)
2. REMOVE AIR CONDITIONING RADIATOR ASSY
(See page 55-21)
3. REMOVE AIR BAG SENSOR ASSY CENTER
(See page 60-54)
4. REMOVE BATTERY
5. REMOVE AIR CLEANER ASSY
6. REMOVE AIR CLEANER HOSE NO.1
7. REMOVE INTAKE AIR RESONATOR SUB-ASSY

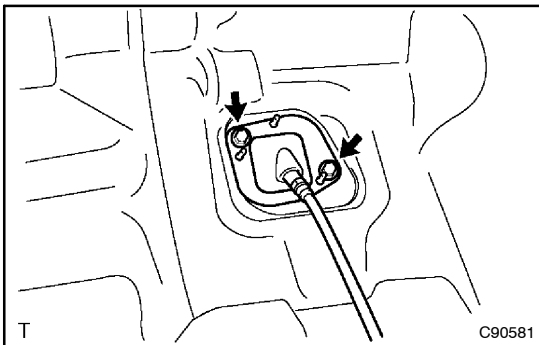


8. DISCONNECT SHIFT CABLE GROMMET RETAINER NO.2

- (a) Remove the 2 bolts and disconnect shift cable grommet retainer No.2.

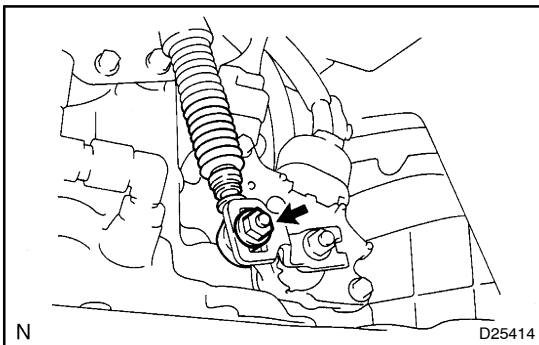


9. REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


- (a) Remove the nut from the control shaft lever.
- (b) Disconnect the control cable from the control shaft lever.

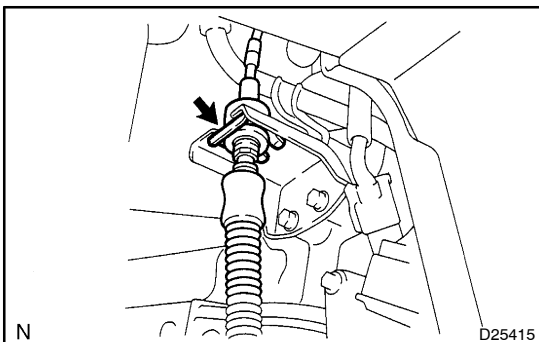


- (c) Remove the clip and disconnect the control cable from the control cable bracket.

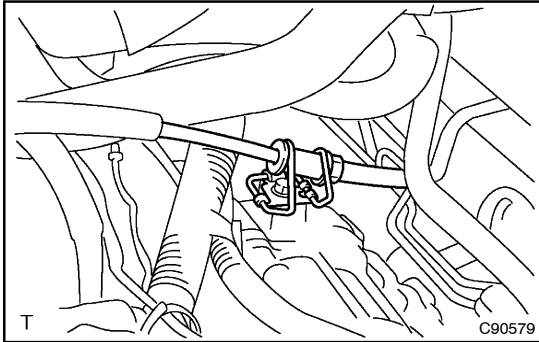

- (d) Disconnect the control cable from the control cable clamp.

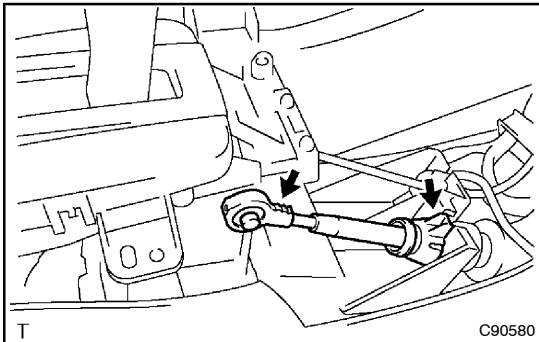

- (e) Disconnect the floor shift cable from the transmission floor shift assy.
(f) Pull out the control cable from the body.
(g) Remove the shift cable grommet retainer No. 2.


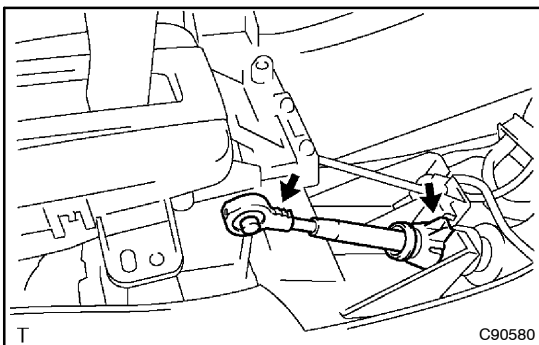


10. INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


- (a) Put in the control cable to the body.
(b) Install the shift cable grommet retainer No.2 to the floor shift cable.
(c) Install the floor shift cable as shown in the illustration.

HINT:


- Install it with the uneven surface facing to up.
 - Fit the claws securely.
- (d) Connect the control cable to the control cable clamp.

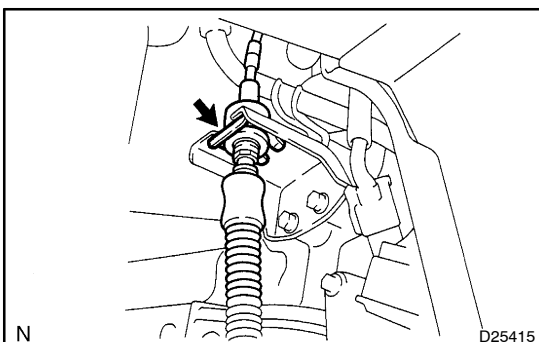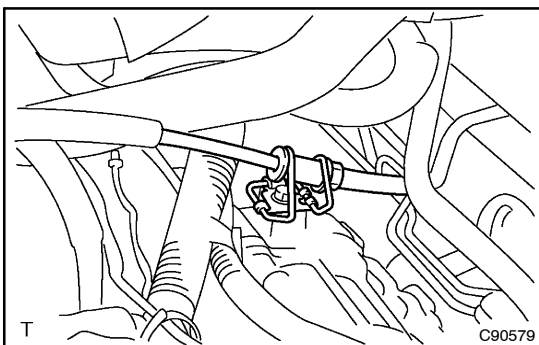

- (e) Install the control cable and a new clip to the bracket.

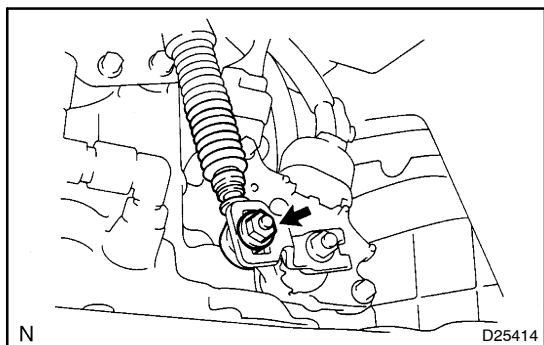

- (f) Temporarily install the control cable to the control shaft lever with nuts.

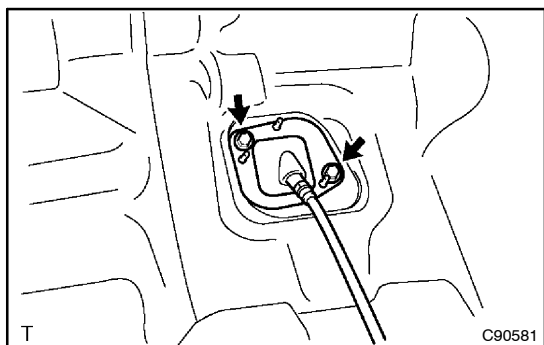

11. INSTALL SHIFT CABLE GROMMET RETAINER NO.2

- (a) Install the shift cable grommet retainer No.2 with the 2 bolts.

Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

12. INSTALL AIR BAG SENSOR ASSY CENTER

(See page 60-54)

13. INSTALL AIR CONDITIONING RADIATOR ASSY

14. ADJUST SHIFT LEVER POSITION (See page 40-54)

15. INSPECT SHIFT LEVER POSITION (See page 40-54)

16. INSTALL INTAKE AIR RESONATOR SUB-ASSY

17. INSTALL AIR CLEANER HOSE NO.1

18. INSTALL AIR CLEANER ASSY

19. INSTALL BATTERY