


# YAWRATE SENSOR REPLACEMENT

320DR-01

## NOTICE:


Do not separate the sensor from the bracket.

1. REMOVE CONSOLE PANEL UPPER REAR  
(See page 71-10)
2. REMOVE RR CONSOLE BOX (See page 71-10)

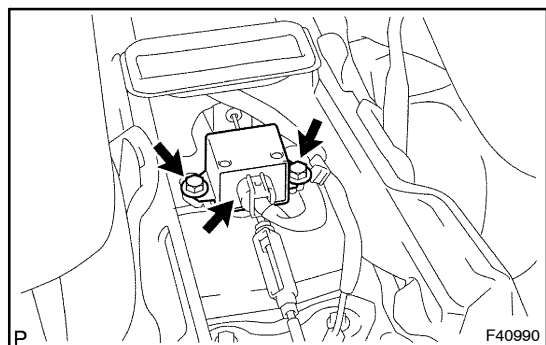

## 3. REMOVE YAWRATE SENSOR

- (a) Disconnect the yawrate sensor connector.
- (b) Remove the 2 bolts and yawrate sensor.

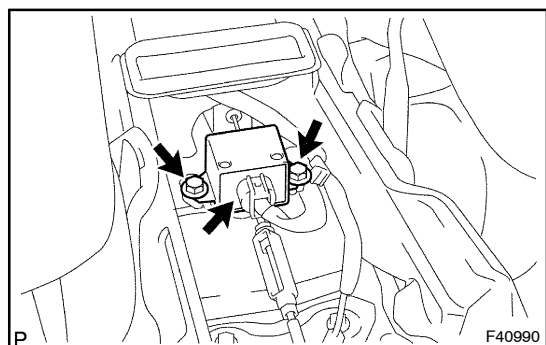

## 4. INSTALL YAWRATE SENSOR

- (a) Install the yawrate sensor with the 2 bolts.  
**Torque: 12.5 N·m (127 kgf·cm, 9 ft·lbf)**
- (b) Connect the yawrate sensor connector.

5. INSTALL RR CONSOLE BOX (See page 71-10)
6. INSTALL CONSOLE PANEL UPPER REAR  
(See page 71-10)
7. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (See page 05-511)
8. PERFORM DECELERATION SENSOR ZERO POINT CALIBRATION (See page 05-511)