


Connector Joining Wire Harness and Wire Harness

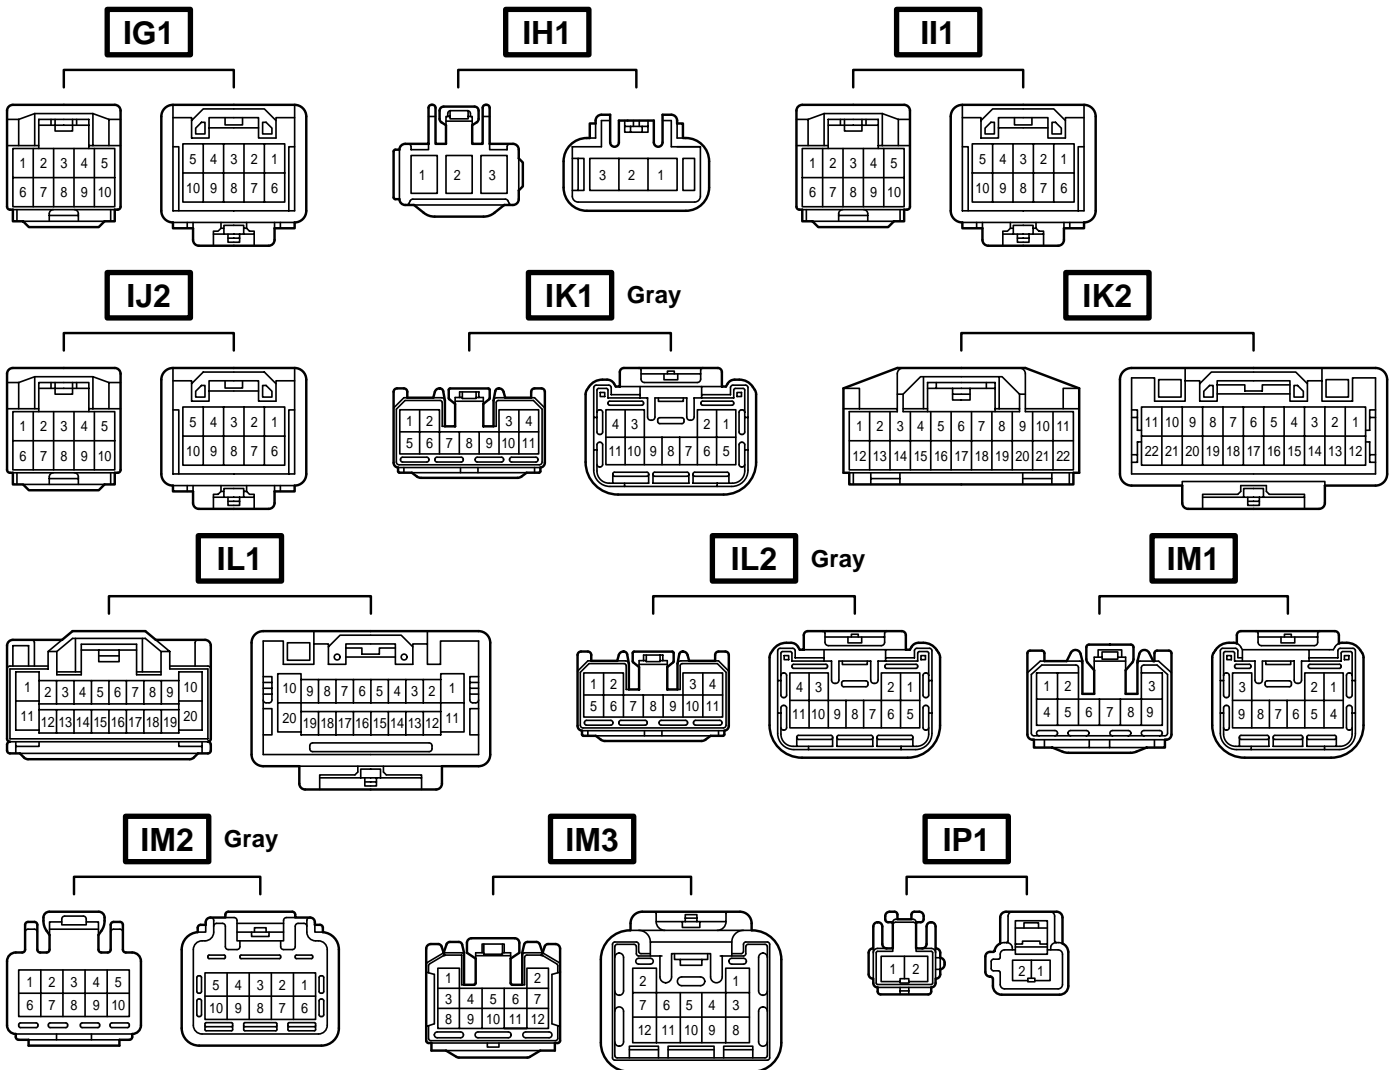

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Engine Room Main Wire (Instrument Panel Brace LH)
IH1	Instrument Panel Wire and Instrument Panel No.3 Wire (Behind the Glove Box)
II1	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IJ2	Instrument Panel Wire and Cowl No.2 Wire (Behind the Glove Box)
IK1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IK2	
IL1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	
IM1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2	
IM3	
IP1	Engine Room Main Wire and Cowl No.3 Wire (Instrument Panel Brace LH)