


## REPLACEMENT

1. □ REMOVE FRONT SEAT ASSEMBLY RH (See page 72-14)
2. □ REMOVE FRONT SEAT ASSEMBLY LH (See page 72-14)
3. □ REMOVE REAR SEAT CUSHION ASSY (See page 72-21)
4. REMOVE REAR SIDE SEAT BACK ASSY RH  
(See page 72-21)
5. REMOVE REAR SIDE SEAT BACK ASSY LH  
(See page 72-21)
6. □ REMOVE REAR SEAT BACK ASSY (See page 72-21)
7. REMOVE CONSOLE PANEL UPPER REAR  
(See page 71-10)
8. □ REMOVE RR CONSOLE BOX (See page 71-10)
9. REMOVE CONSOLE BOX ASSY REAR  
(See page 71-10)
10. REMOVE CONSOLE PANEL UPPER  
(See page 71-10)
11. REMOVE CONSOLE BOX DUCT NO.1  
(See page 55-21)
12. REMOVE AIR DUCT REAR NO.1  
(See page 55-21)
13. REMOVE AIR DUCT REAR NO.2  
(See page 55-21)
14. □ REMOVE FLOOR SHIFT ASSY (See page 40-46)

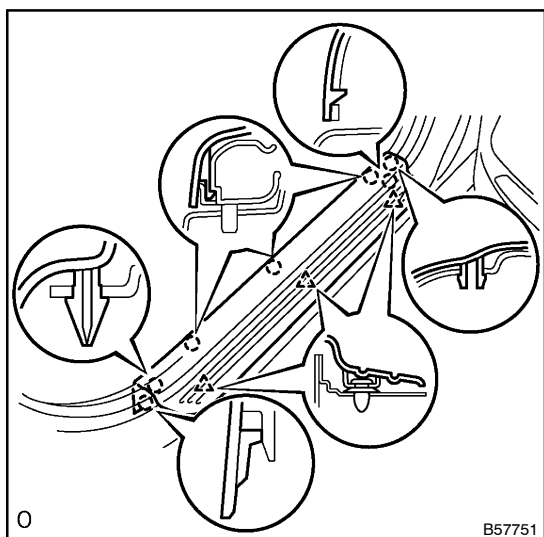

### 15. REMOVE FRONT DOOR SCUFF PLATE RH


- (a) Using a screwdriver, remove the front door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

### 16. REMOVE FRONT DOOR SCUFF PLATE LH

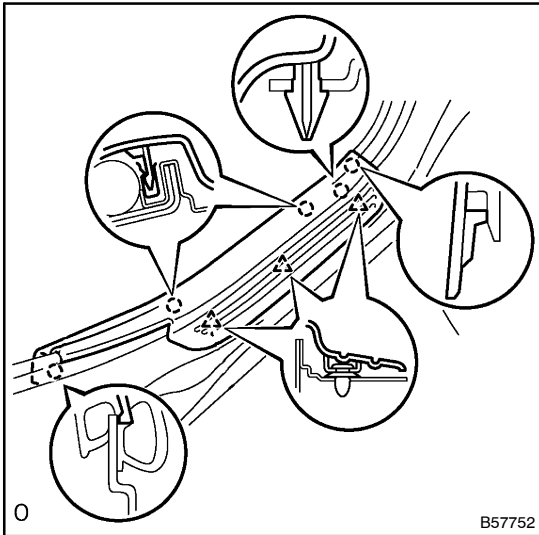
**17. REMOVE REAR DOOR SCUFF PLATE RH**

- (a) Using a screwdriver, remove the rear door scuff plate.


HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

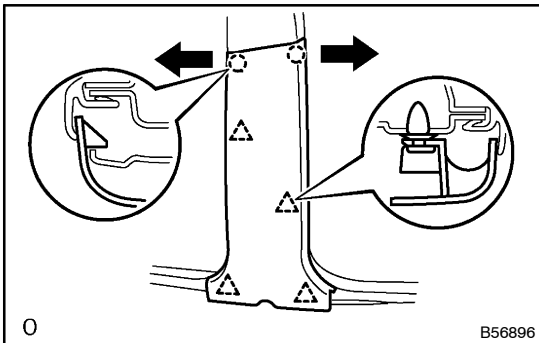**18. REMOVE REAR DOOR SCUFF PLATE LH****19. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH****20. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH****21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****22. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH****23. REMOVE CENTER PILLAR GARNISH LOWER RH**

- (a) Pull the center pillar lower garnish upward to remove it.  
 (b) Employ the same manner described above to the other side.

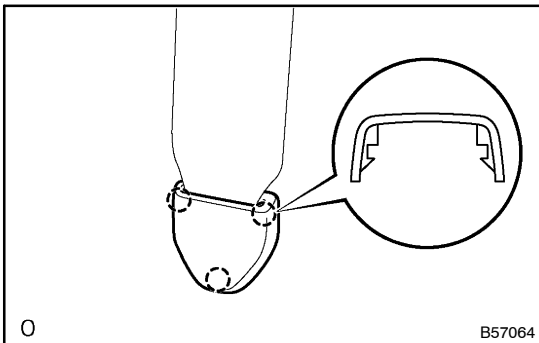
**24. REMOVE CENTER PILLAR GARNISH LOWER LH****25. REMOVE CENTER PILLAR GARNISH UPPER RH**

- (a) Using a screwdriver, remove the lap belt outer anchor cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and front seat outer belt floor anchor.

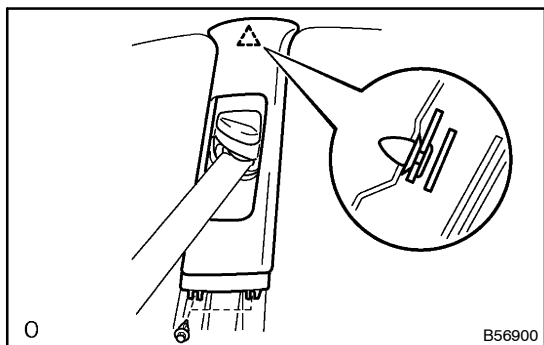


- (c) Remove the 2 clips
- (d) Using a screwdriver, remove the center pillar upper garnish.

HINT:

Tape the screwdriver tip before use.

- (e) Employ the same manner described above to the other side.

## 26. REMOVE CENTER PILLAR GARNISH UPPER LH

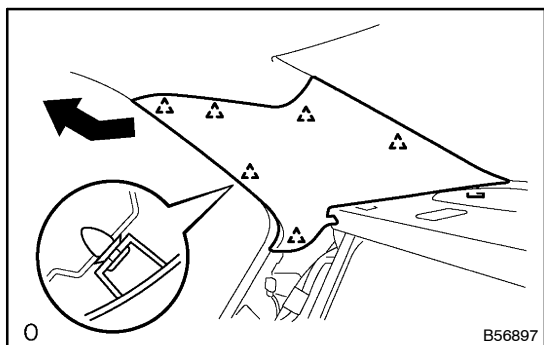

## 27. REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG)


- (a) Using a screwdriver, remove the roof side garnish inner.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

## 28. REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)

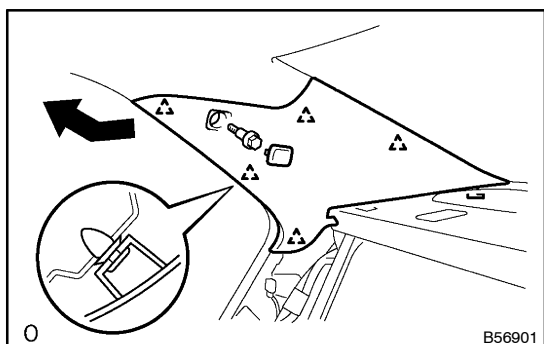

## 29. REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG)

- (a) Using a screwdriver, remove the roof side garnish inner cover.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the bolt.

- (c) Using a screwdriver, remove the roof side garnish inner.

HINT:

Tape the screwdriver tip before use.

## 30. REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)

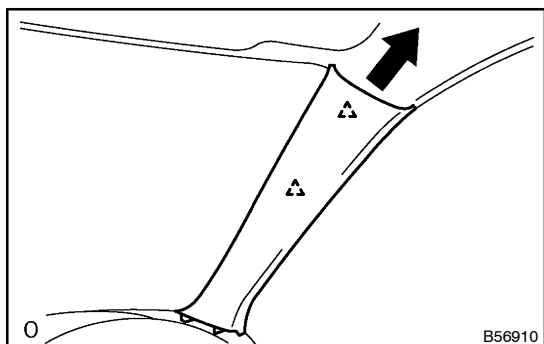

## 31. REMOVE FRONT PILLAR GARNISH RH(W/O CURTAIN SHIELD AIR BAG)


- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

### 32. REMOVE FRONT PILLAR GARNISH LH(W/O CURTAIN SHIELD AIR BAG)

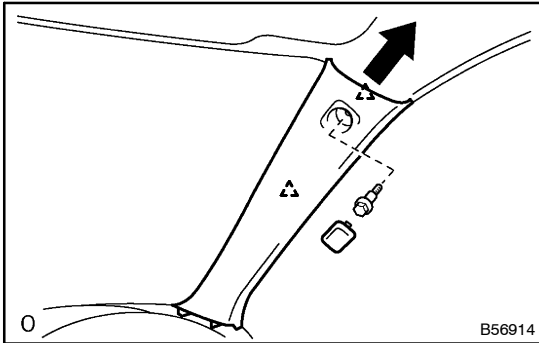

### 33. REMOVE FRONT PILLAR GARNISH RH(W/ CURTAIN SHIELD AIR BAG)

(a) Using a screwdriver, remove the front pillar garnish cover.

HINT:


Tape the screwdriver tip before use.

(b) Remove the bolt.

(c) Using a screwdriver, remove the front pillar garnish

HINT:

Tape the screwdriver tip before use.

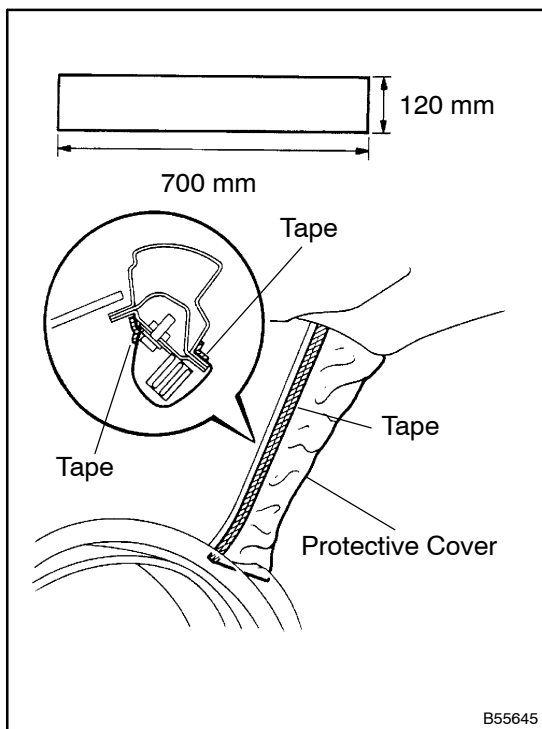

(d) Protect the curtain shield airbag.

**NOTICE:**

**Cover the curtain shield airbag with the protection cover as soon as the front pillar garnish is removed.**

(1) Cover the airbag with cloth or nylon of 700 mm (27.56 in.) × 120 mm (4.72 in.) and fix the ends of the cover with tape, as shown in the illustration.

(e) Employ the same manner described above to the other side.

### 34. REMOVE FRONT PILLAR GARNISH LH(W/ CURTAIN SHIELD AIR BAG)


### 35. REMOVE ASSIST GRIP SUB-ASSY


(a) Using a screwdriver, remove the assist grip cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

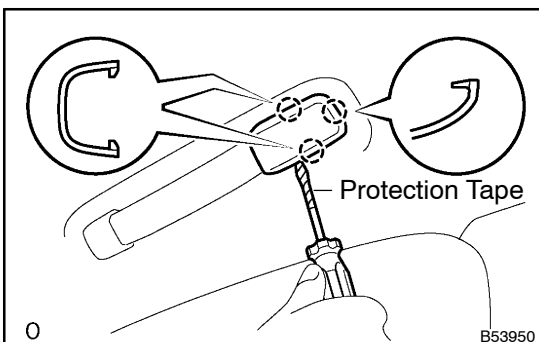

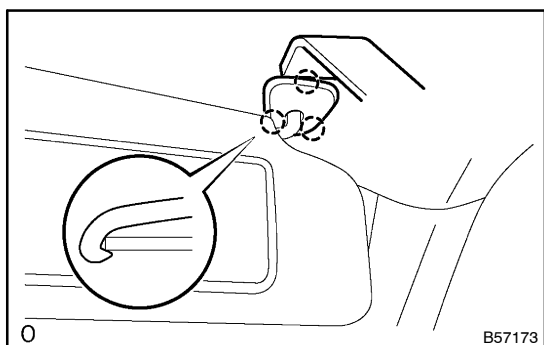
**36. REMOVE RH VISOR ASSY**

- (a) Using a moulding remover, remove the visor bracket cover.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 2 screws and assist grip.

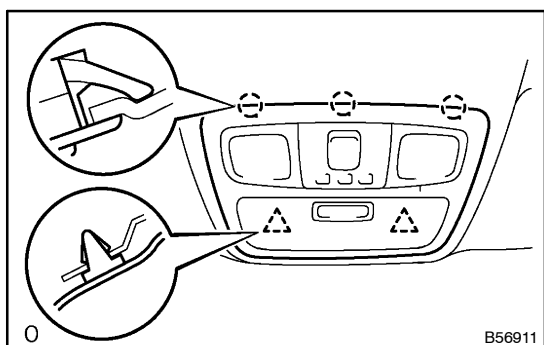**37. REMOVE LH VISOR ASSY****38. REMOVE ROOF CONSOLE BOX ASSY**


- (a) Using a screwdriver, remove the roof console box then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

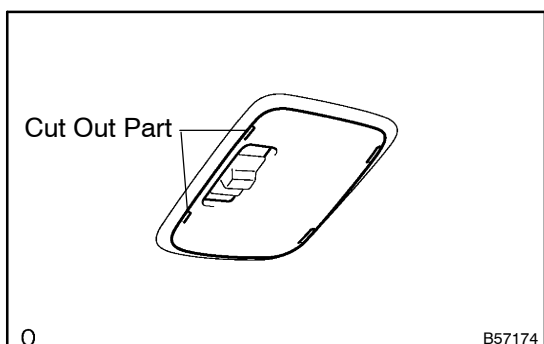**39. REMOVE ROOM LAMP ASSY NO.1**


- (a) Using a screwdriver, remove the lens.

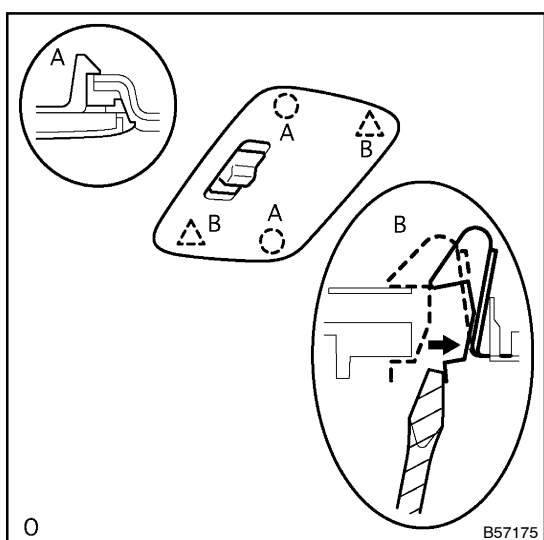


- (b) Using a screwdriver, remove the room lamp assembly No.1 then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

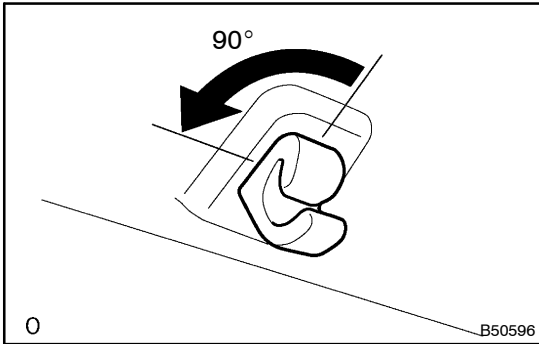**40. REMOVE VISOR HOLDER**

- (a) Remove the holder of the sun visor by turning it to the left.

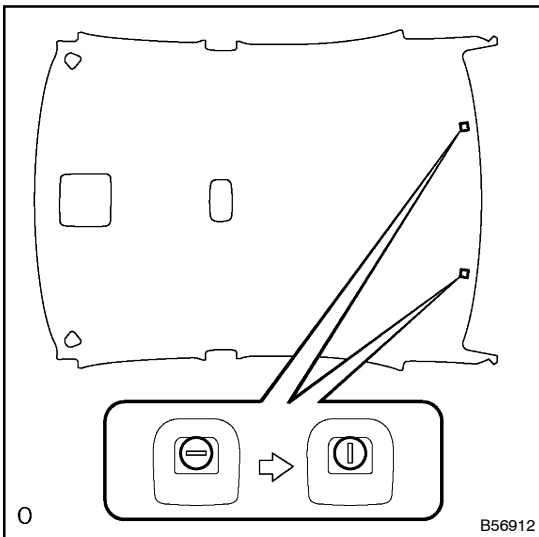
**41. REMOVE SUN ROOF OPENING TRIM MOULDING(W/ SLIDING ROOF)****42. REMOVE ROOF HEADLINING ASSY**

- (a) Remove the 2 sunshade trim holder.  
 (b) w/ Electro chromic inner mirror:  
 Remove the inner rear view mirror cover.  
 (c) Tear off the tape on the adhered part of the wire harness.

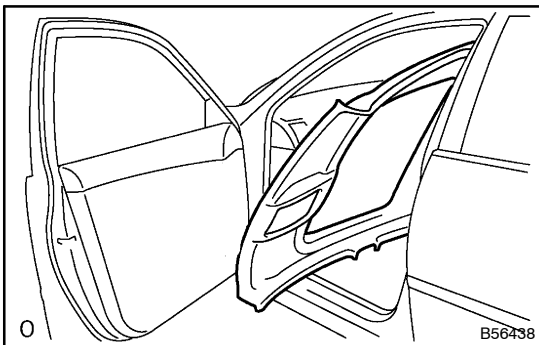


- (d) Remove the headlining assembly from the passenger's door.

w/ Sliding roof

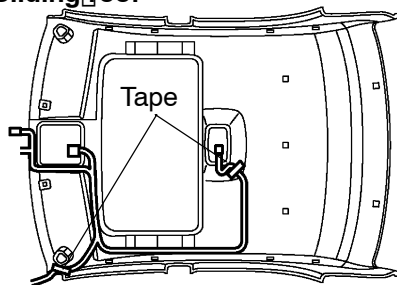

w/o Sliding roof

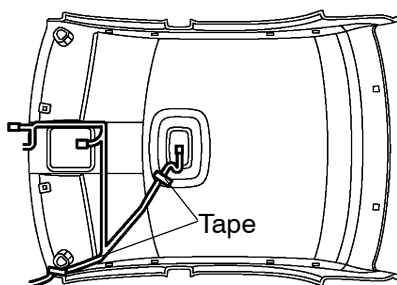

0

B56917

**43. INSTALL ROOF HEADLINING ASSY**

(a) Align the markings, then install the wire harness with tape.

HINT:

Be careful for dirt or foreign objects not to stick to the adhered part when peeling the double-stick tape.

(b) Attach the roof wire harness across the adhered part

**NOTICE:**

Roof wire harness should be attached securely.

**44. INSTALL FRONT SEAT ASSEMBLY LH (See page 72-14)**

**45. INSTALL FRONT SEAT ASSEMBLY RH (See page 72-14)**