

WIPER RUBBER LH

REPLACEMENT

6603M-02

1. REMOVE FR WIPER BLADE LH


- (a) Remove the FR wiper blade LH from the front wiper arm LH.

NOTICE:

Do not fold down the front wiper arm with the front wiper blade being removed from it.

2. REMOVE WIPER RUBBER LH

- (a) Remove the FR wiper rubber LH from the FR wiper blade LH.
(b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

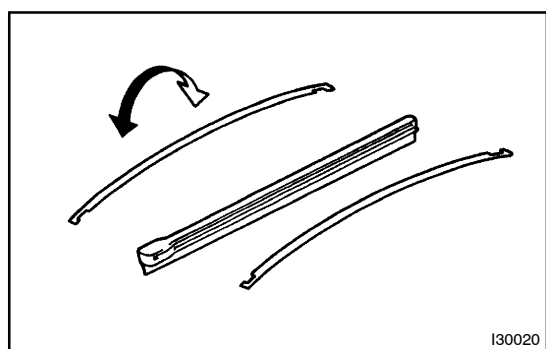


3. INSTALL WIPER RUBBER LH

- (a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

NOTICE:

Be careful to observe and keep direction of curvature for correct replacement.

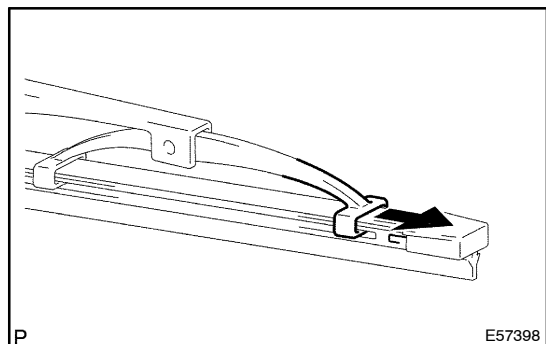

- (b) Install the wiper rubber LH in the way that the head part (Longer side) of the wiper rubber faces the arm axle side.

NOTICE:

- **Push in the front wiper blade into the grooves of the wiper rubber to engage them completely.**
- **Put back the wiper arm of passenger side before driver side wiper arm is put back.**