


REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. **REMOVE ROOF HEADLINING ASSY (See page 76-22)**
2. **REMOVE ROOF SIDE RAIL GARNISH PAD RH (W/O CURTAIN SHIELD AIR BAG)**
 - (a) Remove the 7 screws and roof side rail garnish pad.
 - (b) Use the same procedures described above on the other side.
3. **REMOVE ROOF SIDE RAIL GARNISH PAD LH (W/O CURTAIN SHIELD AIR BAG)**

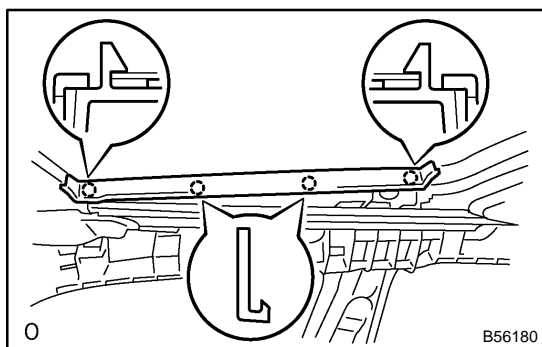

4. REMOVE SLIDING ROOF SIDE GARNISH RH


- (a) Using a screwdriver, remove the sliding roof side garnish.

HINT:

Tape the screwdriver tip before use.


- (b) Use the same procedures described above on the other side.

5. **REMOVE SLIDING ROOF SIDE GARNISH LH**
6. **REMOVE SLIDING ROOF GLASS SUB-ASSY**
 - (a) Using a torx wrench (T25), remove the 4 screws and sliding roof glass.
7. **REMOVE SLIDING ROOF WEATHERSTRIP**
8. **REMOVE SLIDING ROOF DRIVE GEAR SUB-ASSY**
 - (a) Remove the 2 bolts.
 - (b) Disconnect the clamp and then remove the sliding roof drive gear.
9. **REMOVE SLIDING ROOF HOUSING SUB-ASSY**
 - (a) Disconnect the 4 drain hoses from the housing.
 - (b) w/o curtain shield airbag:
Remove the 6 nuts and 4 bolts, then remove the housing as shown in the illustration.
 - (c) w/ curtain shield airbag:
Remove the 6 nuts and 8 bolts, then remove the housing as shown in the illustration.

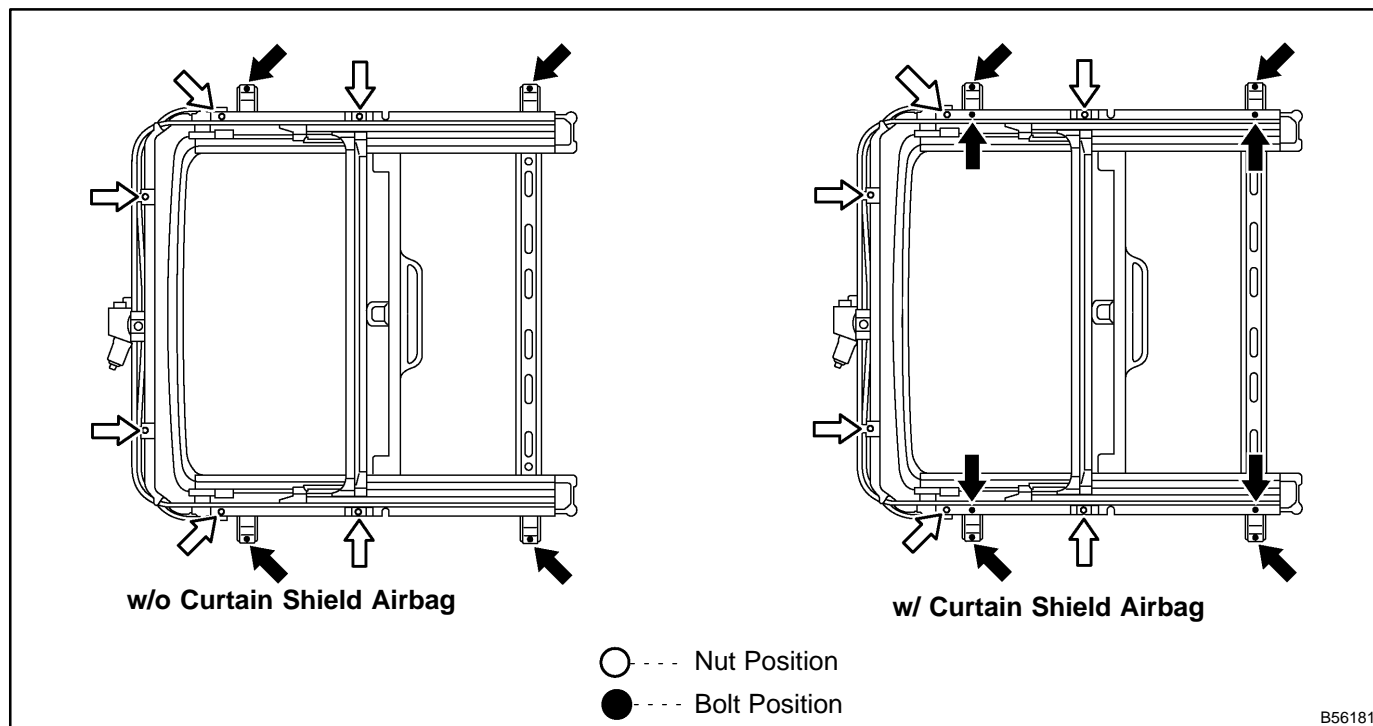

10. REMOVE SUNSHADE TRIM SUB-ASSY

- Remove the screw and stopper.
- Remove the sunshade trim.
- Use the same procedures described above on the other side.

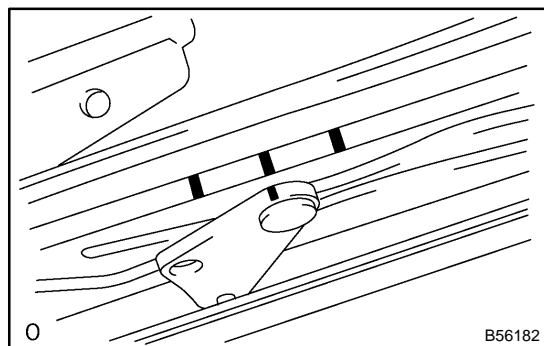


11. ADJUST FULLY CLOSED POSITION

- Using a screwdriver, slide the drive cable of the sliding roof to align the matchmarks.

HINT:

Tape the tip of the screwdriver before use.

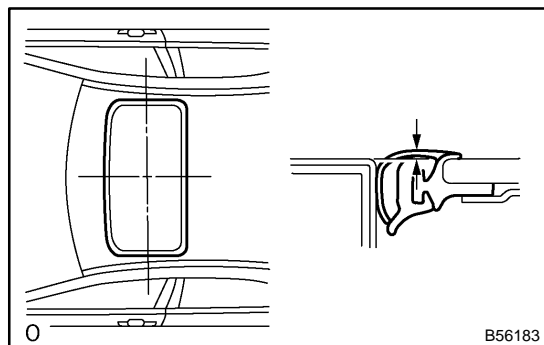


12. INSTALL SLIDING ROOF GLASS SUB-ASSY

- Check for a difference in level between the sliding roof (weatherstrip) and roof panel.

Corner of rear side:

0 ± 1.5 mm (0 ± 0.059 in.)

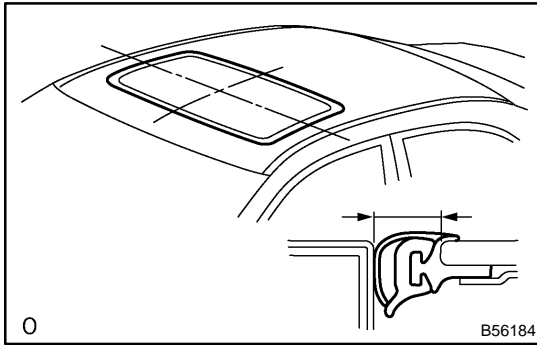

- (b) Check for a difference in level between the sliding roof (glass) and roof panel.

NOTICE:

The clearance should be thoroughly even.

- (c) Adjust the roof panel.
- (1) Using a torque driver T25, loosen a screw to adjust the sliding roof panel position. When the adjustment has done, tighten the screw there.

13. RESET THE SLIDING ROOF POSITION (See page 74-7)

14. INSPECT FOR LEAKS

- (a) Adjusting the sliding roof, check there is no water leak.
- (b) In case of water leak, readjust the sliding roof.