


PRESSING POWER SWITCH DOES NOT START SYSTEM


WIRING DIAGRAM

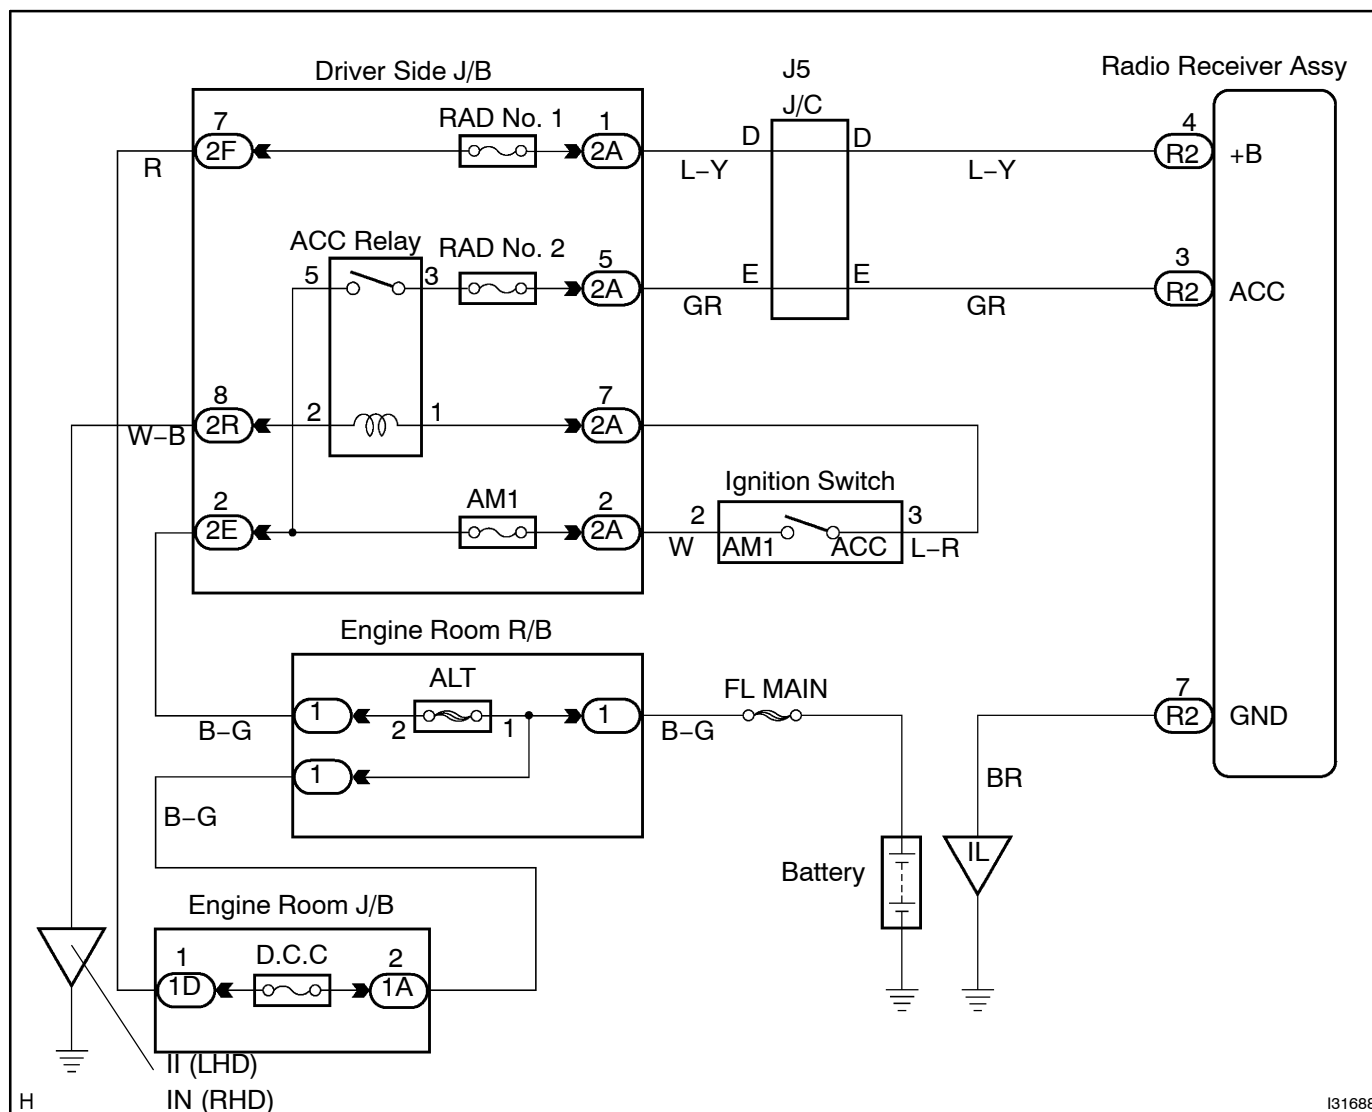

I31688

INSPECTION PROCEDURE

1 INSPECT RADIO RECEIVER ASSY(+B, ACC, GND)

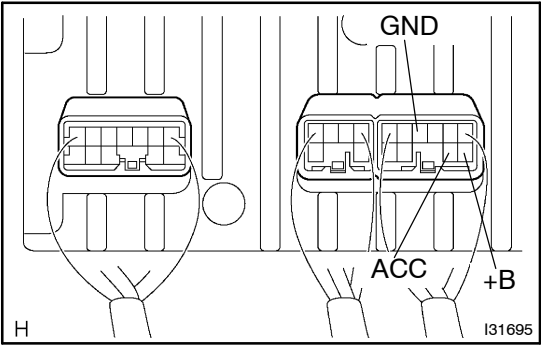

(a) Check that the continuity between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Constant	Continuity

(b) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
+B - GND	Constant	10 - 14 V
ACC - GND	Ignition switch ACC or ON	10 - 14 V

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE RADIO RECEIVER ASSY