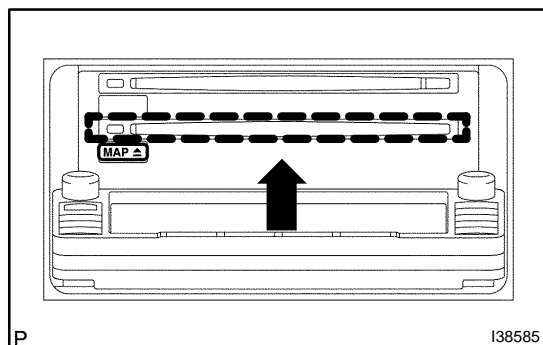
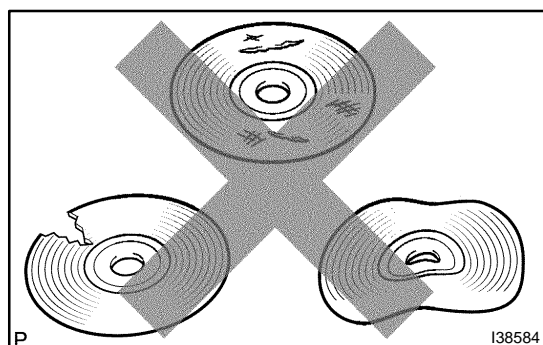


CURRENT POSITION DISPLAY DOES NOT APPEAR**INSPECTION PROCEDURE****1 CHECK RADIO AND NAVIGATION ASSY**

- (a) Check if a map disc is inserted in the map disc slot.
Standard: A map disc is inserted.

NG**INSERT THE MAP DISC IN THE "MAP" SIDE SLOT****OK****2 CHECK THE MAP DISC**

- (a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG**REPLACE THE MAP DISC****OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1914)**