


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1MZ-FE]

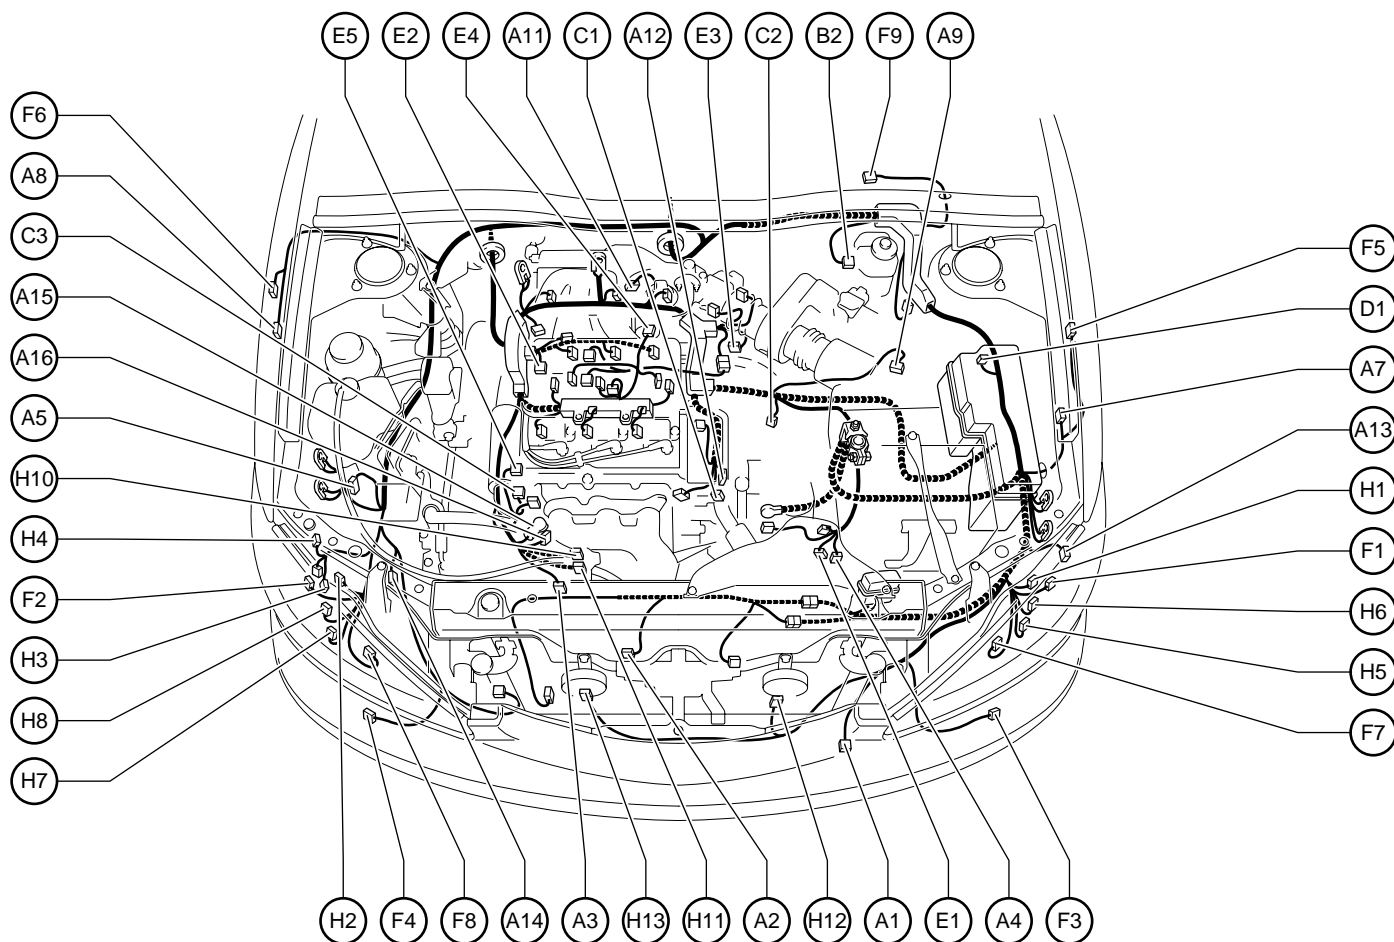

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Lock Sensor
- A/C Magnetic Clutch
- A 4 A/T Indicator Light SW
- Back-Up Light SW
- Neutral Start SW
- A 5 ABS & BA & TRC & VSC Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Air Flow Meter
- A 11 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 12 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 13 Airbag Sensor Front LH
- A 14 Airbag Sensor Front RH
- A 15 Alternator
- A 16 Alternator

- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Counter Gear Speed Sensor
- C 3 Crankshaft Position Sensor

- D 1 Diode (A/C No.1)

- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 EGR Gas Temp. Sensor
- E 4 EGR Valve Position Sensor
- E 5 Engine Oil Level Sensor

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Wiper Motor

- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Motor
- H 4 Headlight Cleaner Relay
- H 5 Headlight LH (High)
- H 6 Headlight LH (Low)
- H 7 Headlight RH (High)
- H 8 Headlight RH (Low)
- H 10 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 11 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 12 Horn (High)
- H 13 Horn (Low)