



# SCREEN FLICKER OR COLOR DISTORTION

## INSPECTION PROCEDURE


### 1 CHECK DISPLAY SETTING

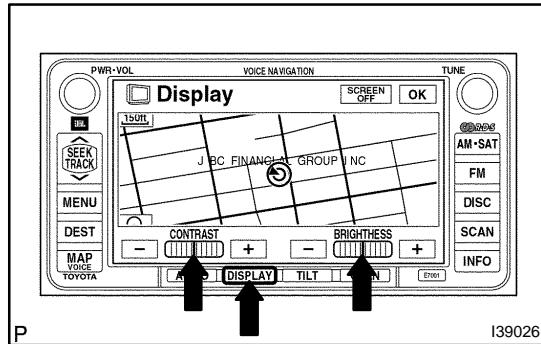

- Enter the display adjustment screen by pressing the "DISPLAY" switch.
- Reset display settings (contrast, brightness) and check if the screen appears normal.

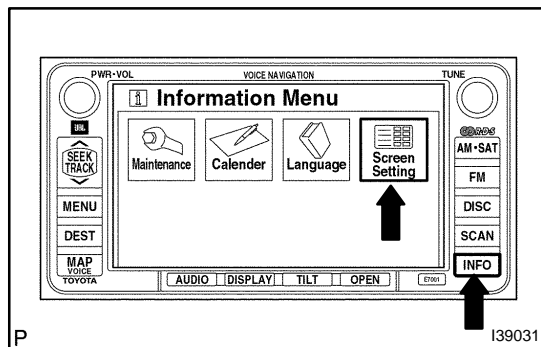

- Press the "INFO" switch and then the "Screen Setting" switch.

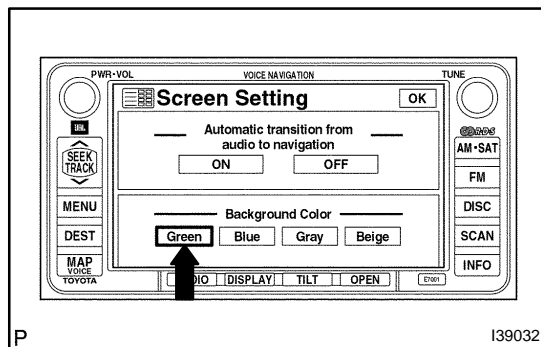

- Set the "Background Color" to "Green" (initial setting) and check if it is normal.  
**Standard: Returns to normal.**

OK

END

NG

### 2 CHECK CABIN

- Check if the cabin temperature is  $-20^{\circ}\text{C}$  ( $-4.0^{\circ}\text{F}$ ) or less.  
**Standard: Cabin is warmer than  $-20^{\circ}\text{C}$  ( $-4.0^{\circ}\text{F}$ ).**


NG

HEAT THE CABIN AND RECHECK THE TEMPERATURE

OK

### 3 DISPLAY CHECK MODE(COLOR BAR CHECK MODE)

(a) Enter the "Display Check" mode (Color Bar Check Mode) (see page 05-1921).

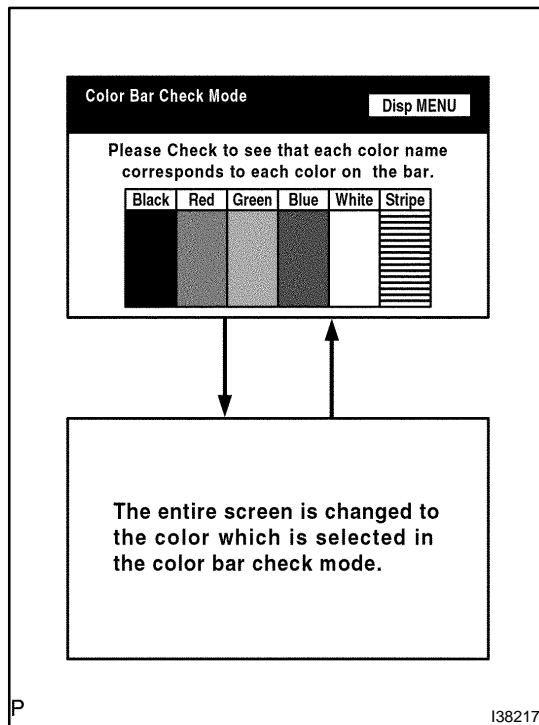

(b) Check color bars match the displayed names.

**Standard: Color bars match the displayed names.**


NG

**REPLACE RADIO AND NAVIGATION ASSY  
(SEE PAGE 67-5)**

OK

### 4 NAVIGATION CHECK MODE(NAVI COLOR BAR CHECK)

(a) Enter the "Navigation Check" mode (NAVI Color Bar Check) (see page 05-1927).

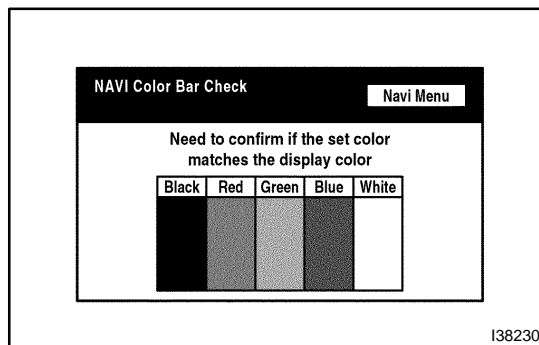

(b) Check that color bars match the displayed names.

**Standard: Color bars match the displayed names.**

NG

**REPLACE RADIO AND NAVIGATION ASSY  
(SEE PAGE 67-5)**

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1914)**