


## Connector Joining Wire Harness and Wire Harness

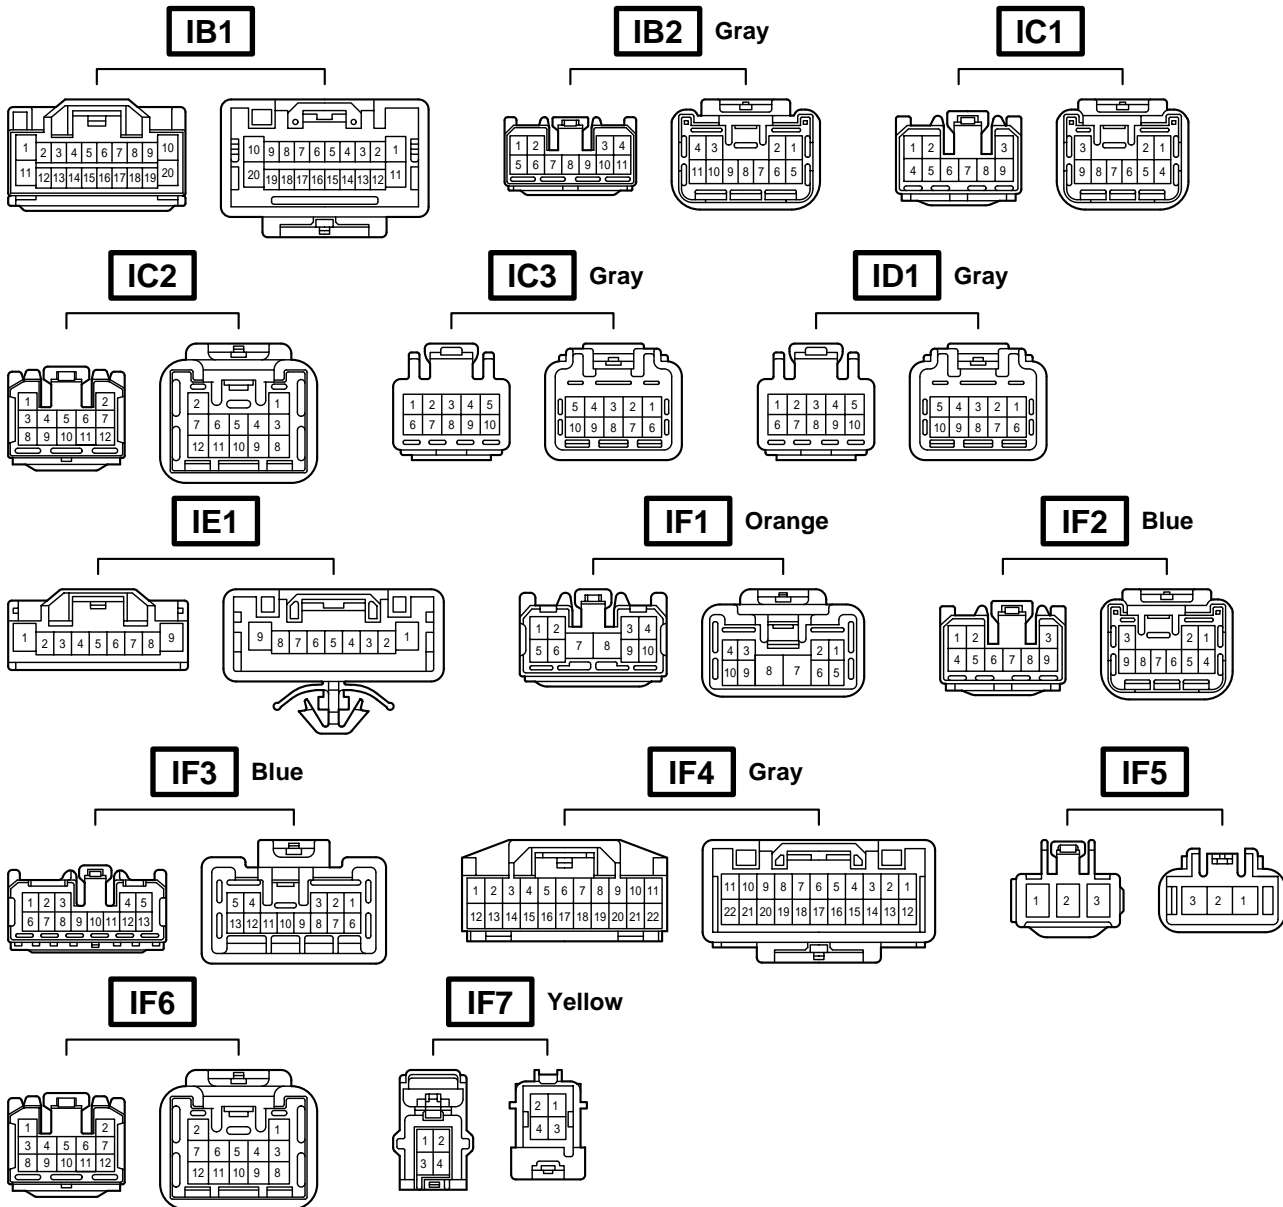

Code	Joining Wire Harness and Wire Harness (Connector Location)
IB1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2	
IC1	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IC2	
IC3	
ID1	Engine Room Main Wire and Floor Wire (Left Side of Driver Side J/B)
IE1	Instrument Panel Wire and Roof Wire (Inside of Front Right Pillar)
IF1	Engine Room Main Wire and Instrument Panel Wire (Left Side of Steering Column Tube)
IF2	
IF3	
IF4	
IF5	
IF6	
IF7	