


## Position of Parts in Engine Compartment

[RHD : 1MZ-FE]

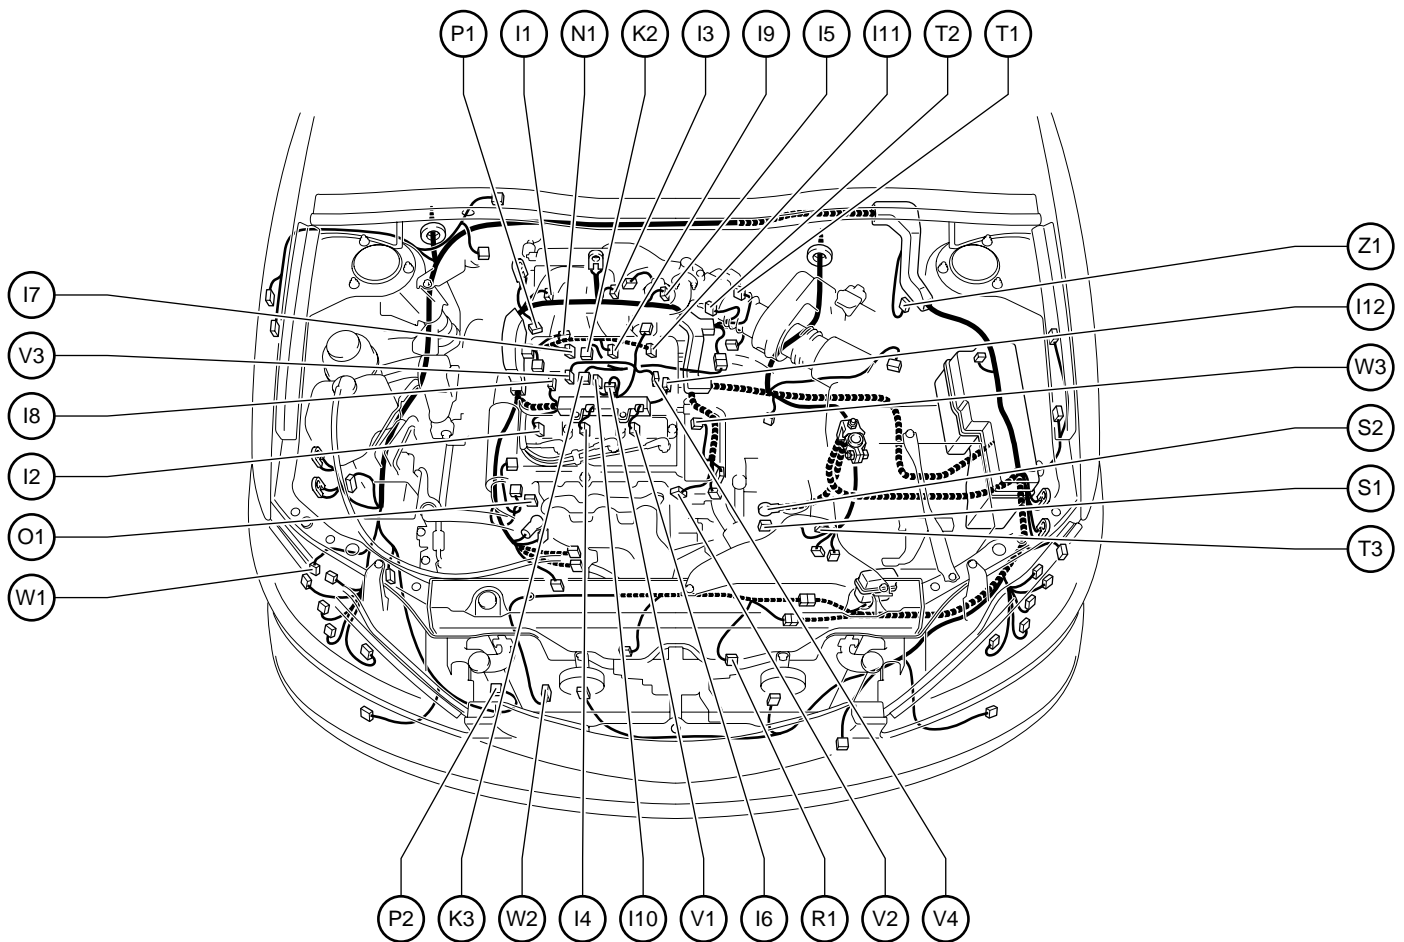

- I 1 Ignition Coil and Igniter No.1
- I 2 Ignition Coil and Igniter No.2
- I 3 Ignition Coil and Igniter No.3
- I 4 Ignition Coil and Igniter No.4
- I 5 Ignition Coil and Igniter No.5
- I 6 Ignition Coil and Igniter No.6
- I 7 Injector No.1
- I 8 Injector No.2
- I 9 Injector No.3
- I 10 Injector No.4
- I 11 Injector No.5
- I 12 Injector No.6

- K 2 Knock Sensor (Bank 1)
- K 3 Knock Sensor (Bank 2)

- N 1 Noise Filter (Ignition)

- O 1 Oil Pressure Sensor

- P 1 Power Steering Oil Pressure SW
- P 2 Pressure SW

- R 1 Radiator Fan Motor

- S 1 Starter
- S 2 Starter

- T 1 Throttle Control Motor
- T 2 Throttle Position Sensor
- T 3 Turbine Speed Sensor

- V 1 VSV (ACIS)
- V 2 VSV (AICV)
- V 3 VSV (EGR)
- V 4 VSV (EVAP)

- W 1 Washer Motor
- W 2 Water Temp. SW No.1
- W 3 Water Temp. SW No.2

- Z 1 Option Connector (Engine Hood Courtesy SW)