


PARKING BRAKE CABLE ASSY NO.4 (From August, 2002) REPLACEMENT

3304Y-03

HINT:


COMPONENTS: See page 33-3

1. REMOVE CONSOLE PANEL UPPER REAR(See page 71-16)
2. REMOVE CONSOLE BOX CARPET(See page 71-16)
3. REMOVE RR CONSOLE BOX(See page 71-16)
4. REMOVE CONSOLE BOX MOUNTING BRACKET NO.2
 - (a) Remove the 2 bolts and console box mounting bracket No.2.
5. REMOVE YAWRATE SENSOR (W/ VSC)(See page 32-71)

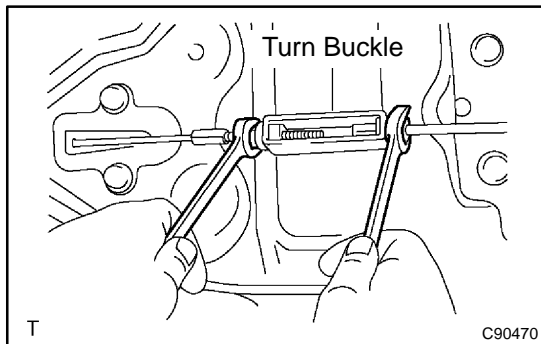


6. REMOVE PARKING BRAKE CABLE ASSY NO.4

- (a) Loosen the turn buckle, disconnect the parking brake cable assy No.4 from the parking brake cable assy No.1.
- (b) Disconnect the parking brake cable assy No.4 from the parking brake equalizer.

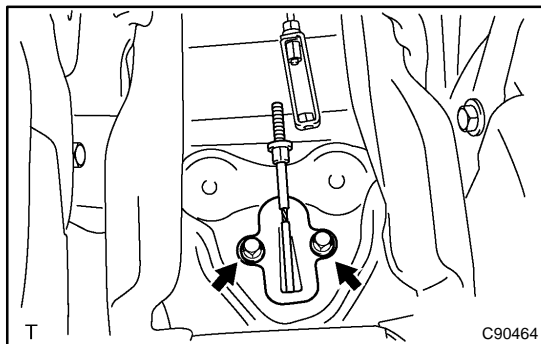


- (c) Remove the 2 bolts and parking brake cable assy No.4.

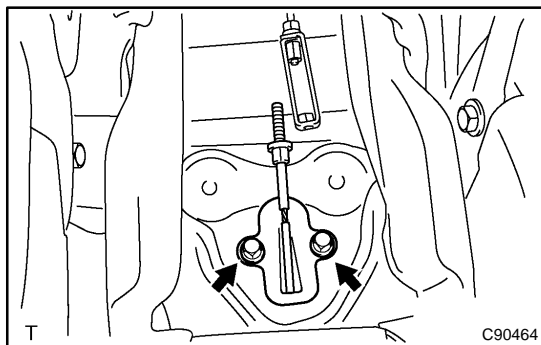

7. INSTALL PARKING BRAKE CABLE ASSY NO.4

- (a) Install the parking brake cable No.4 with the 2 bolts.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)
- (b) Connect the parking brake cable assy No.4 to the parking brake equalizer.

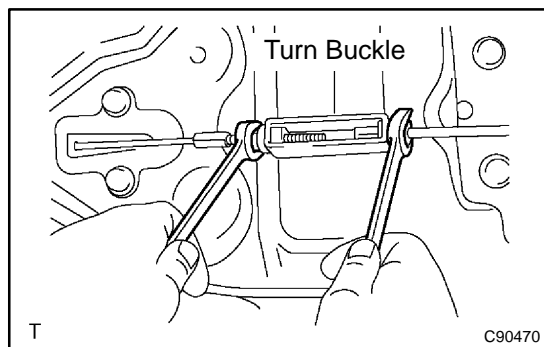

- (c) Tighten the turn buckle, connect the parking brake cable assy No.4 to the parking brake cable assy No.1.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

8. INSTALL YAWRATE SENSOR (W/ VSC)(See page 32-71)

9. INSTALL CONSOLE BOX MOUNTING BRACKET NO.2

- (a) Install the console box mounting bracket No.2 with the 2 bolts.

Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)

10. INSTALL RR CONSOLE BOX(See page 71-16)

11. INSTALL CONSOLE BOX CARPET(See page 71-16)

12. INSTALL CONSOLE PANEL UPPER REAR(See page 71-16)

13. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL(See page 33-2)

14. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (W/ VSC)(See page 05-987)