


ABS WARNING LIGHT CIRCUIT (REMAINS ON)

CIRCUIT DESCRIPTION

If the ECU detects trouble, it turns on the ABS warning light and cancels ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

WIRING DIAGRAM

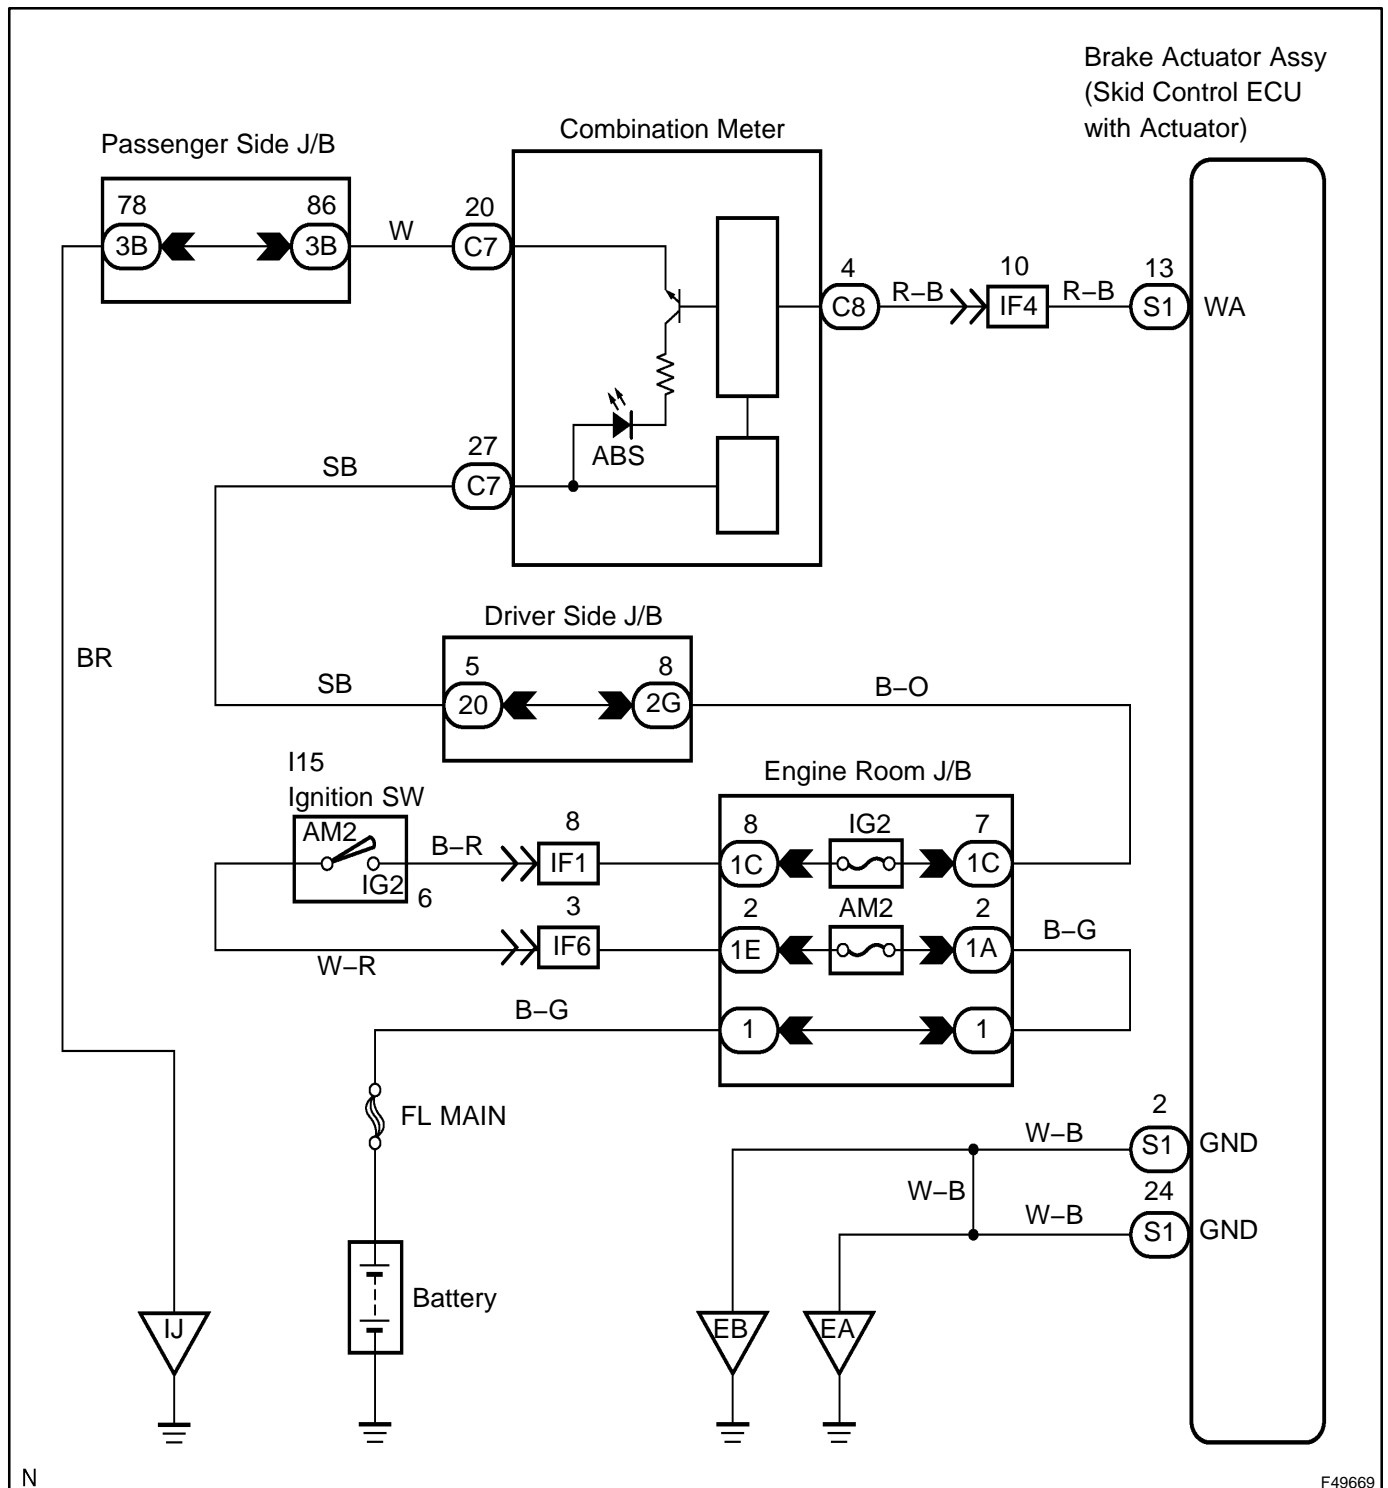

INSPECTION PROCEDURE**1 RECONFIRM DTC (SEE PAGE 05-938)**

A	Normal Code
B	Malfunction Code

B**REPAIR CIRCUIT INDICATED BY OUTPUT DTC
(SEE PAGE 05-945)****A****2 CHECK HARNESS AND CONNECTOR (SEE PAGE 01-32)**

- (a) Check the harness and connector between the skid control ECU and combination meter.

NG**REPAIR OR REPLACE HARNESS OR
CONNECTOR****OK****3 CHECK COMBINATION METER ASSY**

- (a) Check the combination meter assy (see page 71-1).

NG**REPAIR OR REPLACE COMBINATION METER
ASSY(SEE PAGE 05-1999)****OK****CHECK AND REPLACE BRAKE ACTUATOR ASSY (SEE PAGE 32-58)**