

## Switch off Procedure for Cinergia units 7.5-60kVA

The following picture shows a general view of CINERGIA units with the front panel closed and opened:



Please, note that the configuration of the terminal blocks, circuit breakers and output switch may vary depending on the unit. Anyway, there will always be:

- **AC INPUT:** this device is used to energize the unit by connecting it to the electrical grid.
- **OUTPUT:** this device is used to energize the Equipment Under Test side of the equipment




It is important to follow the instructions of this note especially for those CINERGIA units with a Voltage Source connected on the EUT side.




Failure in following this procedure might cause a damage to the unit.

**PROCEDURE TO SWITCH OFF THE UNIT FROM THE AC GRID**

- 1- Set the unit in disabled mode. From Run mode press Ready and Disable.
- 2- Open the Output (EUT) side switch or press the emergency stop pushbutton:

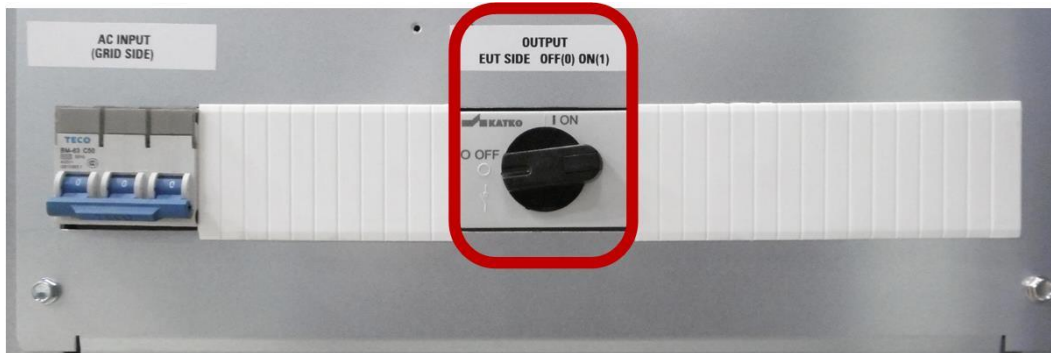

- 3- Finally, switch off the unit with the AC Input circuit breaker:

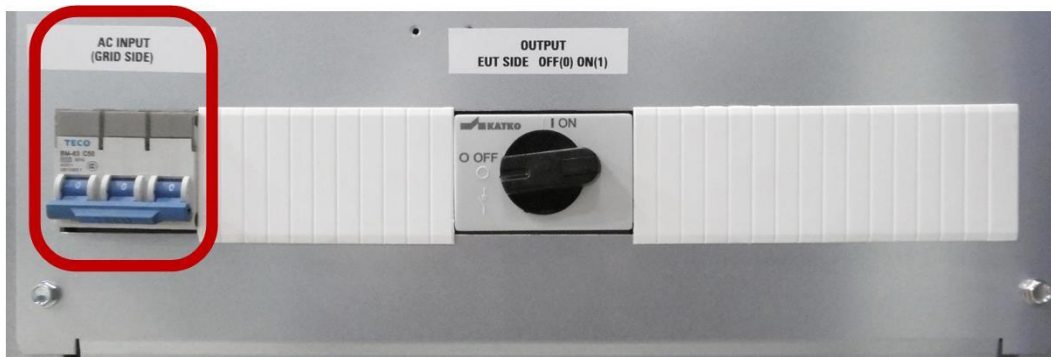

[www.cinergia.coop](http://www.cinergia.coop)

C/Can Baletes 7, Nau A (Polígon El Cros)

08310 Argentona (BARCELONA)

t. 93 486 43 58

Please, don't hesitate to contact on [support@cinergia.coop](mailto:support@cinergia.coop) in case of any doubt or question.