


FLYER

Noble Lite

2.4GHz
AFHDS 3

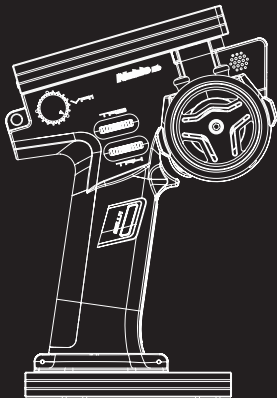

Quick Start Guide


Precaution !

For your own safety: make sure to download and read the Disclaimer & Warning documentation from the Flysky website before using this product.

Flysky Website: www.flysky-cn.com

1. The ce warns that the installation of the antenna used in this transmitter must be kept in distance from all the personnel and shall not be used or used with any other transmitter. The end user and the installer must provide antenna installation instructions and transmitter operating conditions to meet the requirements for rf exposure compliance.
2. Hereby, [ShenZhen FLYSKY Technology Co., Ltd.] declares the RF equipment [Noble Lite] to be in accordance with RED2014/53/EU.
3. The full text of the EU DoC is available at: www.flyskytech.com/info_detail/10.html

Left View

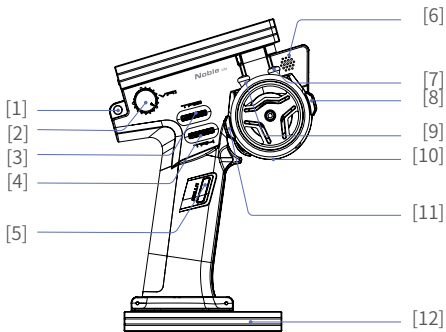

[1] Lanyard Eye

[2] VR1

[3] TR3

[4] TR4

[5] SW1

[6] Speaker

[7] TR2 (Throttle Trim)

[8] SW3


[9] TR1 (Steering Trim)

[10] Steering Wheel (can be rotated 180°)

[11] SW2

[12] Detachable Base

Right View

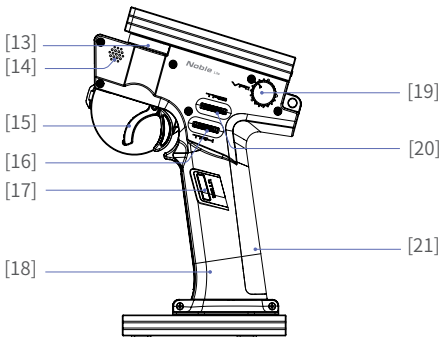

[13] Steering Wheel Swivel
Bracket

[14] Speaker

[15] Throttle Trigger

[16] TR4


[17] SW1

[18] Built-in Battery


[19] VR1

[20] TR3

Haptic feedback
motor built into
transmitter handle
[21] (Vibration type can
be set in the system
submenu "Vibration")

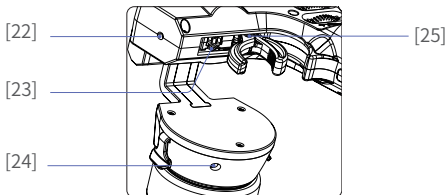


- Note: Do not completely unscrew the adjustment screws.

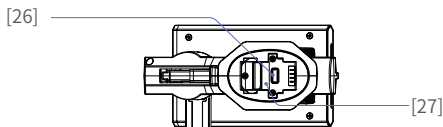

[22]	Adjust Trigger Stroke Length	[25]	Trigger Size Adjustment
[23]	Trigger Spring Adjustment	[26]	Spring Clip
[24]	Adjust Steering Wheel Stiffness	[27]	Spring Clip Slot

Front View

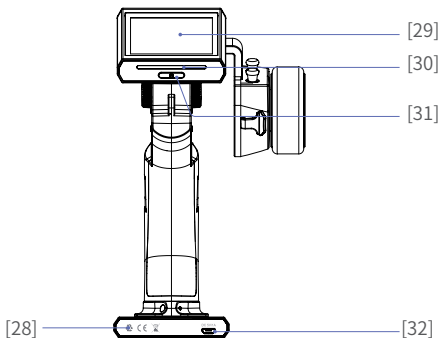


- | | | | |
|------|-----------------|------|-------------------------------|
| [28] | Sticker | [31] | Transmitter Power Button |
| [29] | Display | [32] | USB data/Firmware Update Port |
| [30] | Transmitter LED | | |

- For more information, please read the full user manual.



Detachable base

The transmitter base is removable.

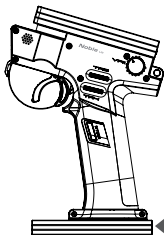

① Lift the base up


② Push the base forward

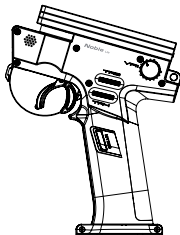

③ Remove the base

Powering On

1. Before use make sure that the battery is fully charged.
2. Press and hold the transmitter power button until the screen turns on.

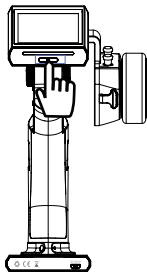



Powering Off

1. Disconnect the receiver from it's power supply.
2. Press and hold the transmitters power button until the screen powers off.

! Before powering off the transmitter make sure that the receiver has been powered off first. Powering off the transmitter before the receiver may result in loss of control of a model or engine leading to an accident.

Language Selection

Function Settings:





Touch the function menu icon , touch [System Settings (SYSTEM)] and navigate to [Language]. To select a language touch English, Chinese or Japanese and touch the back icon  to save and exit.


Failsafe

This feature is designed to protect models and their users in the event of a loss of signal.

All channels are displayed failsafe menu. If set to [OFF], the channel will remain at it's last position before signal loss. If a percentage is displayed, then that channel will move to that percentage when signal is lost. Failsafe is active by default.

Function Settings:

1. Touch the function menu  to enter the function menu, touch [Rx Setup], touch [Failsafe]. Touch the  at the bottom middle of the screen to turn failsafe on or off globally.;
2. Touch a channel to enter its failsafe menu. Touch the  at the bottom of the screen to activate failsafe for the chosen channel.
3. Move the steering wheel, button, knob or trigger to the desired failsafe position and touch the back button  to save and exit.



This picture shows the throttle channel set to a failsafe value of 10% forward.

- Each channels failsafe needs to be activated within the channels failsafe menu individually.




Attention



- For safty,it is recommended that all users pre-set this function before use.

Servo Frequency

This function is used to adjust the servo control frequency. This function can be used for analog servos (95Hz), digital servos (380Hz) and can also be set to custom frequencies. Digital servos and custom frequencies range between 50-400Hz.

Function settings:

1. Go to the function menu and touch the  icon.
2. Go to [Receiver Settings] and touch [Servo Frequency].
3. Touch to select analog servo, digital servo or custom frequency.
4. If you choose a custom frequency, touch "+", "-" to adjust the frequency.

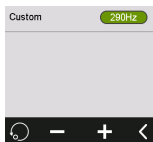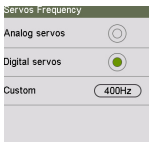

Both the analog servo (95Hz) and the digital servo (380Hz) are common servo frequencies and as such, are available as presets for quick setup. In order for servos to operate normally they must receive the correct frequency, to find the frequency refer to the servos user manual.

Firmware update


The transmitter's firmware can be updated by connecting to a Windows computer using a USB cable. Once this function is activated, all transmitter functions will stop working. To prevent the vehicle from losing control, power off the receiver before attempting to use this function.



warning

- Do not disconnect the Micro USB cable while the firmware is being updated!

This firmware can be updated via the following two ways.

- The firmware of this receiver can be updated through the FlyskyAssistant (The firmware of FlyskyAssistant is available on the Flysky official website).
- Or update it by following the steps below:
 1. Download and open the latest official software;
 2. Connect the transmitter to the computer via USB first;
 3. Click the main interface icon  to enter the function menu and select [System Settings (SYSTEM)];
 4. Touch [Firmware Update]. The system will display the warning: “Entering update mode will disable all other functions.” , touch [Yes] to continue.
 5. After completing the above steps, the computer update software window pops up as shown below (for reference only), click [Update] to start the update.
 6. Once the update is complete, the transmitter will exit the

update function automatically and reboot. (It is now safe to remove the USB cable)





Attention

- After a firmware update the receiver may not connect. If this is the case the RF module and receiver need to be updated.

RF Module Firmware Update

How To Update:

Click the main interface icon  to enter the function menu and select [System Settings (SYSTEM)]. Touch the function menu icon, then the System settings icon. Navigate to then touch Radio Frequency Setup, then touch [Update RF]. The system will ask “Are You Sure?” , select yes to continue. Touch the back icon  when the update is finished.

Update Receiver


Each transmitter update comes with a receiver update which needs to be uploaded to the receiver to make the most of optimizations and features that are included in the update.

How To Update:

Make sure the transmitter and receiver are bound. Navigate to [Receiver Setting], click [Update Receiver], the system will


then display a prompt “Update receiver, are you sure?” . Touch “Yes” to update.

If the receiver is not bound or connected to the transmitter the transmitter will display the prompt “Please connect a receiver or put the receiver into forced update mode” . Touch [Yes] to enter receiver selection. Choose between FGr4 and the FGr4S depending on which receiver you have. (FGr4S needs to be placed upright when in use)

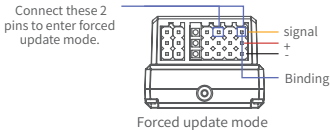


After starting the update, the transmitter will display as below. Once the update as reached 100%, the update is successful.

- The RF module firmware must be updated before updating the receiver firmware.



Binding

The transmitter and receiver have already been pre bound at the factory, however if you wish to bind again or bind a new receiver follow the steps below:

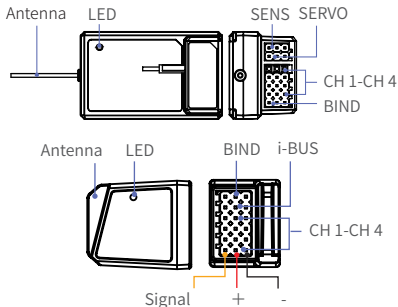

1. Connect the bind cable to the BIND receivers bind port.
2. Connect the power cable to any of the receiver ports. When the receiver powers on the LED will begin flashing quickly.
3. Power on the transmitter, navigate to [Receiver Settings], then touch [Bind].
 - AFHDS3 two-way: the receivers' LED will stop flashing and remain on, and the transmitter will atomically exit bind mode, indicating that the binding process has been successful.
 - AFHDS3 one-way: The receivers LED will start flashing slowly when binding is complete.
4. Once binding is complete disconnect both the bind and power cables from the receiver.

5. Connect power to the receiver and check to make sure all outputs are working as expected. Follow these steps if there is a need to rebind in future.
- These steps are only for the Noble transmitter in use with the FGr4 or FGr4S receiver. If you are using other receivers please visit the website for more information.

LED Indicator

The Noble lite has two LED indicators, one in the base and one on the transmitter itself.

Dock Charging Indicator


The base' LED indicator light up when charging.

Transmitter LED

The function can be used to change the color of the LED indicator located above the power button. Settings for power and brightness are also located here.

Available colors: red, green, blue, yellow, white.

Function settings:

1. Touch the function menu icon  then navigate to [System Settings].

2. Touch LED to enter the LED submenu:



a. [Type selection]

Select [None] for no LED battery level indicator;

Select [Battery indicator]. Power level is indicated by the following colors:

- High-green
- Medium-yellow
- Low-red

Select any color and the transmitter LED will display the corresponding color.

Note: Touch the icon , when the icon display as , it means the selection is successful.

b.[Brightness adjustment]

Touch the "+" or "-" icons to adjust the LED brightness.

When finished touch the back icon  to save and exit.

Specifications

Product Model	FG4 Lite
product Name	Nobel Lite
Number of Channels	4, 6, 8 channels optional
Compatible RC Models	Car
RF	2.4GHz ISM
Maximum Power	< 20dBm (e.i.r.p.) (EU)
RF Protocol	AFHDS 3
Distance	>300m(ground)
Resolution	4096
Battery	1S (4.2V) *2600mAh 18650
Charging Port	Micro USB
Charging Time	<3.5h
Life Time	4.5h+
Low Voltage Alarm	< 3.7V
Antenna	Single Built-in Antenna
Display	HVGA 3.5" TFT, 320*480
Language	Chinese, English, Japanese
Simulator	USB Simulator
Data Connector	Micro USB

Temperature Range	-15°C ~ +60°C
Humidity Range	20% ~ 95%
Firmware Update	Supported
Color	Black
Dimensions	129*114*190 mm
Weight	420g
Certification	CE, FCC ID:N4ZFG400, MIC,RCM


注意事项！

开始操作前请务必在 Flysky 官网下载并阅读《免责声明 & 警告》了解安全注意事项，并在 Flysky 官网下载阅读使用说明书。

Flysky 官网地址：www.flyskytech.com

1. 本发射机所用天线的安装必须与所有人员保持距离，不得与任何其他发射机共用或一起使用。必须向最终用户和安装人员提供天线安装说明和发射机操作条件，以满足射频暴露合规要求。
2. 特此，【ShenZhen FLYSKY Technology Co., Ltd.】声明无线电设备【Noble Lite】符合 RED2014/53/EU.
3. 欧盟 DoC 声明全文可在以下互联网地址：www.flyskytech.com/info_detail/10.html


左视图:

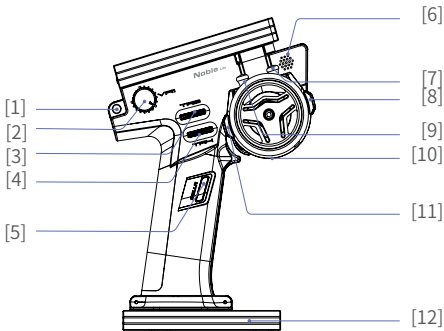

- [1] 吊环
- [2] VR1
- [3] TR3
- [4] TR4
- [5] SW1
- [6] 喇叭

- [7] TR2(油门微调按键)
- [8] SW3
- [9] TR1(方向微调按键)
- [10] 手轮 (可旋转 180°)
- [11] SW2
- [12] 可拆卸底座

右视图：

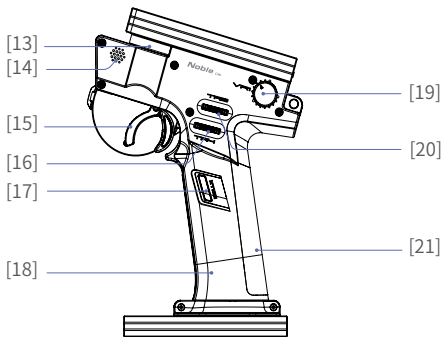

[13] 手轮旋转支架

[14] 喇叭

[15] 扳机

[16] TR4


[17] SW1

[18] 内置电池


[19] VR1

[20] TR3

[21] 震动马达内置于发射机手柄处（具体的震动效果可在系统菜单[振动]子菜单中设置。）

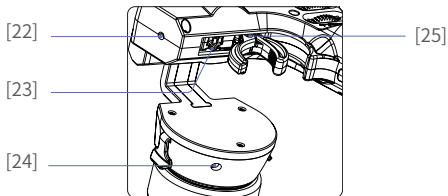


- 注意：调节时请勿将调节螺丝拧出。

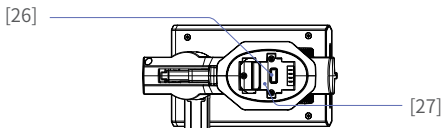

- | | | | |
|------|-------------|------|----------|
| [22] | 调节整个扳机结构的行程 | [25] | 调节扳机尺寸大小 |
| [23] | 调节扳机松紧度 | [26] | 弹簧卡扣 |
| [24] | 调节手轮松紧度 | [27] | 弹簧卡扣槽 |

正视图：

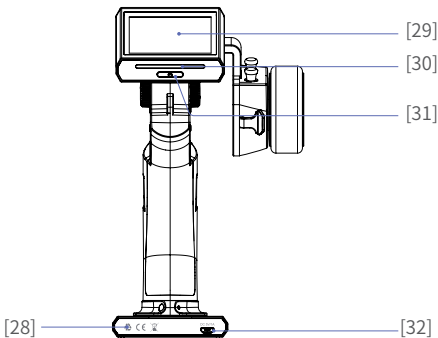

[28] 贴纸

[31] 发射机电源键

[29] 显示屏


[32] USB 输入、更新程序

[30] 发射机 LED 灯

- 关于 Noble Lite 发射机的更多操作请阅读使用说明书。


底座

发射机底座可拆卸。

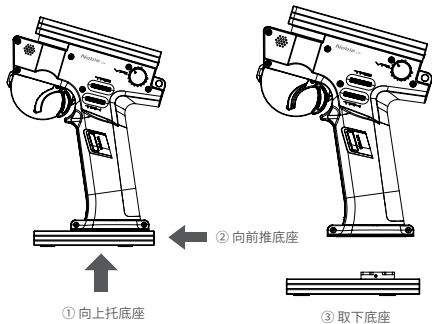

开机

1. 检查系统状态，确保电池电量充足；
2. 长按发射机电源键，直至屏幕亮起，表示开机。

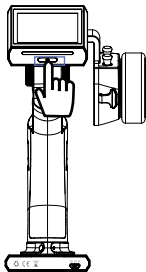



关机

1. 断开接收机电源；
2. 长按发射机电源键，直至屏幕熄灭，表示关机。

! 关闭前，请务必先断开接收机电源，然后关闭发射机。如果强行关闭发射机，将有可能导致遥控设备失控或者引擎继续工作而引发事故。

语言选择

功能设置：





点击主界面  图标，进入功能菜单界面，点击选择进入 [系统设置]，点击 [语言] 进入设置界面，根据需要选择 English、简体中文或日语，点击  退出。


⚠失控保护

该功能用于在接收机丢失信号或失控后，保护模型和操作人员的安全。


失控保护菜单下显示所有通道的列表，如果在通道后显示 [关闭]，表示失控后，该通道输出最后通道值。如果显示一个百分比，则表示失控后，该通道输出此固定值。失控保护功能默认关闭状态。

功能设置：

1. 点击主界面  图标，进入功能菜单界面，选择进入 [接收机设置] 功能，点击 [失控保护]，进入设置界面，点击  图标激活失控保护功能；
2. 点击需设置失控保护的通道，进入对应通道设置界面后，点击  图标激活此通道失控保护功能；
3. 移动对应的手轮、扳机或旋钮至所需位置后，点击  保存并退出此界面。



此图表示失控保护状态油门通道输出值为向前 10%

- 每个通道设置失控保护时，均需要点击对应通道界面的  激活此通道失控保护功能；




- 为保证安全，请用户在使用前预先设定好失控保护值


舵机频率

此功能用于调节通道输出控制舵机频率，该功能包括模拟舵机（95Hz）、数字舵机（380Hz）、自定义频率，可根据使用的舵机选择或设置正确的输出频率值，系统默认数字舵机，自定义频率调节范围在 50-400Hz 之间。

功能设置：

1. 进入主界面，点击 ；
2. 进入 [接收机设置]，点击 [舵机响应速度]；
3. 点击选择模拟舵机、数字舵机或自定义频率；
4. 如选择自定义频率，则点击“+”、“-”进行频率调节。



 模拟舵机（95Hz）、数字舵机（380Hz）为市场上较通用舵机频率值，故单独设定以使用户快捷操作，为了使舵机正常运行，请先查阅舵机使用说明书确认舵机正确频率，然后通过该功能对舵机频率数值进行更改。

固件更新


发射机的内置软件程序能够通过使用 Micro USB 线与 windows 计算机连接后进行软件更新升级。一旦此功能被激活后，发射机所有功能将停止工作。为了防止车辆失去控制，请在进入此功能前断开接收机电源。



警告

- 当固件正在更新时请勿断开 Micro USB 线

固件更新可通过如下两个途径完成。

- 可使用“遥控管家”进行更新（富斯遥控管家固件可从官网 www.flyskytech.com 获取）；
- 或通过如下步骤更新：
 1. 下载并打开最新的官方软件；
 2. 通过 Micro USB 线先将发射机连接至电脑；
 3. 点击主界面  图标，进入功能菜单界面，进入 [系统设置] 功能；
 4. 点击 [固件更新]，弹出提示界面“进入遥控器更新模式 所有功能将停止 确定吗？”，点击 [是] 即可进入更新模式。
 5. 在完成以上步骤后，电脑更新软件窗口弹出如下图提示（仅供参考），点击 [Update] 后开始更新；
 6. 更新完成后，发射机将会自动退出更新状态，进入开机界面。（断开 Micro USB 线连接，以及关闭电脑更新软件）





注意

- 系统更新完成后可能会导致接收机无法连接，此时需要更新高频与接收机

更新高频

更新步骤：

点击主界面  图标，进入功能菜单界面，选择进入 [系统设置]，点击 [高频设置] 进入设置界面，点击 [更新高频] 弹出提示“确定更新高频头？”，点击 [是]，进入升级界面，升级成功后弹出提示“升级成功”，点击  退出。

更新接收机

当发射机更新程序后，为了实现功能的优化，对应的接收机也需要更新程序。


更新步骤：

点击 [接收机设置] 后，点击 [更新接收机]，如果发射机已经对码成功，并且建立连接，则弹出提示 [确定将接收机更新吗？]。点击 [是] 即可将接收机更新；

如果接收机与发射机未建立连接，则弹出提示 [请连接接收机，或使接收机进入强制更新模式]，点击 [是] 进入接收机选择，该发射机提供两种配接收机：FGr4、FGr4S（注：FGr4S 在使用时需竖立摆放），用户可根据实际情

况选择需要升级的接收机，点击 [升级] 即可！


使用对码线短接这两个排针可进入强制更新状态



强制更新模式

进入更新后，显示如图画面，进度 100% 时，更新成功。


- 更新接收机前，必须先更新高频。



对码

本发射机和接收机在出厂前已对码成功。如果您需要对码时，请按照如下步骤进行对码：



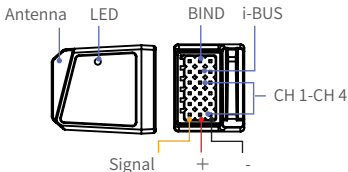

1. 将对码线连接至接收机上的 BIND 接口；
 2. 将电源线连接至接收机上任意接口，此时接收机快闪；
 3. 打开发射机进入 [接收机设置]，点击 [对码]：
 - 若 RF 标准选择 AFHDS3 双向：接收机指示灯常亮，表示对码成功，发射机自动退出对码界面；
 - 若 RF 标准选择 AFHDS3 单项：接收机指示灯慢闪，表示对码成功，点击退出发射机对码界面。
 4. 对码成功后，将对码线和电源线从接收机上取下；
 5. 将电源线重新连接至接收机，检查舵机是否正常工作。如需重新对码，请重复以上步骤。
- 此步骤适用于 Noble 与 FGr4 以及 FGr4S 的接收机对码，如您使用的是其他接收机，请进入官网查询对应接收机的使用说明书进行操作。

LED 指示灯

Noble Lite 有两种 LED 指示灯，分别为底座充电指示灯及发射机 LED 灯。

底座充电指示灯


底座 LED 白灯亮起表示正在充电。

发射机 LED 灯

功能可用于更改位于发射机电源键上方的 LED 灯带的颜色、电量指示以及灯带的亮度调节。

灯带颜色分别为红色、绿色、蓝色、黄色和白色。

功能设置：

1. 点击主界面  图标，进入功能菜单界面，选择进入 [系统设置] 功能；
2. 点击 [LED]，进入设置界面：

a.[类型选择]

选择 [无] 表示 LED 功能；

选择 [电量指示]，将根据电池电压显示不同颜色：

- 高 - 绿色
- 中 - 黄色
- 低 - 红色

选择任一颜色，发射机 LED 指示灯会显示对应颜色。

注：点击  图标，显示为  表示选择成功。

b.[亮度调节]

点击 “+” 或 “-” 图标调节 LED 亮度。

3. 设置完成后点击此图标 ，即可退出。

规格参数

产品型号	FG4 Lite
产品名称	Nobel Lite
通道个数	4、6、8 软件可选
适配模型	车
无线频率	2.4GHz ISM
发射功率	< 20 dBm (EU)
无线协议	AFHDS 3
遥控距离	>300 米(地面)
通道分辨率	4096
电池	1S (4.2V) *2600mAh 18650
充电接口	Micro USB
充电时间	<3.5h
续航时间	4.5h+
低电压报警	< 3.7V
天线类型	内置单天线
显示屏	HVGA 3.5 寸 TFT, 320*480
语言	中、英、日文
模拟器	USB 模拟器
数据接口	Micro USB

温度范围	-10°C ~ +60°C
湿度范围	20%~95%
固件更新	支持
机身颜色	黑色
外形尺寸	129*114*190 mm
机身重量	420g
认证	CE, FCC ID:N4ZFG400, MIC,RCM



微信公众号



Bilibili



Website



Facebook

FCC ID: N4ZFG400

出版日期 :2025-02-26

Copyright ©2025 Flysky Technology Co., Ltd.

