

SPARE PARTS /  
Parrot Disco / Antennas

Parrot  
DISCO


To replace the antennas of the Parrot Disco, you need a PH2 screwdriver.

It is recommended to use the Parrot Toolbox for this operation.


DIFFICULTY  
LEVEL




**1 BEFORE YOU START**

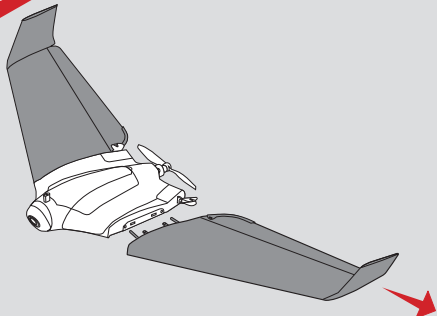


**1** Pull on the wings to remove them.

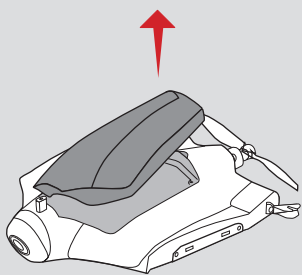

**2** Open the cowling.

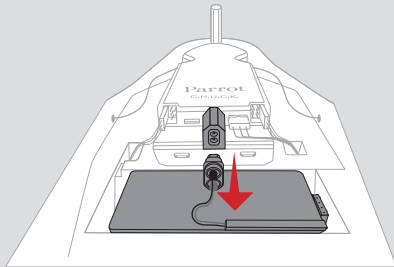


**3** Disconnect the battery.

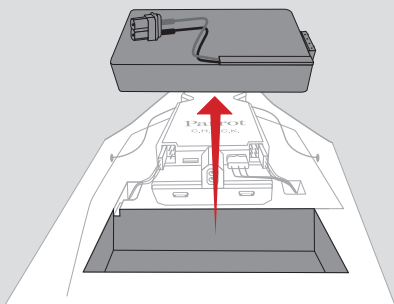


**4** Remove the battery.


**2 REMOVE THE ANTENNAS**

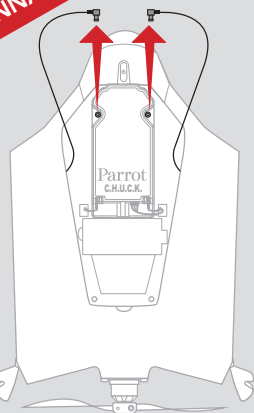

**1** Disconnect the antennas from the C.H.U.C.K.

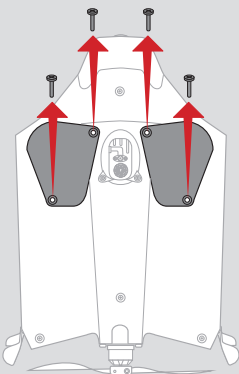


**2** Use a PH2 screwdriver to remove the 4 screws under the drone to access the antennas.

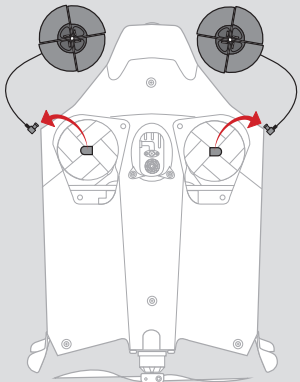


**3** Remove the antennas completely.


**3 INSTALL THE NEW ANTENNAS**

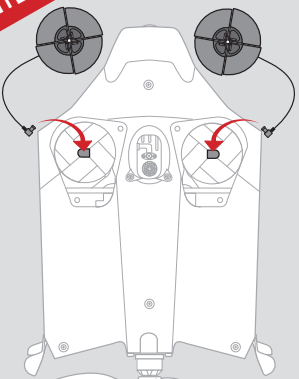

**1** Stick the new antennas and pass their cable through the body of the drone up to the C.H.U.C.K.

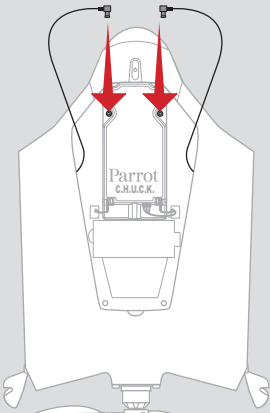

**2** Connect the new antennas to the C.H.U.C.K.

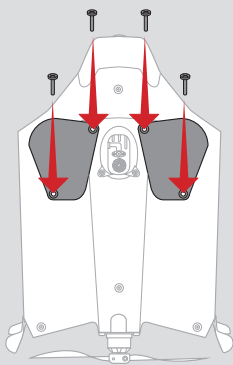

**3** Use a PH2 screwdriver to secure the antennas protections with 4 screws.