


TODO:


- SMA connectors
- Explain TX resistor values

Fault Pin Straps

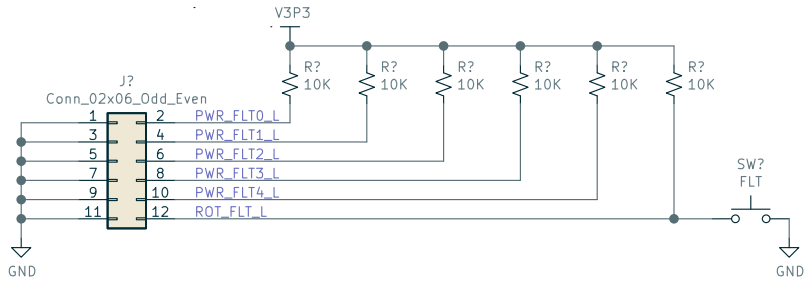


Fault pin straps allow setting fixed fault values. The switch attached to ROT_FLT provides a convenient way to cause fault interrupts during integration tests. The header allows reuse of these pins for alternative prototyping.

ID Straps

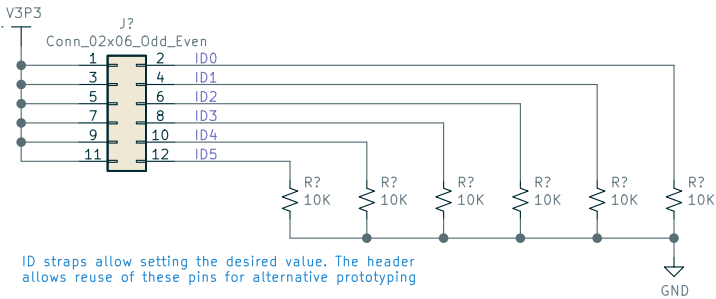


ID straps allow setting the desired value. The header allows reuse of these pins for alternative prototyping. See RFD 142 for currently allocated ID values.

CMD Bits Header



Command bits are exposed on a header for easy test probing and alternative prototyping.

Power Enable LED

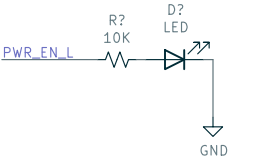

TODO: pick LED and limit resistor

Sheet: Power

Power

File: ignitionlet-power.sch

Sheet: Config

Programming & Configuration

File: ignitionlet-config.sch

Sheet: /
File: ignitionlet.sch

Title: Ignition Application

Size: A3 Date: KiCad E.D.A. kicad (5.1.10-1-10_14)

Rev: Id: 1/3

