


How to Read a Dial Meter

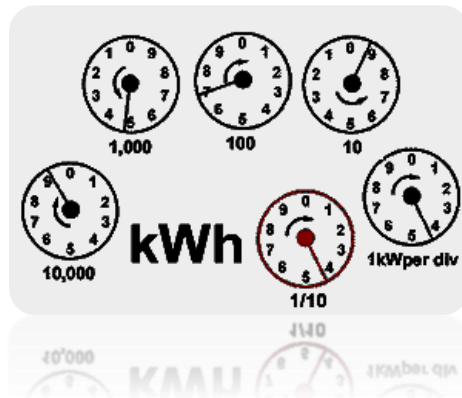

- ✓ Read the dials from left to right starting with the dial marked 10,000. Do not read the dial marked 1/10
- ✓ If the pointer on a dial is between two numbers, write down the lower number. This may not be the number nearest to the pointer
- ✓ If the pointer is between 0 and 9, use 9
- ✓ If the pointer is exactly on a number, write it down and underline it
- ✓ If any of the underlined numbers you have written down are followed by a 9, you will need to take one away from the number you've underlined
- ✓ So the reading for the above example would be **94694**.