

Power for the complete board.


Sheet: /power/  
File: power.kicad\_sch

**Title:**



Size: A4  
KiCad E.D.A. kicad (6.0.1-0)

Date:


**Rev:**  
Id: 2/6

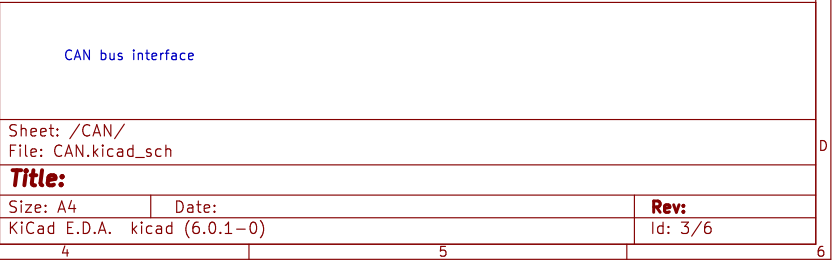


4 load sensors combined = one full load cell

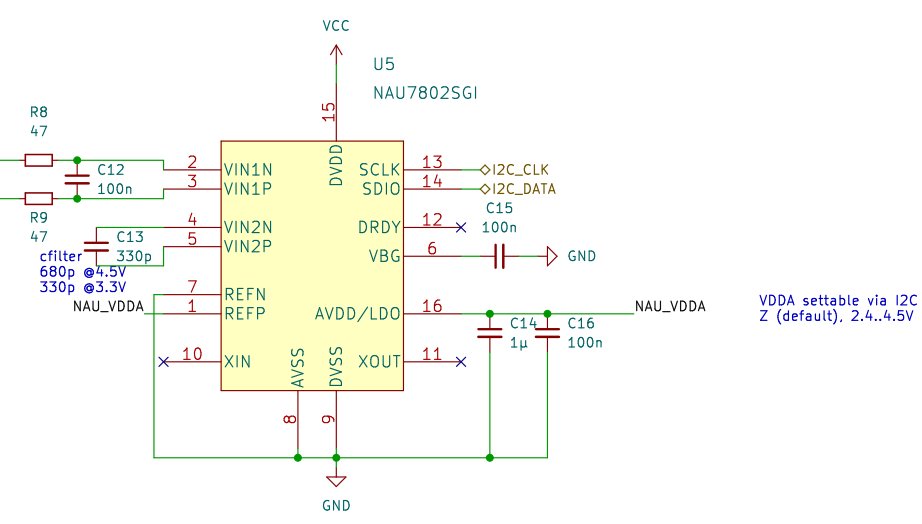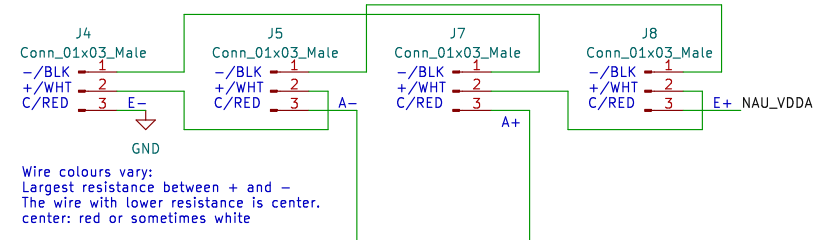

scale measurement		
Sheet: /scale/		
File: scale.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. kicad (6.0.1-0)		Id: 4/6

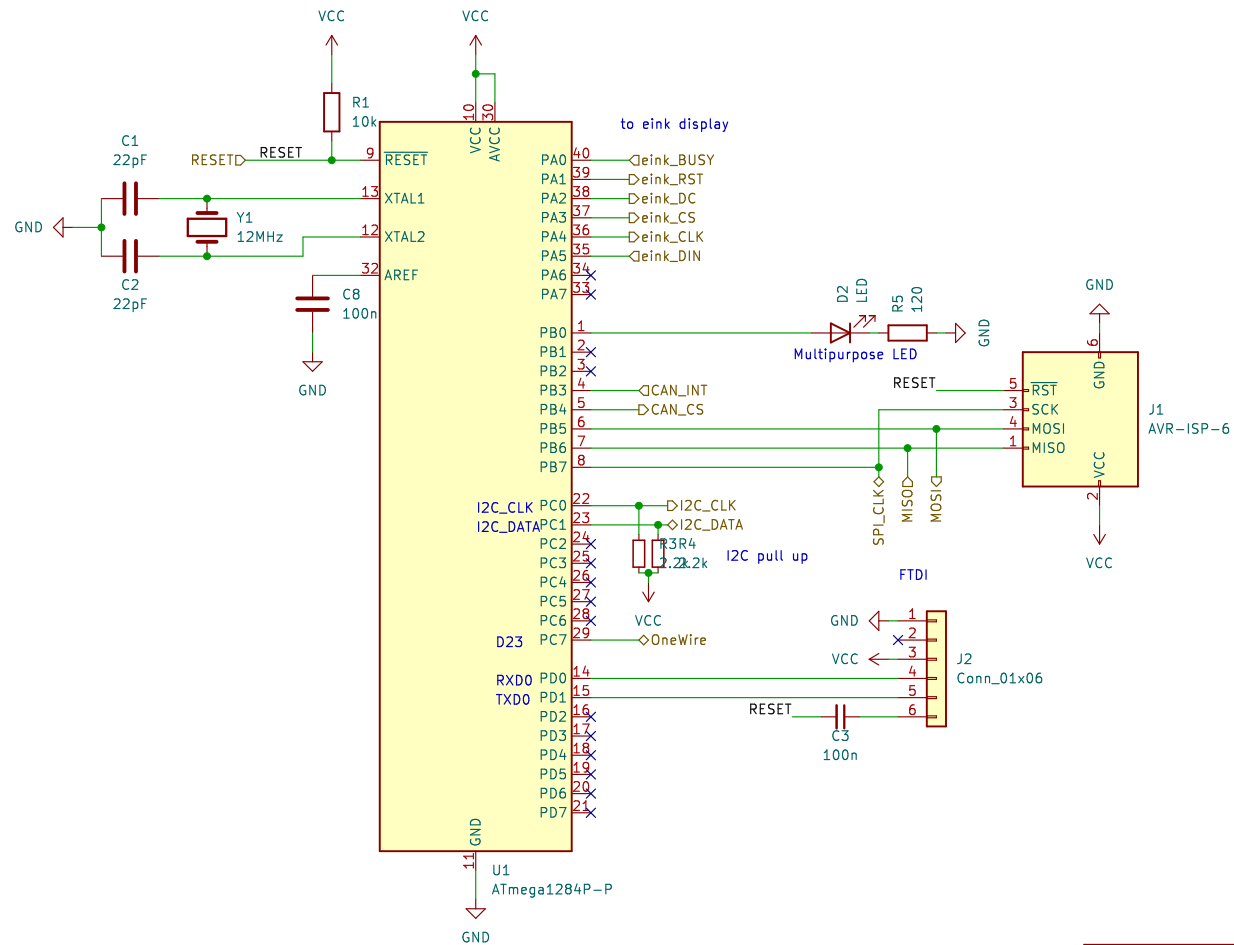

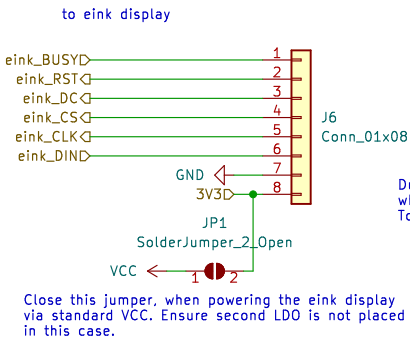

During refresh voltage drops by 0.7V für 10mu sec when connected tp MCP 1703 3.3V. This leads to a reset of MCU. To overcome this problem, connect eink to a separate LDO.

connection to eink display

Sheet: /eink/ File: eink.kicad_sch		
<b>Title:</b>		
Size: A4	Date:	<b>Rev:</b>
KiCad E.D.A. kicad (6.0.1-0)		Id: 6/6