

DFM Explanation

DF(M) stands for Digital Field Monitor.

Every alternator brand has a different abbreviation for the DF(M) connection, for example: FR(Field Return), DF(Digital Field), DFM(See above), M(Monitor), LI(Load Indicator).

They all function in the same way.


Function:

About the DFM connection there is a positive and negative measurement and both work with a block pulse.

When the alternator load increases the block pulse depending on the car application becomes wider or smaller. This is measured in % also called PWM(Pulse Width Modulation).

The car ECU then knows what the load is at a specific moment during charging.

If the load is too high the car ECU can shut down some car accessories and/or increase the idle speed.

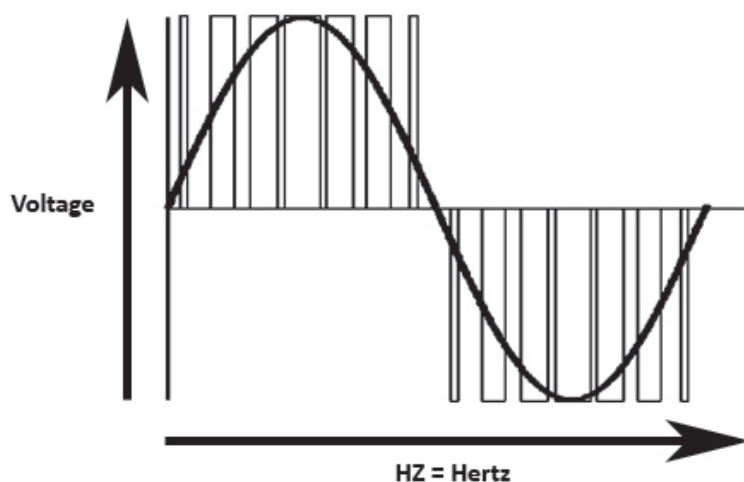

POS SERVICE HOLLAND

T: +31 (0)35 656 3180 | E: PSH@PSH.NL | WWW.PSH.NL




DFM Explanation

DFM (M,FR,DF,LI,F) is a block signal (information) that is sent from the alternator to the car ECU. It shows the load level of the rotor of the alternator, also known as electromagnetic force. This has a direct influence on the produced energy of the alternator.

The voltage is regulated by turning on the rotor current with a frequency of eg.150HZ, which changes the electromagnetic force.

The longer the duration time of the current, the wider the duty cycle will be.


Below you see a diagram as an example to show you what the signal looks like when connected to an oscilloscope:

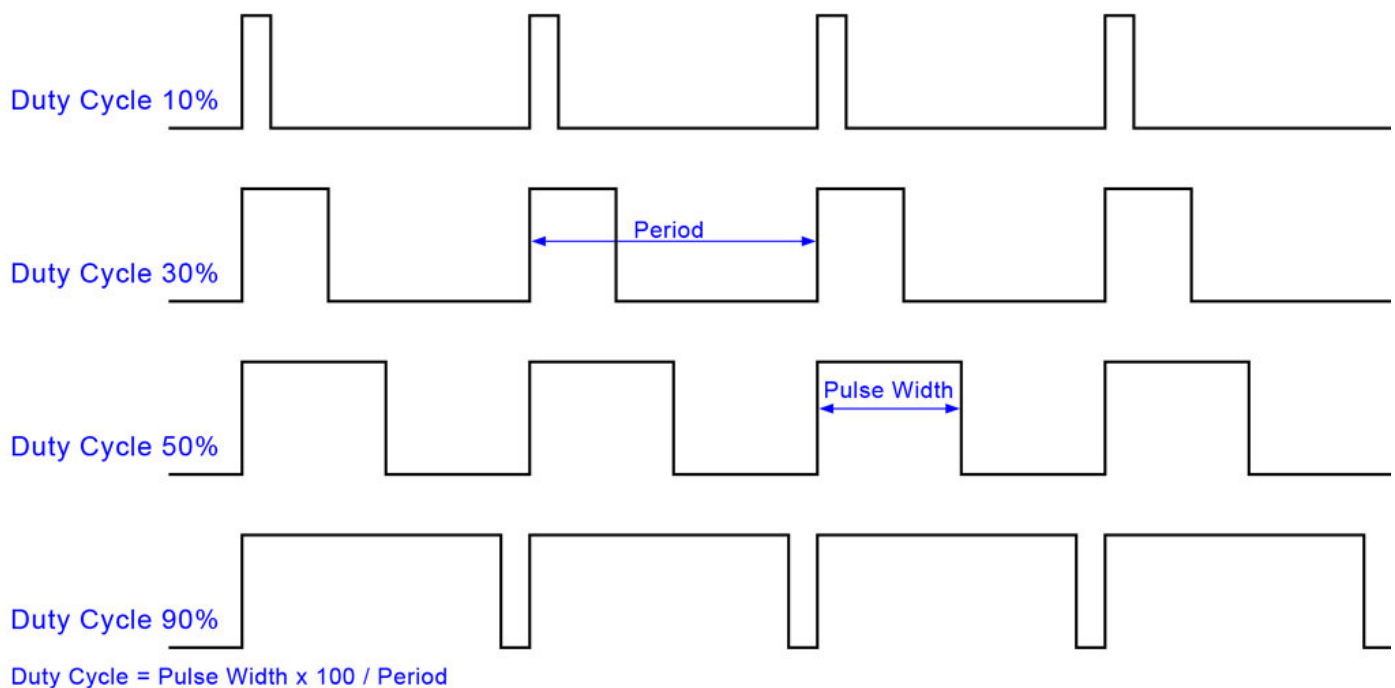

DFM Explanation

When looking at the structure of the transistor, an off-set of the DFM signal could show up and will vary in voltage somewhere between 0,1V-1,2V.

The actual diagram on the oscilloscope will look like the drawing below:

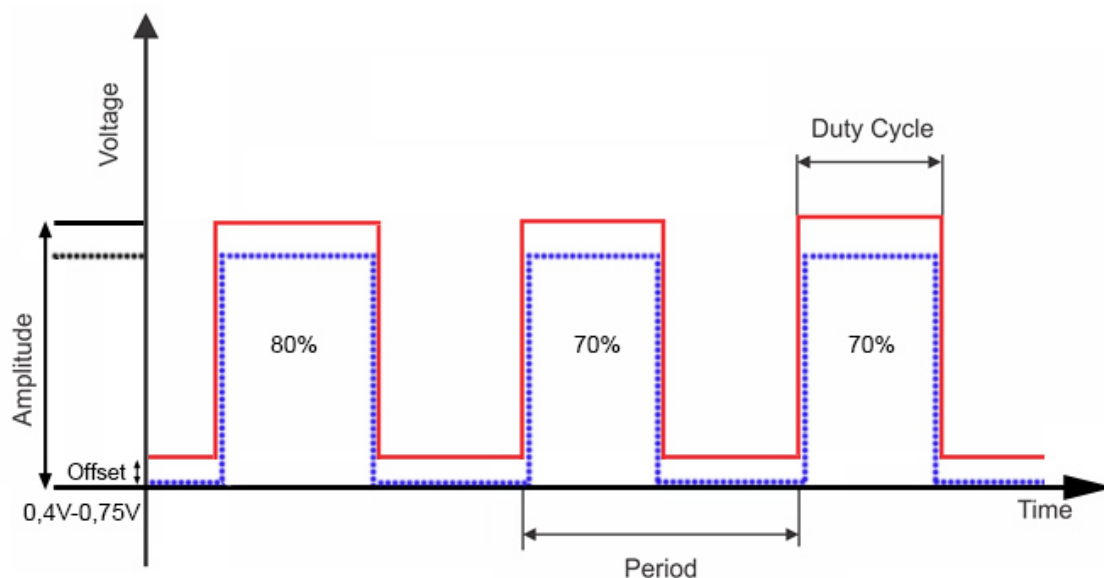

If the off-set were to exceed 0,75V, the ECU probably won't recognize the signal and because of that could calculate the wrong load of the alternator at that specific time.

The tester will show three results of the signal:

1. The frequency eg.150HZ
2. The width depending on the alternator load at that specific moment from 0-99 %.
3. Offset - from 0,1 t/m 1,2Volts

The best testing method is to compare the DFM signal to another alternator with the same OE number.

To check this, place an alternator with a DFM connection on the test bench and connect the DFM connection to the VC-17F and change the RPM's to 1500, 2500 and 3500 RPM.

During the test put three different increasing loads on the alternator and write them down.

Now replace the OE alternator with a rebuild or aftermarket version and repeat the test above.

Compare the values and if the results are the same, the alternator will function well on the car.

If the results are different (especially the width in percentages), the best thing to do is to replace the regulator.

If the width changes like the OE version, the alternator is tested ok and if it doesn't the alternator is faulty.

This test is 100% reliable!

Section 5 – Support

5.0 Contact Information:

Pos Service Holland BV
Stichtse Kade 47c
1244NV 's-Graveland
Holland

Telephone: +31 (0)35-656 3180
Fax: +31 (0)35-656 0409
Email: psh@psh.nl
Website: www.psh.nl

Technical support

Telephone: +31 (0)65-333 2341
Email: nardo@psh.nl

POS SERVICE HOLLAND

T: +31 (0)35 656 3180 | E: PSH@PSH.NL | WWW.PSH.NL