



#	DDJ-1000	Section DECK	Main Function	+Shift	+Memory Shift	+Shift3
S	SHIFT		Main Shift			
35	MEMORY		Second Shift			
32	PLAY		Play/Pause	Vinyl Long Stop		Config: TTFX
33	CUE		Cue	Track Begin		
34	SEARCH <<		move left (beat / loop jump)	move -1 beat	Size Move Half	Prev Track
34	SEARCH >>		move right (beat / loop jump )	move +1 beat	Size Move Double	Next Track
36	DECK SELECT (1/2/3/4)		Select Deck 1-4	Deck Flavor		Config: Auto Layout
37	SLIP REVERSE		Tap: Echo Out / Long: Censor	TP3 Reverse		
38	IN		Tap: Loop In / Long: Reloop Tap: Half loop / Long: Edit Loop	Loop double (Backwards)	Loop half (Normal)	
39	OUT		Tap: Loop Out / Long: Reloop Tap: Double loop / Long: Edit out	Loop half (Backwards)	Loop double (Normal)	
40	4 BEAT LOOP		Tap: 4-Beat loop / Long: Activate Loop Tap: Loop Exit	4-Beat (Backwards)	Loop set (Selected size)	
41	QUANTIZE / WAKE UP		Quantize + Snap Toggle	Reset mapping		
42	SLIP / VINYL		Flux Mode On/Off	Scratch On/Off		
43	JOG (platter )		Scratch / Pitch Bend	Quick Search		
43	JOG (wheel side)		Pitch Bend			
44	JOG ADJUST		Jog Sensitivity (hardware)			
45	BEAT SYNC (Traktor mode)		Toggle Sync	Set Tempo Master	Reset Tempo (=0)	Config: Sync Aid
45	(Elastic beatgrid mode)		Jog = Sync off; Cue = Sync Off			
46	TEMPO		Tempo Control	Tempo Control (Sync off)		
47	MASTER TEMPO		KeyLock Toggle	Tempo Range (6/10/16/100)		Config: Tempo Enlarger
48	KEY SYNC		(see grid section)	(see grid section)		
49	KEY RESET		(see grid section)	(see grid section)		



		Section DECK			
#	DDJ-1000	Main Function	+Shift	+Memory Shift	+Shift3
50	PAD MODES	Change Mode; Twice=cycle	Change Mode; Twice=cycle		
51	PAD PAGE LEFT	Cycle pad pages / cycle pane			
51	PAD PAGE RIGHT	Select pad pages directly			
52	PADS	(see detailed section)	(see detailed section)		
53	TURN BROWSER	Scroll List	Scroll Tree	WaveForm Zoom Adjust	Config: BOME clock
53	PUSH BROWSER	Load Track	Open / close Folder	WaveForm Zoom Auto	
54	BACK	Preview Player (Hold)	Scroll Favorites		
55	VIEW	Browser Only (Toggle)	Goto Collection		


		Section BEATGRID			
#	DDJ-1000	+ KEY SYNC	+ KEY RESET	+Shift	+Shift3
48	KEY SYNC			Set Grid Marker	
49	KEY RESET			Delete Grid Marker	
	KEY SYNC+KEY RESET	Track ON/OFF LOCK	Auto Grid Marker		
43	Turn Jog Wheel	Move Grid	BPM +/-		
53	Turn BROWSER	Move Grid [ FINE ]	BPM +/- [ FINE ]		
53	Push BROWSER	RESET BPM	BPM AUTO		



		Section MIXER			
	DDJ-1000	Main Function	+Shift	+Memory	+Shift3
1	CROSSFADER	Crossfader	Crossfader Curve		
2	CROSS FADER ASSIGN	CrossFader Assign			
3	CHANNEL FADER	Channel Fader	CH Fader Start		
4	CUE MONITORING	Cue Monitor	Echo Out Type (1/2/3/4)		Config: External Cue
5	FILTER (KNOB)	MixerFX / MacroFX			
6	LOW	Low			
7	MID	Mid			
8	HI	Hi			
9	TRIM	Gain			
10	FADER VU	Pre-fader Level			
11	INPUT SELECT	Input select			
12	MASTER LEVEL	Volume Master Out			
13	MASTER VUMETER	Master Level			
14	BOOTH LEVEL	Volume Booth Out			
15	MASTER CUE	MASTER CUE			
16	HEADPHONES VOLUME	(hardware operation)			
17	HEADPHONES MIXING	(hardware operation)			
18	SAMPLER VOLUME	Echo Out Parameter #3	Echo Out Parameter #1+#2	Dry Wet FX Unit 1+2+3	Config: TTFX delay
19	SAMPLER CUE	Pattern Recorder	Stop Pattern	Record Pattern	Config: STEMS
20	DUB ECHO	MixerFX1			Config: SuperKnobs
20	PITCH	MixerFX2			Config: SuperKnobs
20	NOISE	MixerFX3			Config: SuperKnobs
20	FILTER	Filter			Config: SuperKnobs
21	MIC LOW EQ	(hardware operation)			
22	MIC HI EQ	(hardware operation)			
23	MIC 2 VOLUME	STEM FX			
24	MIC 1 VOLUME	Filter			
25	MIC CONTROL	(hardware operation)			



		section BEAT FX			
	DDJ-1000	Main Function	+Shift	+Memory	+Shift3
26	BEATFX SCREEN	NOT MAPPABLE IN MIDI			
27	BEAT <	Parameter #3 Left	Single/Group mode	Select FX up	
27	BEAT >	Parameter #3 Right		Select FX down	
28	LOW CUT	Delay T3			
28	ECHO	Delay			
28	MT DELAY	Ramp Delay			
28	SPIRAL	Auto Bouncer			
28	REVERB	Reverb T3			
28	TRANS	Gater			
28	ENIGMA JET				
28	FLANGER	Flanger			
28	PHASER	Phaser			
28	PITCH	Reverse Grain			
28	SLIP ROLL	BeatSlicer			
28	ROLL	BeatMasher 2			
28	MOBIUS SAW				
28	MOBIUS TRI				
29	SELECT 1/2/3/4	Select FX4 Routing			
		(Use MST for Pioneer FX!)			
30	LEVEL/DEPTH	Dry/Wet FX4			
31	ON/OFF	On/OFF FX3	Vinyl Break (Release FX)	Bug Fix for button blinking	

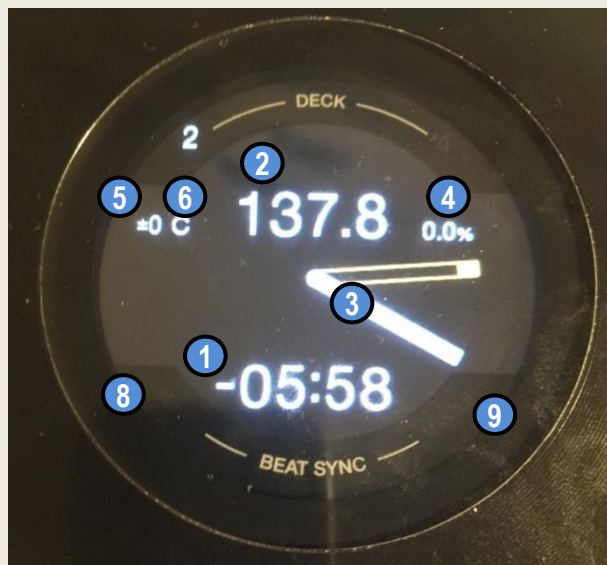

		Section JOG DISPLAYS			
#	DDJ-1000	Main Function	+Shift	+Memory	+Memory+Shift
	BUTTON: LOOPS	Show Loop / Move size (for 2s)	Move size	BeatJump	
	BUTTON: MASTER TEMPO	KeyLock Toggle	Tempo Range (6/10/16/100)	Toggle Elapsed/Remain	
	BUTTON: QUANTIZE		RESET SCREENS		
	BUTTON: SLIP		Vinyl On/Off		
	BUTTON: Memory	Double tap: Elapsed/Remain			
1	DISPLAY: TIME	Time Elapsed / Remain	Length	Loop Size / Move size	
2	DISPLAY: BPM	Current BPM	Original BPM		
3	DISPLAY: NEEDLE	Current Position			
4	DISPLAY: PERCENTAGE	BPM Percentage	Tempo Range		
5	DISPLAY: KEY VALUE	Phase Error (zoomed)			
6	DISPLAY: KEY VARIATION	None			
7	JOG RING LED	On-Air Deck / JogFX enabled			
8	DISPLAY: SYNC	Sync			
9	DISPLAY: MASTER	Master			