


# XDJ-RX


## HardwareDiagram for TRAKTOR PRO2

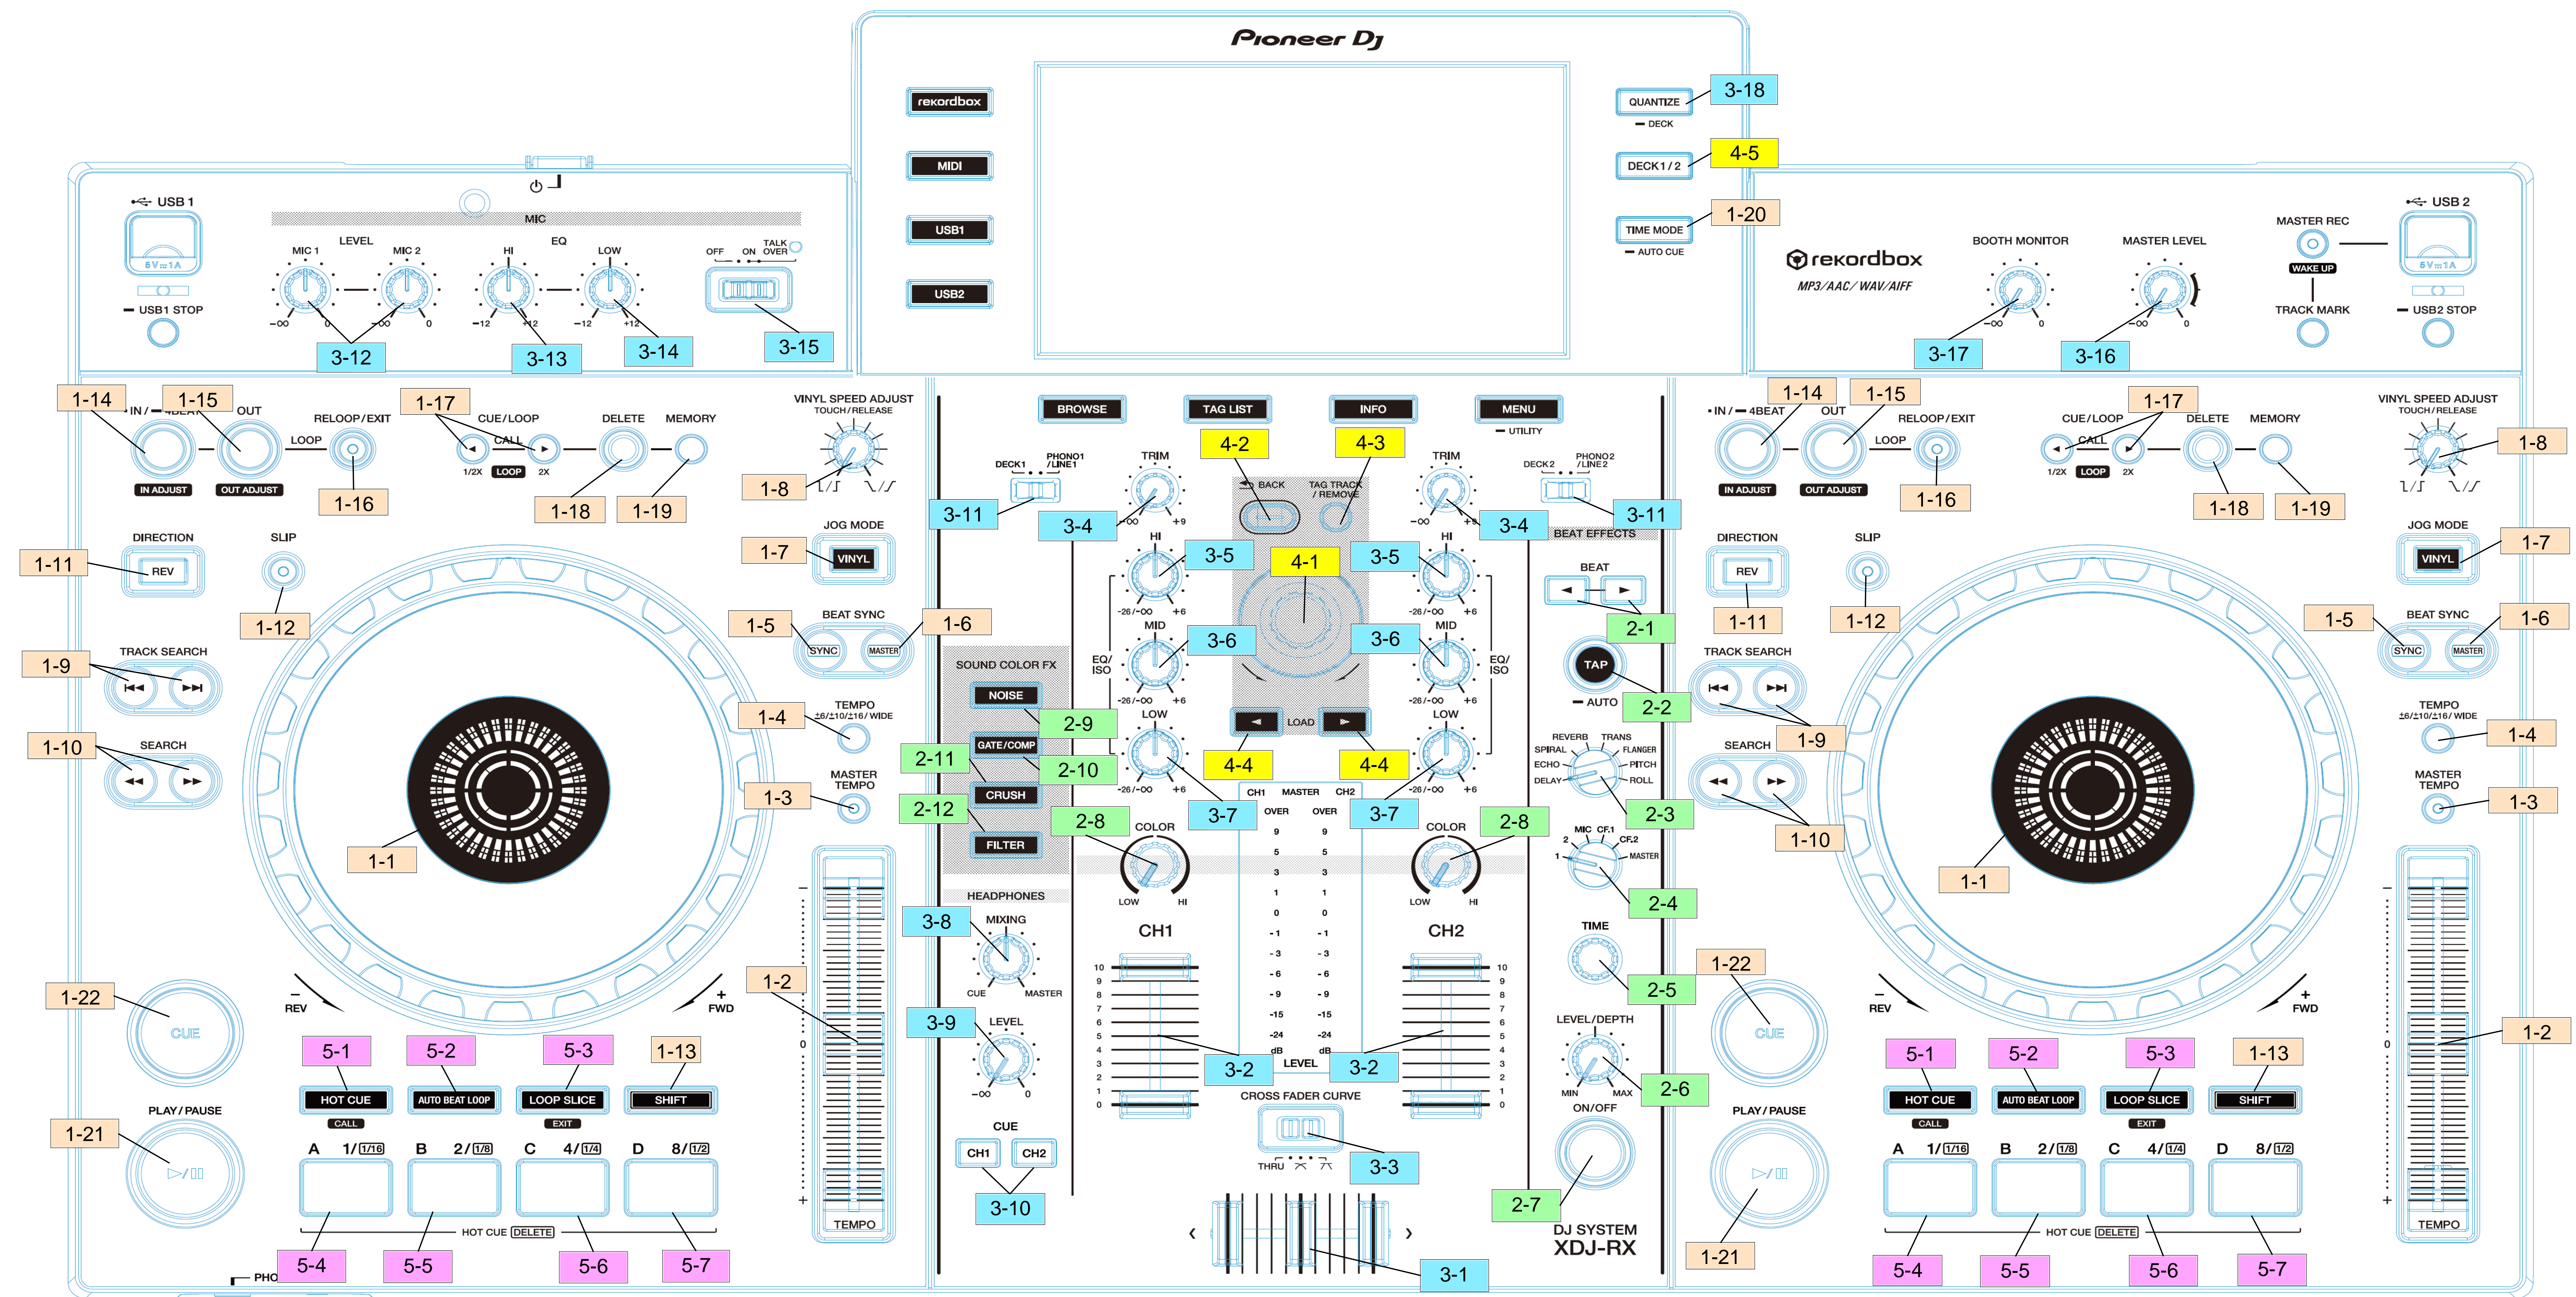




GROUP	No.	NAME		FUNCTION	+SHIFT	
1, DECK COMMON	1	JOG	platter	Scratch (Vinyl on) Pitch Bend (Vinyl off)		
			wheel side	Pitch Bend		
	2	TEMPO	Tempo Control			
	3	MASTER TEMPO	Keylock On/Off			
	4	TEMPO RANGE	Tempo Range (6%/10%/16%/100%)			
	5	SYNC	Sync On/Off			
	6	MASTER	Master			
	7	JOG MODE	Vinyl On/Off			
	8	VINYL SPEED ADJUST				
	9	TRACK SEARCH	FWD	Track Search Fwd	Jump To Track Start	
			REV	Track Search Rev	Jump To Track Start	
	10	SEARCH	FWD	Search Fwd		
			REV	Search Rev		
	11	REVERSE				
	12	SLIP	Flux Mode On/Off			
	13	SHIFT	Shift			
	14	LOOP IN	Loop In			
	15	LOOP OUT	Loop Out			
	16	RELOOP/EXIT	LoopActive On/Off			
	17	CUE/LOOP CALL	FWD	Jump to Next Cue		
			REV	Jump to Prev Cue		
	18	CUE/LOOP DELETE	Cue Detele			
	19	CUE/LOOP MEMORY	Cue set			
20	TIME MODE					
TRACK DECK						
21	PLAY/PAUSE		Play/Pause			
	CUE		Cue Set/Play, Cue back			
REMIX DECK (DECK C/D)						
21	PLAY/PAUSE		Play/Stop All Slots			
22	CUE		Trigger Play All Slots			
2, EFFECT						
	1	BEAT	Single Mode	FWD	FX1 Parameter3 adjust	
				REV	FX1 Parameter3 adjust	
	1	BEAT	Group Mode	FWD	FX1 Effect1 Parameter + Side adjust	
				REV	FX1 Effect1 Parameter - Side adjust	
	2	TAP		Single/Group Set		
	3	EFFECT SELECT	Single Mode	DELAY	FX1 Delay Set	
				ECHO	FX1 Tape Delay Set	
				SPIRAL	FX1 no Effect Set	
				REVERB	FX1 Reverb Set	
				TRANS	FX1 no Effect Set	
				FLANGER	FX1 Flanger Set	
				PITCH	FX1 no Effect Set	
				ROLL	FX1 no Effect Set	
	3	EFFECT SELECT	Group Mode	DELAY	FX1 Effect1 Delay Set	
				ECHO	FX1 Effect1 Tape Delay Set	
				SPIRAL	FX1 Effect1 no Effect Set	
				REVERB	FX1 Effect1 Reverb Set	
				TRANS	FX1 Effect1 no Effect Set	
				FLANGER	FX1 Effect1 Flanger Set	
				PITCH	FX1 Effect1 no Effect Set	
				ROLL	FX1 Effect1 no Effect Set	
	4	CH SELECT		1	FX CH 1 On CH 2 Off	
				2	FX CH 2 On CH 1 Off	
				MIC	FX CH 1/2 Off	
				CF.1	FX CH 1/2 Off	
				CF.2	FX CH 1/2 Off	
				MASTER	FX CH 1/2 On	
	5	TIME				
	6	LEVEL DEPTH		FX1 Dry/Wet adjust		
	7	ON/OFF	Single Mode	FX1 Dry/Wet On/Off		
	7	ON/OFF	Group Mode	FX1 Effect1 Dry/Wet On/Off		
	8	COLOR		Channel Filter		
	9	NOISE	Single Mode	FX1 no Effect Set		
	10	GATE/COMP		FX1 Gater Set		
	11	CRUSH		FX1 no Effect Set		
	12	FILTER		FX1 Filter Set		
	9	NOISE	Group Mode	FX1 Effect1 no Effect Set		
	10	GATE/COMP		FX1 Effect1 Gater Set		
11	CRUSH	FX1 Effect1 no Effect Set				
12	FILTER	FX1 Effect1 Filter Set				

• If different effects from the already assigned ones are displayed, please import the settings file (TS1 file) again.

GROUP	No.	NAME		FUNCTION	+SHIFT	
3, MIXER	1	CROSSFADER		Crossfader		
	2	CH FADER		Channel Fader		
	3	CROSSFADER ASSIGN	THRU	(*1)		
				Smooth		
				Sharp		
	4	TRIM		Gain		
	5	HI		EQ (High)		
	6	MID		EQ (Mid)		
	7	LOW		EQ (Low)		
	8	HEADPHONES MIXING		Monitor Mix Adjust		
	9	HEADPHONES LEVEL		Monitor Volume Adjust		
	10	CUE	CH1	CUE On/Off		
			CH2	CUE On/Off		
	11	INPUT SWITCH				
	12	MIC LEVEL	MIC 1			
			MIC 2			
	13	MIC EQ HI				
	14	MIC EQ LOW				
15	MIC SWITCH					
16	MASTER LEVEL		Master Out Volume			
17	BOOTH MONITOR LEVEL					
18	QUANTIZE		Quantize on/off			
4, BROWSER	1	BROWSE	rotate	Track list scroll	Browser tree scroll	
			press		Open/Close a folder	
	2	BACK	Browser Zoom			
	3	TAG TRACK/REMOVE				
	4	LOAD	CH1	Deck A Load		
CH2			Deck B Load			
5	DECK 1/2		Deck Change Deck A/B / RemixDeck C/D	Deck Change the side of deck shift button is pressed		
5, PERFORMANCE PADS						
COMMON (Mode Change)						
	1	HOT CUE		Hot Cue Mode (Track Deck)	Ext. mode 1	
	2	AUTO BEAT LOOP		LOOP mode 1(1beat,2beat,4beat,8beat)	Ext. mode 2	
	3	LOOP SLICE		LOOP mode 2(1/16beat,1/8beat,1/4beat,1/2b	Ext. mode 3	
TRACK DECK						
	4	PERFORMANCE PAD 1	mode			
			Hot Cue	Hot Cue 1		
			LOOP mode 1	LOOP 1beat		
			LOOP mode 2	LOOP 1/16beat		
			Ext. mode 1			
			Ext. mode 2			
	5	PERFORMANCE PAD 2	mode			
			Hot Cue	Hot Cue 2		
			LOOP mode 1	LOOP 2beat		
			LOOP mode 2	LOOP 1/8beat		
			Ext. mode 1			
			Ext. mode 2			
	6	PERFORMANCE PAD 3	mode			
			Hot Cue	Hot Cue 3		
			LOOP mode 1	LOOP 4beat		
			LOOP mode 2	LOOP 1/4beat		
			Ext. mode 1			
			Ext. mode 2			
7	PERFORMANCE PAD 4	mode				
		Hot Cue	Hot Cue 4			
		LOOP mode 1	LOOP 8beat			
		LOOP mode 2	LOOP 1/2beat			
		Ext. mode 1				
		Ext. mode 2				

(\*1) Mixer Mode: When the MIXER MODE is set to [MIDI CONTROL], set the CROSSFADER ASSIGN button manually on TRAKTOR screen.

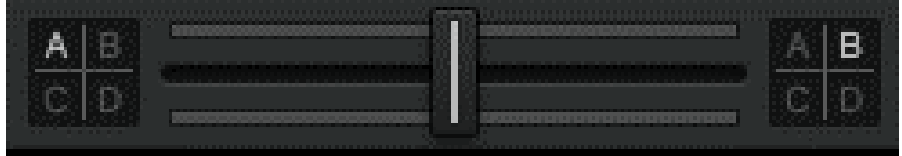

GROUP	No.	NAME		FUNCTION	+SHIFT	
REMIX DECK (DECK C/D)						
4	PERFORMANCE PAD 1	mode				
		Hot Cue	REMIX DECK 1 Trigger Play	When a track is not loaded:	Load a track from track list	
				When playback stops:	Delete	
				During playback	Stop	
		LOOP mode 1	LOOP 2beat			
		LOOP mode 2	LOOP 1/8beat			
		Ext. mode 1				
		Ext. mode 2				
Ext. mode 3						
5	PERFORMANCE PAD 2	mode				
		Hot Cue	REMIX DECK 2 Trigger Play	When a track is not loaded:	Load a track from track list	
				When playback stops:	Delete	
				During playback	Stop	
		LOOP mode 1	LOOP 2beat			
		LOOP mode 2	LOOP 1/8beat			
		Ext. mode 1				
		Ext. mode 2				
Ext. mode 3						
6	PERFORMANCE PAD 3	mode				
		Hot Cue	REMIX DECK 3 Trigger Play	When a track is not loaded:	Load a track from track list	
				When playback stops:	Delete	
				During playback	Stop	
		LOOP mode 1	LOOP 4beat			
		LOOP mode 2	LOOP 1/4beat			
		Ext. mode 1				
		Ext. mode 2				
Ext. mode 3						
7	PERFORMANCE PAD 4	mode				
		Hot Cue	REMIX DECK 4 Trigger Play	When a track is not loaded:	Load a track from track list	
				When playback stops:	Delete	
				During playback	Stop	
		LOOP mode 1	LOOP 8beat			
		LOOP mode 2	LOOP 1/2beat			
		Ext. mode 1				
		Ext. mode 2				
Ext. mode 3						