



Operating the rekordbox dj with CDJ/XDJ Buttons

The default settings are shown below.

■ CDJ-TOUR1

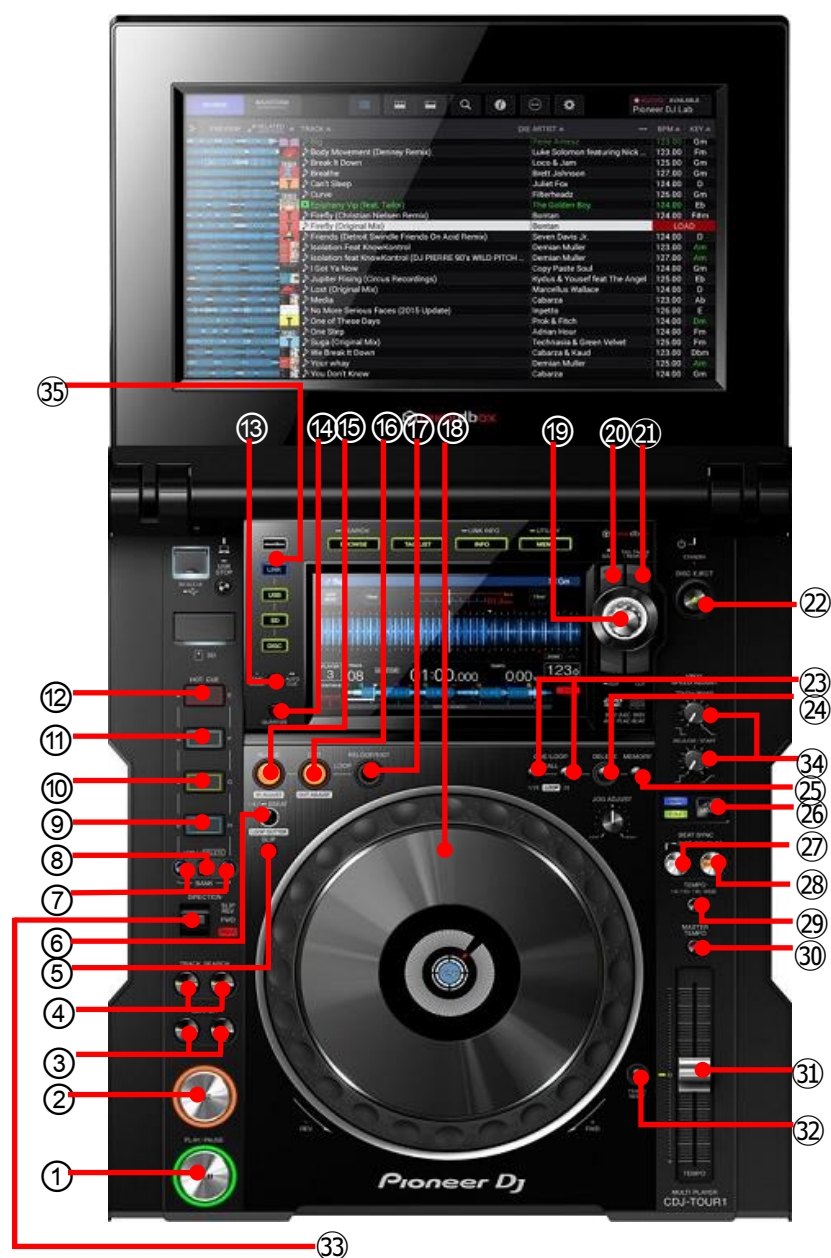

No.	CDJ-TOUR1	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 17 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE
22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE / LOOP CALL While Loop: Loop Size 1/2, 2x
24	DELETE	DELETE
25	MEMORY	MEMORY
26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC Long press: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE

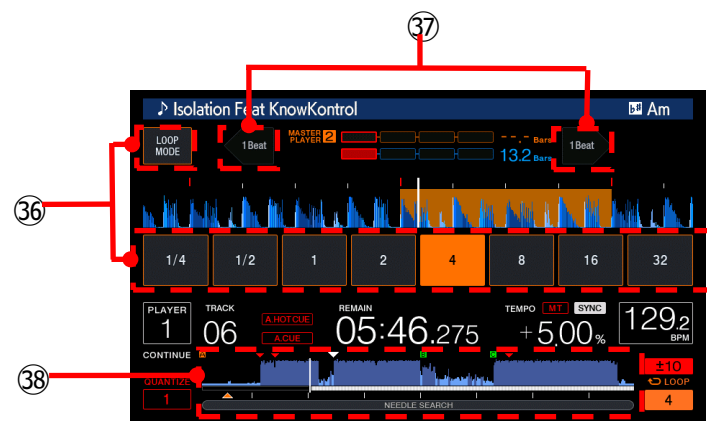


30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox dj
36	LOOP MODE	LOOP MODE
	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
37	1 BEAT	BEAT JUMP (1)
38	WAVEFORM	Needle Search


Note:

- Caution for TRACK SEARCH
TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

CDJ-2000NXS2

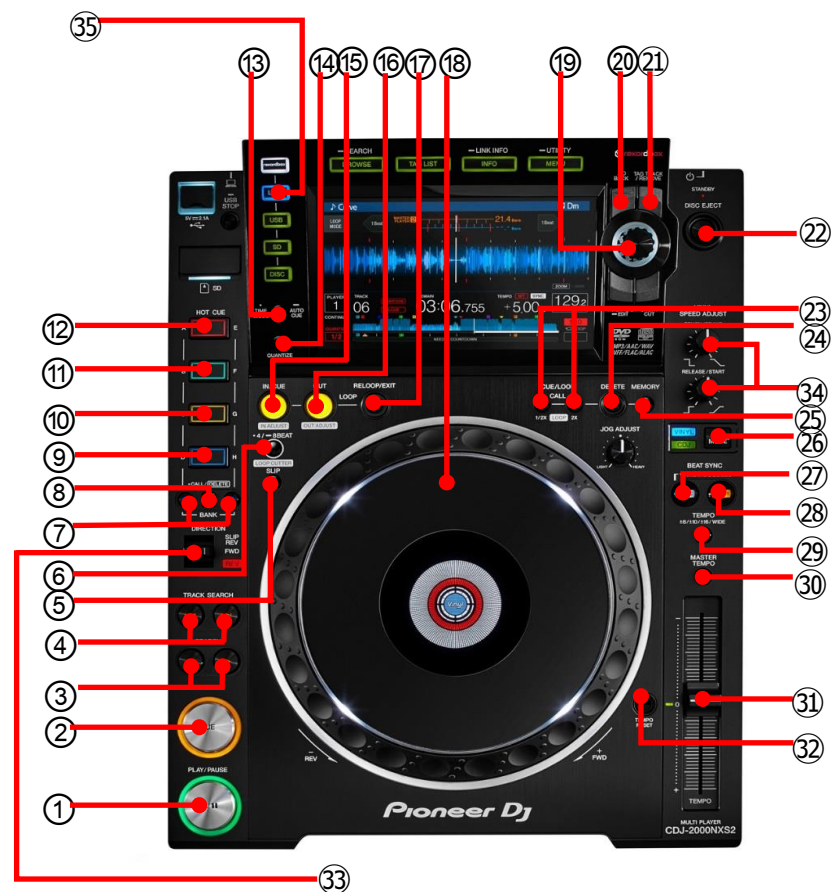

No.	CDJ-2000NXS2	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 17 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE
22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
24	DELETE	DELETE
25	MEMORY	MEMORY
26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC Long press: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST

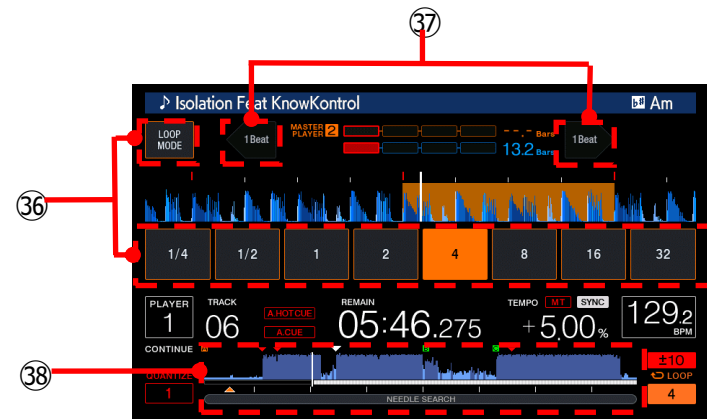


35	LINK	CONNECT TO rekordbox dj
36	LOOP MODE	LOOP MODE
37	1 BEAT	BEAT JUMP (1)
38	WAVEFORM	Needle Search

Note:

- Caution for TRACK SEARCH

TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

■ CDJ-2000NXS

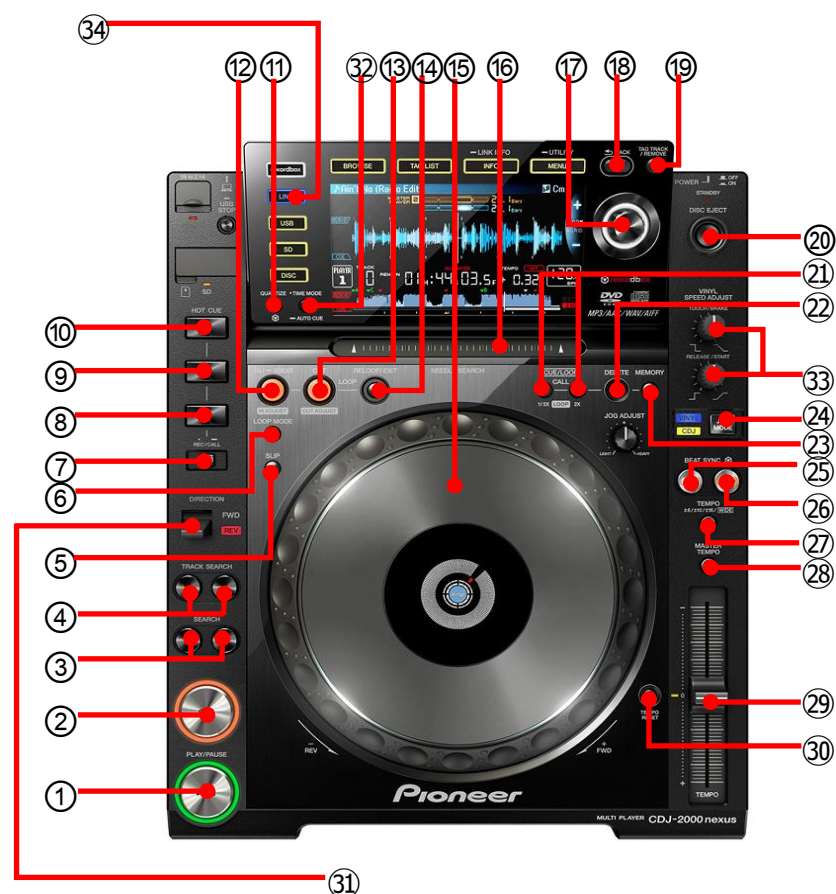

Note:

- Caution for TRACK SEARCH
TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

No.	CDJ-2000NXS	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	SLIP	SLIP
6	LOOP MODE	AUTO LOOP 4
7	HOT CUE REC/CALL	HOT CUE REC / CALL
8	HOT CUE C	SELECT / SET + STORE HOTCUE C
9	HOT CUE B	SELECT / SET + STORE HOTCUE B
10	HOT CUE A	SELECT / SET + STORE HOTCUE A
11	QUANTIZE	QUANTIZE
12	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
13	LOOP OUT	LOOP OUT / OUT ADJUST
14	RELOOP / EXIT	RELOOP / EXIT
15	JOG DIAL	JOG DIAL
3+15	Press 3 and turn 17 simultaneously	SEARCH
16	NEEDLE SEARCH	NEEDLE SEARCH
17	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
18	BACK	BACK
19	TAG TRACK / REMOVE	TAG TRACK / REMOVE
20	DISC EJECT	PLAYER UNLOAD
21	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
22	DELETE	DELETE
23	MEMORY	MEMORY
24	JOG MODE	JOG MODE
25	BEAT SYNC	BEAT SYNC Long press: INST. DOUBLES
26	BEAT SYNC MASTER	BEAT SYNC MASTER
27	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
28	MASTER TEMPO	MASTER TEMPO
29	TEMPO	TEMPO
30	TEMPO RESET	TEMPO RESET
31	DIRECTION	FWD. / REV.
32	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
33	VINYL SPEED ADJUST	VINYL SPEED ADJUST
34	LINK	CONNECT TO rekordbox dj

■ CDJ-900NXS




Note:



- Caution for TRACK SEARCH
TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

No.	CDJ-900NXS	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	DIRECTION	FWD. / REV.
6	SLIP	SLIP
7	4-BEAT LOOP	4 BEAT AUTO LOOP
8	BEAT DIVIDE 3/4	AUTO BEAT LOOP 3/4
	BEAT DIVIDE 1/3	AUTO BEAT LOOP 1/3
	BEAT DIVIDE 1/2	AUTO BEAT LOOP 1/2
	BEAT DIVIDE 1/4	AUTO BEAT LOOP 1/4
	BEAT DIVIDE 1/8	AUTO BEAT LOOP 1/8
9	QUANTIZE	QUANTIZE
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 and turn 5 simultaneously	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	BEAT SYNC	BEAT SYNC Long press: INST. DOUBLES
22	BEAT SYNC MASTER	BEAT SYNC MASTER
23	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	JOG MODE	JOG MODE
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox dj

■ XDJ-1000mk2

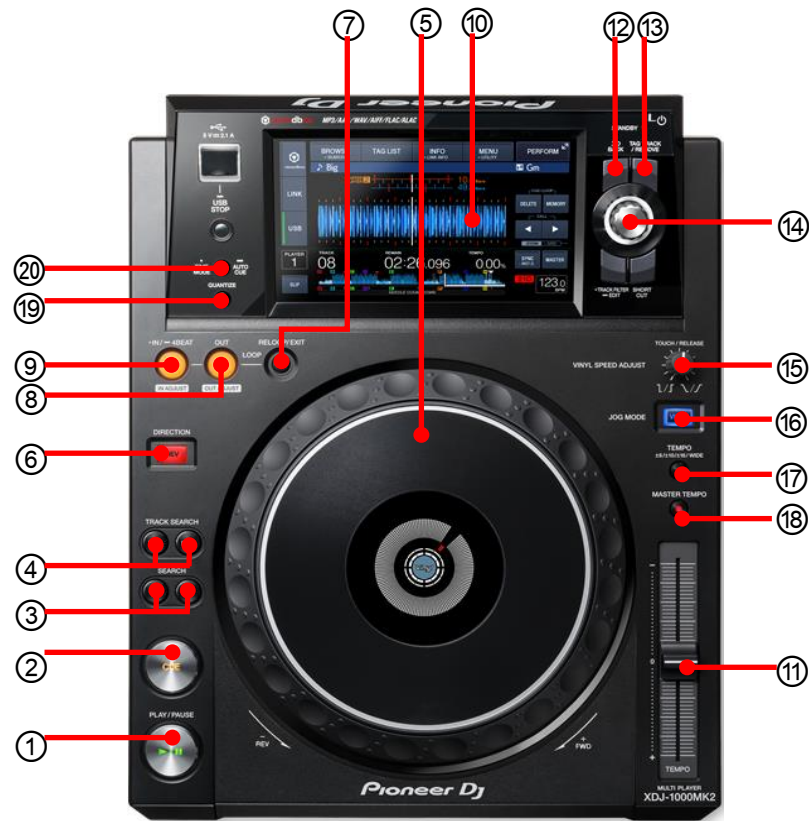

No.	XDJ-1000mk2	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO
19	QUANTIZE	QUANTIZE
20	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue

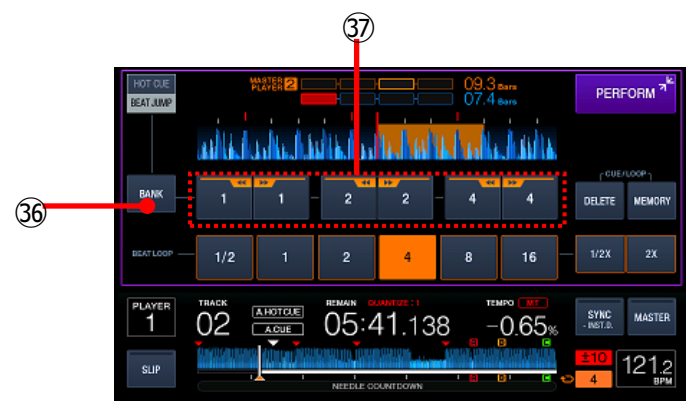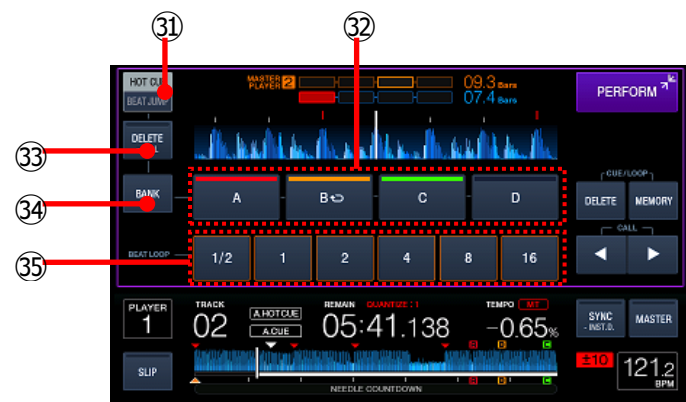

21	PERFORM	PERFORM
22	BROWSE	BROWSE
23	INFO	INFO
24	SOUCE SELECT - LINK	CONNECT TO rekordbox
25	SLIP	SLIP
26	BEAT SYNC	BEAT SYNC
		Long press: INST. DOUBLES
27	BEAT SYNC MASTER	BEAT SYNC MASTER
28	CUE / LOOP CALL	CUE/ LOOP CALL
		While Loop: Loop Size 1/2, 2x
29	MEMORY	MEMORY
30	DELETE	DELETE
31	HOT CUE/BEAT JUMP	HOT CUE/BEAT JUMP
32	HOT CUE A/E HTO CUE B/F HTO CUE C/G HOT CUE D/H	SELECT HOTCUE A~H/ SET + STORE HOTCUE A~H
33	DELETE / CALL	HOT CUE DELETE Long press: HOT CUE CALL
34	BANK	HOT CUE BANK
35	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8,16
36	BANK	BEAT JUMP BANK
37	BEAT JUMP	BEAT JUMP 1, 2, 4, 8, 16, 32

Note:


- Caution for TRACK SEARCH

TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

■ XDJ-1000



No.	XDJ-1000	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (⌘)	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED Long press: ---
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO ±6/±10/	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO
20	WAVEFORM	Needle Search
21	SLIP	SLIP

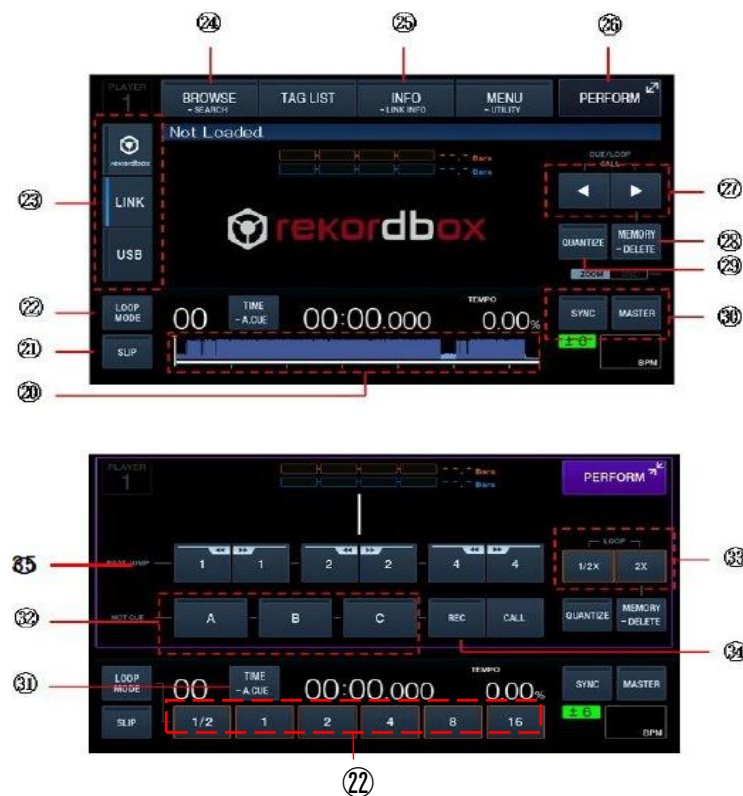

22	LOOP MODE	LOOP MODE
	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
23	SOURCE SELECT - LINK	CONNECT TO rekordbox
24	BROWSE	BROWSE
25	INFO	INFO
26	PERFORM	PERFORM
27	CUE / LOOP CALL	CUE/ LOOP CALL
	While Loop: Loop Size 1/2, 2x	
28	MEMORY / DELETE	MEMORY /
29	QUANTIZE	QUANTIZE
30	BEAT SYNC	BEAT SYNC
	Long press: INST. DOUBLES	
	BEAT SYNC MASTER	BEAT SYNC MASTER
31	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
	Long press: Auto Cue	
32	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HOT CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
33	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
34	HOT CUE REC / CALL	HOT CUE REC / CALL
35	BEAT JUMP	BEAT JUMP (1, 2, 4)

Note:


- Caution for TRACK SEARCH

TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

■ XDJ-700



No.	XDJ-700	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5	SEARCH
6	RELOOP / EXIT	RELOOP / EXIT
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
9	TOUCH DISPLAY	---
10	TEMPO	TEMPO
11	BACK	BACK
12	TAG TRACK / REMOVE	TAG TRACK / REMOVE
13	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
14	VINYL MODE	JOG MODE
15	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	WAVEFORM	Needle Search
18	SLIP	SLIP
19	VINYL BRAKE	VINYL SPEED ADJUST - TOUCH/BRAKE
20	SOURCE SELECT - LINK	CONNECT TO rekordbox
21	BROWSE	BROWSE
22	INFO	INFO

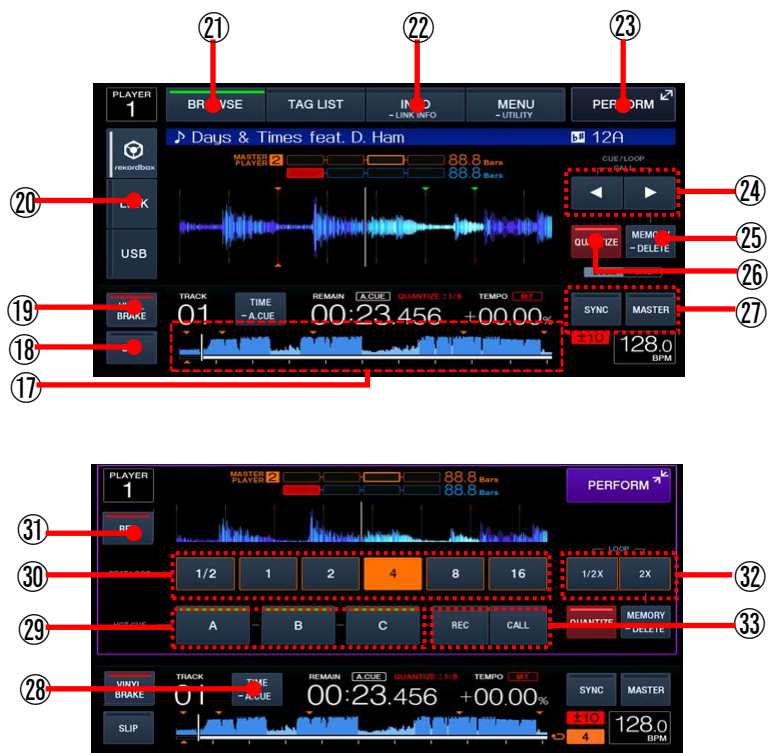


23	PERFORM	PERFORM
24	CUE / LOOP CALL	CUE/ LOOP CALL
25	MEMORY / DELETE	While Loop: Loop Size 1/2, 2x
26	QUANTIZE	MEMORY /
27	BEAT SYNC	Long press: DELETE
28	BEAT SYNC MASTER	QUANTIZE
29	TIME MODE / AUTO CUE	BEAT SYNC MASTER
30	HOT CUE C	REMAINING / ELAPSED TIME
31	HTO CUE B	Long press: Auto Cue
32	HOT CUE A	SELECT / SET + STORE HOTCUE C
33	AUTO LOOP 1/2, 1, 4, 8, 16	SELECT / SET + STORE HOTCUE B
34	REV	SELECT / SET + STORE HOTCUE A
35	HALF / DOUBLE LOOP	AUTO LOOP 1/2, 1, 4, 8,16
36	HOT CUE REC / CALL	REV
37		HALF / DOUBLE LOOP
38		HOT CUE REC / CALL

Note:

- Caution for TRACK SEARCH

TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

CDJ-2000

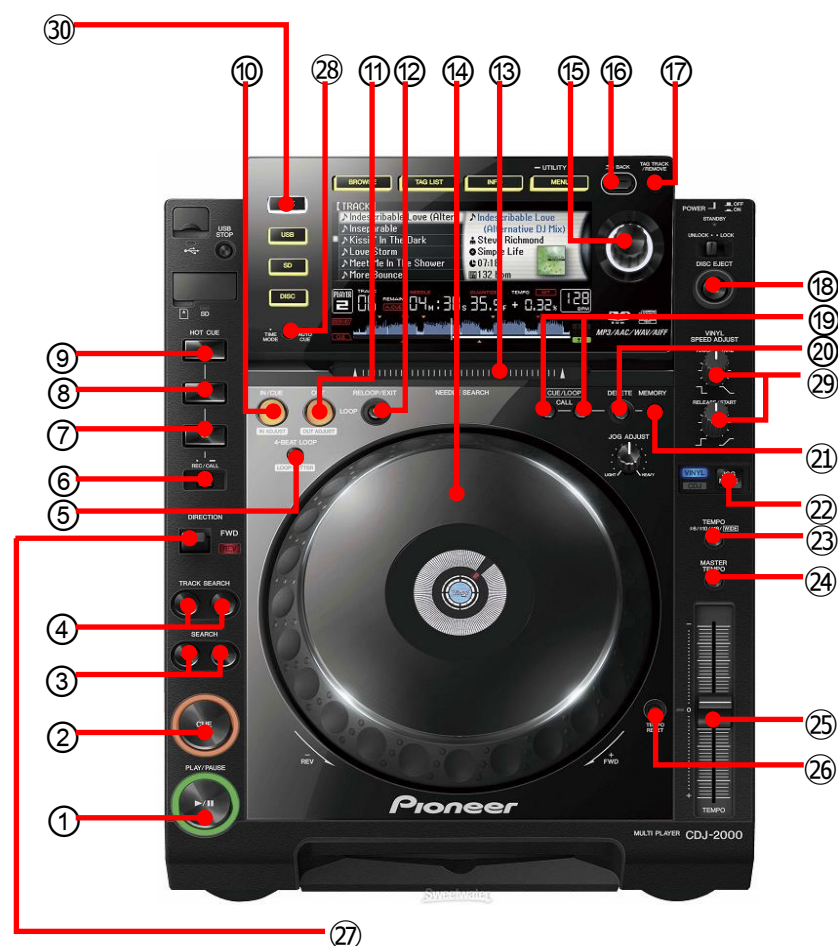


Note:

- Caution for TRACK SEARCH
TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

No.	CDJ-2000	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	4 BEAT LOOP / LOOP CUTTER	AUTO LOOP 4 LOOP SIZE /2
6	HOT CUE REC/CALL	HOT CUE REC / CALL
7	HOT CUE C	SELECT / SET + STORE HOTCUE C
8	HTO CUE B	SELECT / SET + STORE HOTCUE B
9	HOT CUE A	SELECT / SET + STORE HOTCUE A
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	NEEDLE SEARCH	NEEDLE SEARCH
3+13	Press 3 and turn 13 simultaneously	SEARCH
14	JOG DIAL	JOG DIAL
15	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
16	BACK	BACK
17	TAG TRACK / REMOVE	TAG TRACK / REMOVE
18	DISC EJECT	PLAYER UNLOAD
19	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
20	DELETE	DELETE
21	MEMORY	MEMORY
22	JOG MODE	JOG MODE
23	TEMPO ±6/±10/	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	DIRECTION	FWD. / REV.
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox dj

CDJ-900

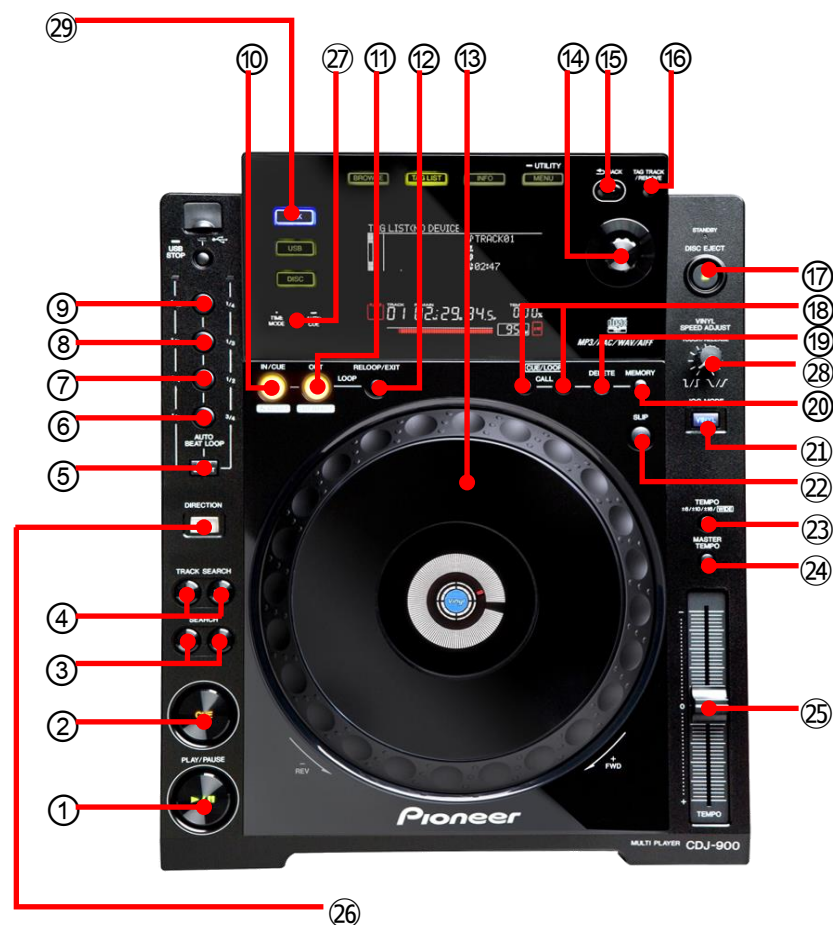


Note:

- Caution for TRACK SEARCH
TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

No.	CDJ-900	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, 8, 3/4
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, 4, 1/2
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, 2, 1/3
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, 1, 1/4
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE / LOOP CALL While Loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	SLIP	SLIP
23	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	DIRECTION	FWD. / REV.
27	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
28	VINYL SPEED ADJUST	VINYL SPEED ADJUST
29	LINK	CONNECT TO rekordbox dj

■ CDJ-850

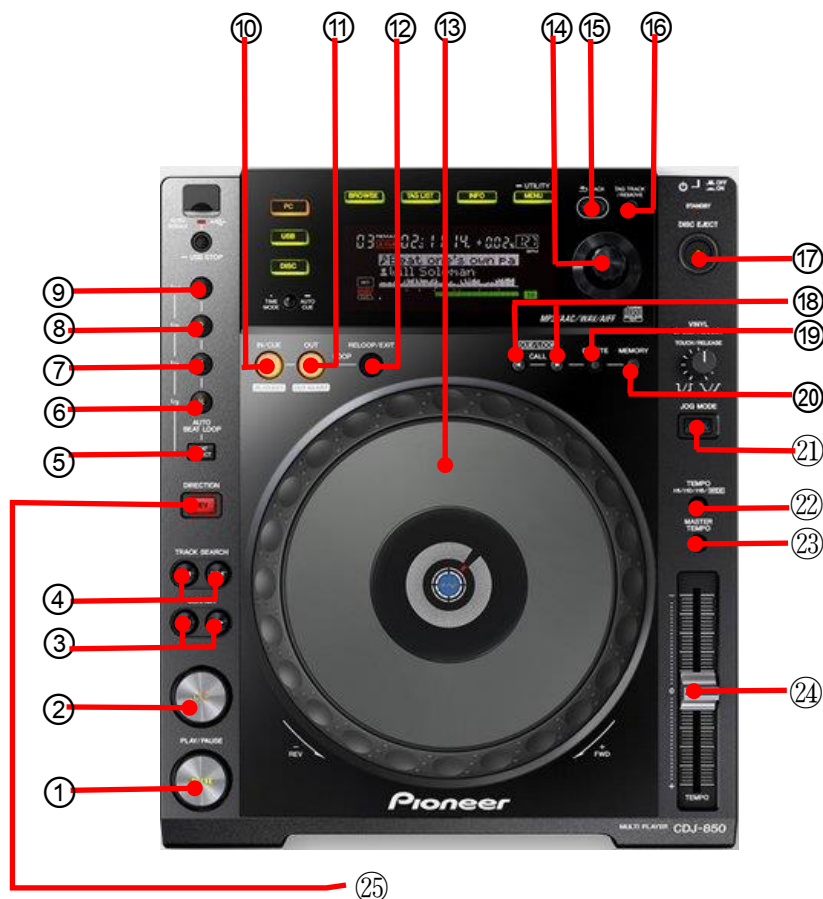


No.	CDJ-850	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (*)	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2,
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4,
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8,
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16,
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
23	MASTER TEMPO	MASTER TEMPO
24	TEMPO	TEMPO
25	DIRECTION	FWD. / REV.

Note:

- Caution for TRACK SEARCH

TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

CDJ-400

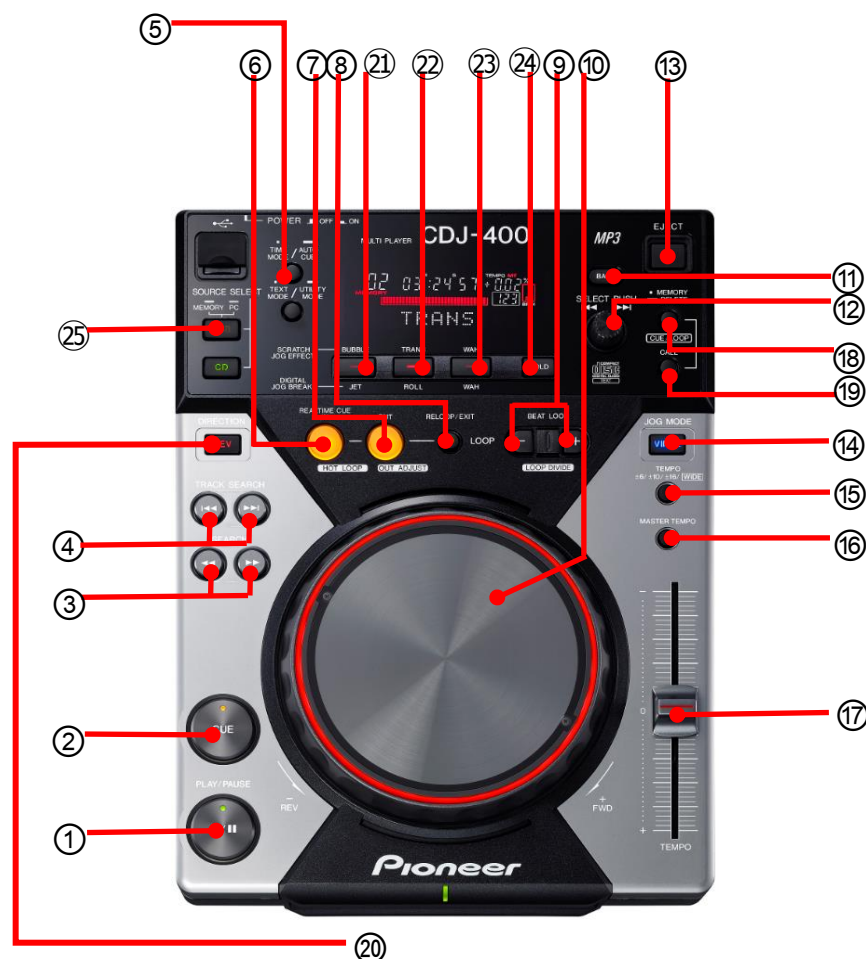

Note:


*1 TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.

*2 Call next Memory Cue. Previous Memory Cue cannot be called.
To call multiple Memory Cues, press TRACK SEARCH (PREV) to jump to
the beginning of the track and then press CUE/LOOP CALL.
You can call the Cues one by one.

*3 CDJ connected to DECK1/DECK3 controls FX1.
CDJ connected to DECK2/DECK4 controls FX2.

No.	CDJ-400	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※1)	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	MEMORY / DELETE	MEMORY Long press:DELETE
19	CUE / LOOP CALL (※2)	Call Next Memory Cue/Loop
20	DIRECTION	FWD. / REV.
21	BUBBLE/JET (※3)	FX1 ON/OFF
22	TRANS/ROLL (※3)	FX2 ON/OFF
23	WAH/WAH (※3)	FX3 ON/OFF
24	HOLD (※3)	RELEASE FX
25	USB SELECT (PC)	CONNECT TO rekordbox dj

CDJ-350

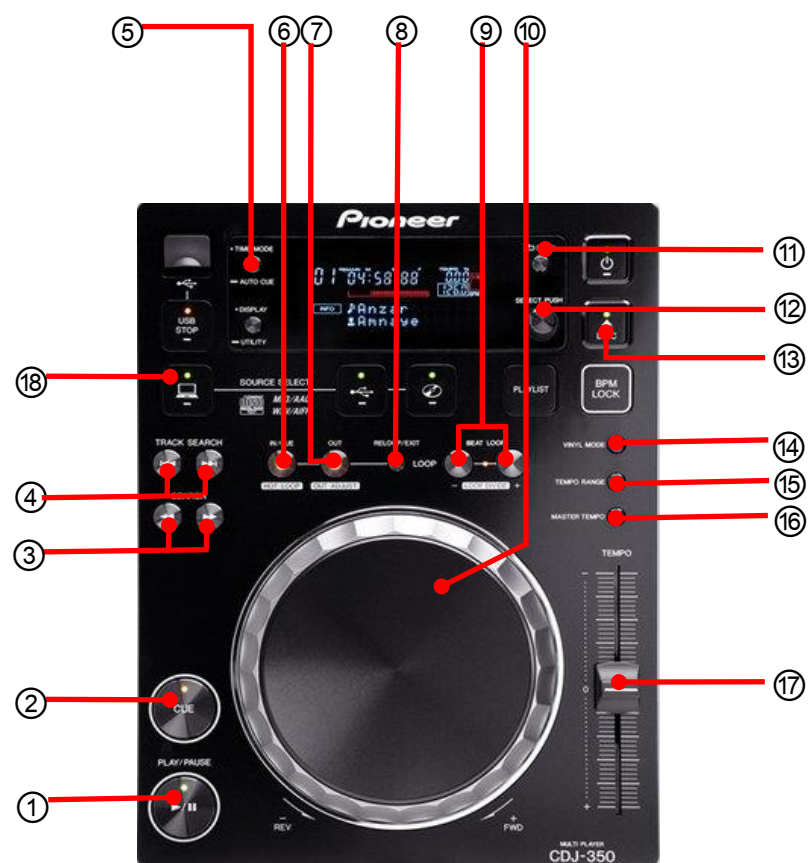

No.	CDJ-350	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH (※)	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	COMPUTER	CONNECT TO rekordbox dj

Note:

- Caution for TRACK SEARCH

TRACK SEARCH on DECK2-4 is available for only two tracks:
either the track listed just before and after the track loaded to DECK1.