


Re: Deluxe Four Door Agalite Display Assembly Instructions

Ref. Num: 6134 - Agalite Four Door Display

Rev. Date: 04-07-07

How to Build an Agalite Four Door Display

1. Take Inventory of your display components using the parts list and check for damage.
2. Study the exploded view below and familiarize yourself with the location of the parts.
3. Ensure you have a 3/8" socket and ratchet wrench before you begin assembly.
4. Take the eight 48" sections of the 1D02 horizontal rails, two 11" x 48" large blank sign panels, two Agalite 11" x 48" large sign panels and assemble four boxes per the drawing. Hold them together using rubber bands (optional).
5. Do the same with the eight 24 3/8" horizontal rail sections, two 4" x 24 1/2" blank small sign panels, two Agalite 11" x 48" small sign panels and assemble four boxes per the drawing. Hold them together using rubber bands (optional).
6. Begin assembling the boxes to the vertical posts using the 1/4 X 1 1/4" lag screws per the drawing (notice the holes drilled into the posts, the holes closest together go at the bottom).
7. Notice that the 24 3/8" rails are shorter than the panels. Ensure the panels align with the slots in the vertical posts and lock into place when tightening the screws.
8. Snap the end post caps into place on the vertical posts.
9. You are now ready to install two 24" standard height swing doors and two 48" special height shower sliders (or in-line door and panels, standard height).

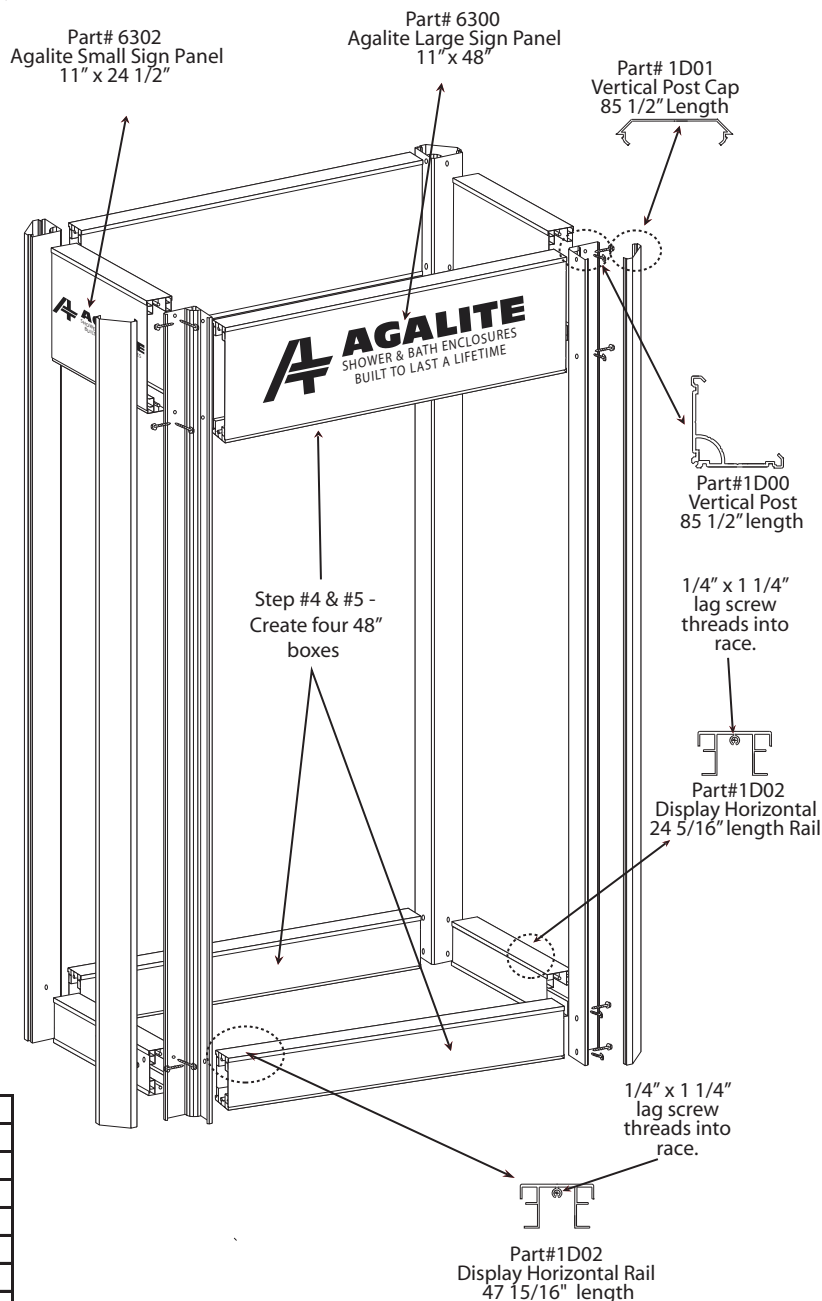

Parts List - Agalite 4 Door Display			
QTY.	Part #	Description	Size
4	1D00	Display Vertical Post	85 1/2"
4	1D01	Display Vertical Cap	85 1/2"
8	1D02	Display Horizontal Rail	24 3/8"
8	1D02	Display Horizontal Rail	47 15/16"
2	6300	Agalite Sign Panel - Large	11" X 48"
2	6302	Agalite Sign Panel - Small	11" X 24 1/2"
2	6304	Blank Signs - Large	11" X 48"
2	6310	Blank Signs - Small	4" X 24 1/2"
32	2120N	Lag Screws	1/4" X 1 1/4"
1	6134	Instruction Sheet	

Additional copies of the #6134 - Agalite 4-door Assembly Instructions can be or download from the Dealer Tools section of the Agalite.com website.

Technical Support Hotline: (WA)1-800-237-8802 or (CO)1-800-269-8342