



Issue No. 02	Rev. No: 00	Effective Date: 01.11.2019	SOP/INST/053
Issued By: M.R		Approved By: HOD - INSTRUMENTATION	
SOP for LIMS Server Startup			

Procedure:

- Ensure Power supply cable was connected and Power LED was glowing at rear side of the server.


- Press the power button to startup the server and Ensure all hard disk power LED is glowing and Hard disk Communication LED is blinking in green color.

- Wait until display of log in window. If there is no progress in startup or Login window not displayed with in 5 Min please contact the concern for further support.


Issue No. 02	Rev. No: 00	Effective Date: 01.11.2019	SOP/INST/053
Issued By: M.R		Approved By: HOD - INSTRUMENTATION	
SOP for LIMS Server Startup			



- Press Ctrl-Alt-Del Button and provide User name & password to login the system.

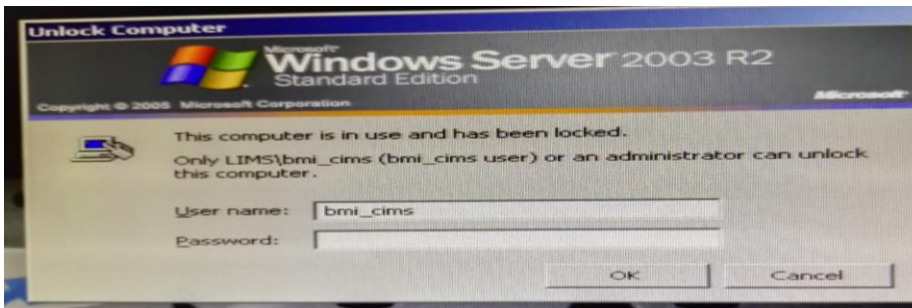

- Ensure PN1 and PN2 Networking cables are connected in rear side of the server.

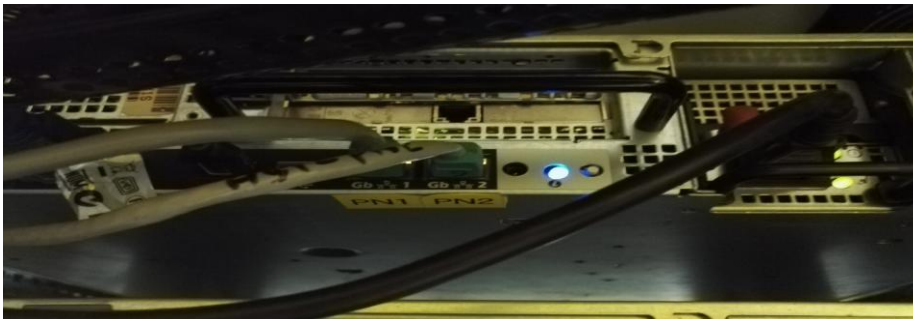


- Ensure PN1 & PN2 Networks is connected at right bottom of the system.



**DALMIA CEMENT (B) LIMITED – CEMENT PLANT
ARIYALUR
INSTRUMENTATION MANUAL**



Issue No. 02	Rev. No: 00	Effective Date: 01.11.2019	SOP/INST/053
Issued By: M.R		Approved By: HOD - INSTRUMENTATION	
SOP for LIMS Server Startup			

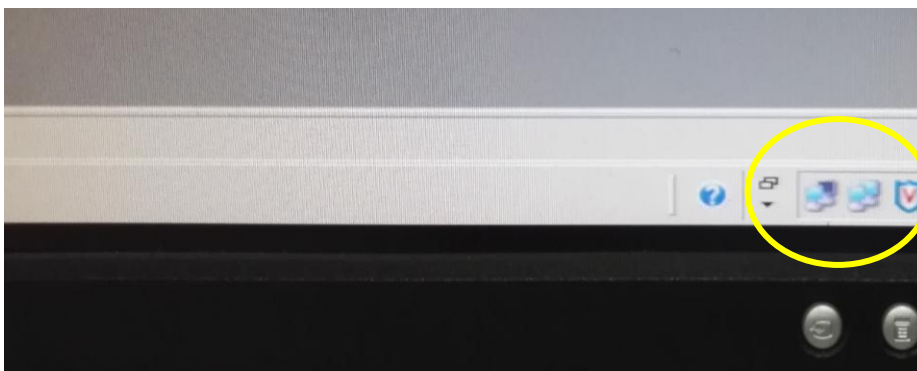


- Open the internet explorer and type the following address and ensure all services are running.
<http://localhost/km>
- Ensure X mark for all the services in Running Column.

Issue No. 02	Rev. No: 00	Effective Date: 01.11.2019	SOP/INST/053
---------------------	--------------------	-----------------------------------	---------------------

Issued By: M.R	Approved By: HOD - INSTRUMENTATION
-----------------------	---

SOP for LIMS Server Startup

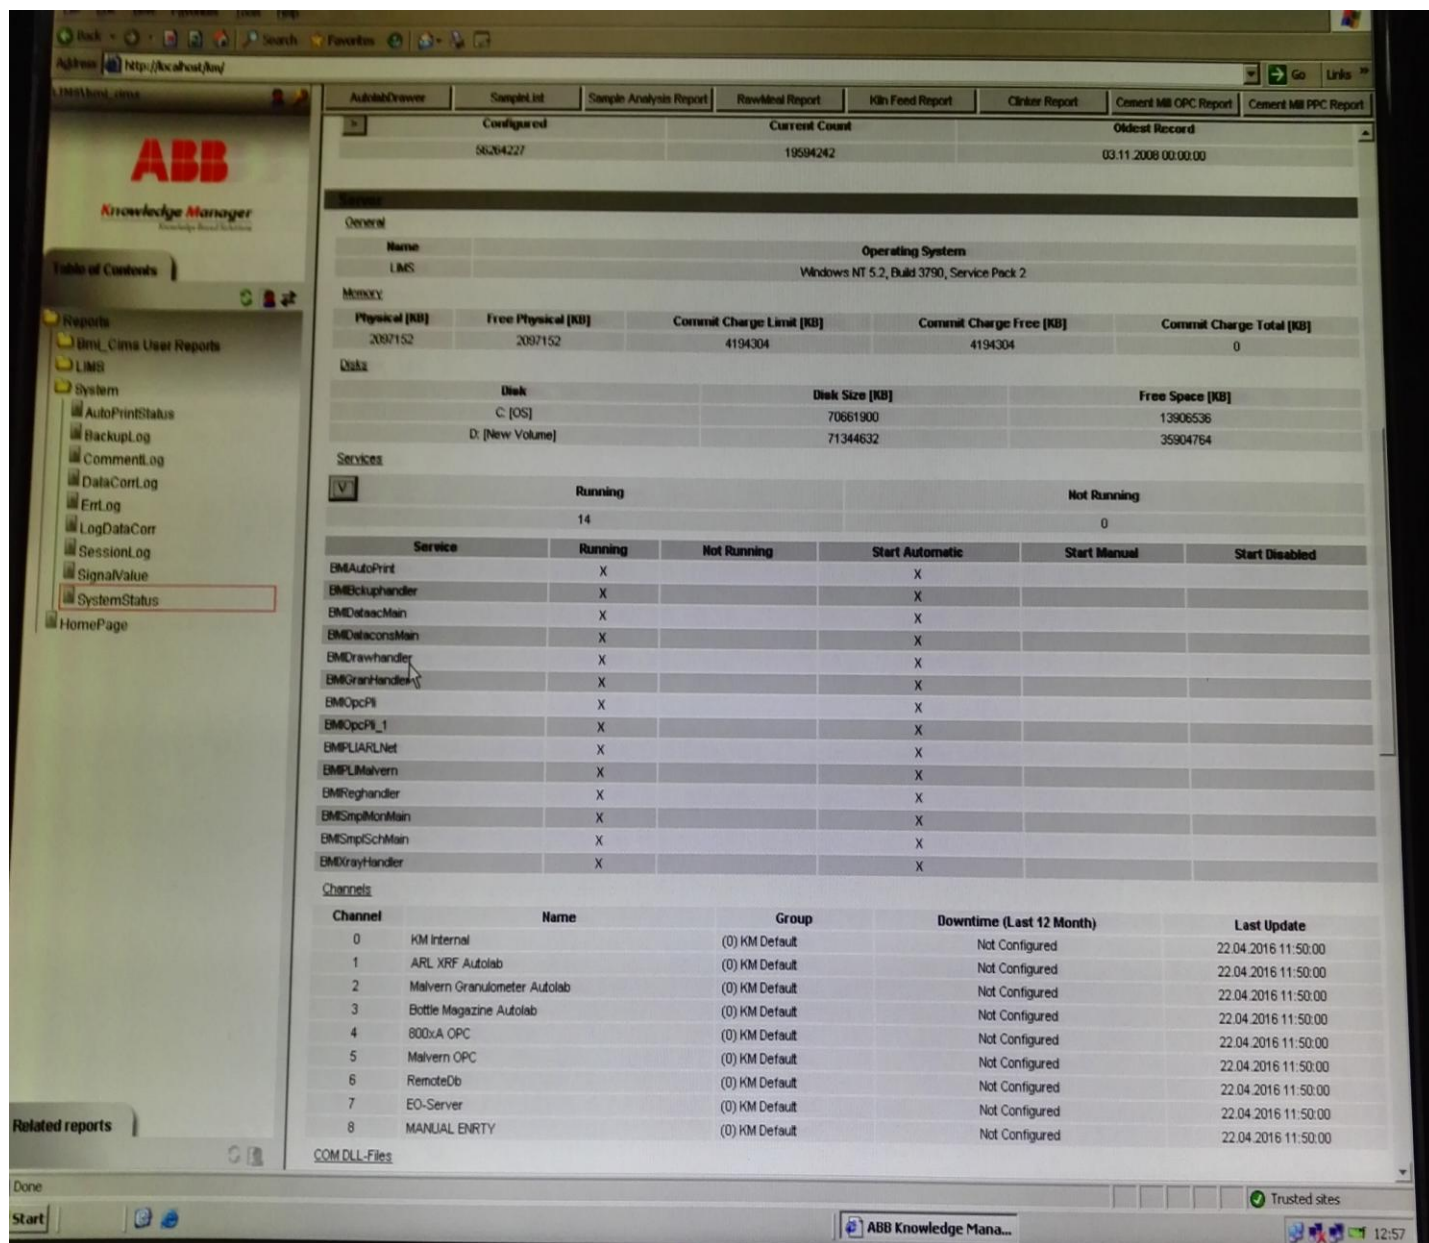

➤ Now the system is ready for operation.