

Issue No. 01	Rev. No: 02	Effective Date: 20.09.2017	SOP/INST/051
Issued By: M.R		Approved By: HOD - INSTRUMENTATION	
SOP for Aspect Server Startup			

Procedure:

- Ensure Power supply cable was connected and Power LED was glowing at rear side of the server.




- Press the power button to startup the server and Ensure All hard disk power LED is glowing and Hard disk Communication LED is blinking in green color.




- Wait until display of log in window. If there is no progress in startup or Login window not displayed with in 5 Min please contact the concern for further support.


Issue No. 01	Rev. No: 02	Effective Date: 20.09.2017	SOP/INST/051
Issued By: M.R		Approved By: HOD - INSTRUMENTATION	
SOP for Aspect Server Startup			

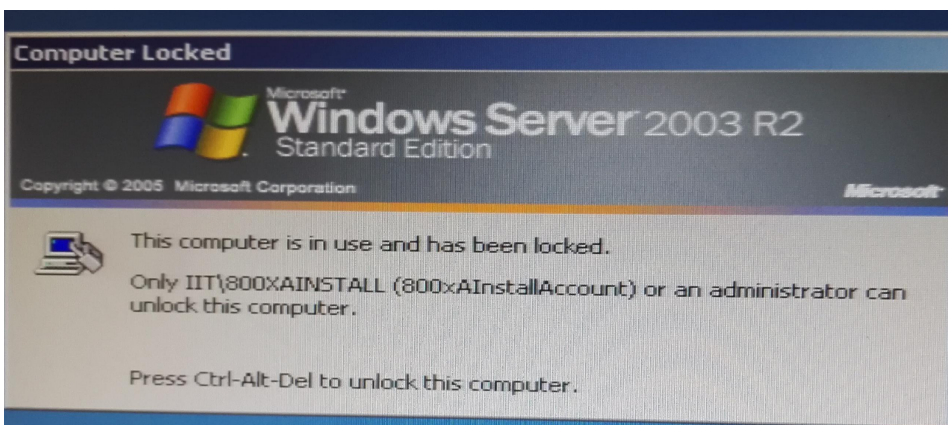

- Press Ctrl-Alt-Del Button and provide User name & password to login the system.

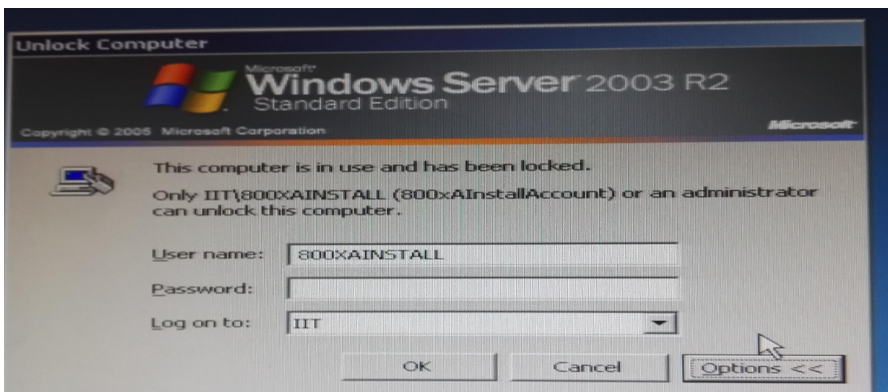

- Ensure PN1& PN2 Networking cables are connected in rear side of the server.

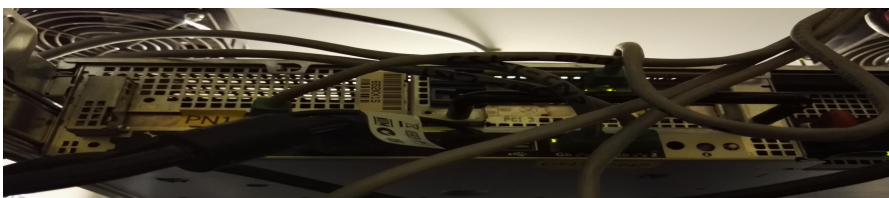

- Ensure PN1 & PN2 Networks is connected at right bottom of the system.

Issue No. 01

Rev. No: 02


Effective Date: 20.09.2017

SOP/INST/051


Issued By: M.R

Approved By: HOD - INSTRUMENTATION

SOP for Aspect Server Startup

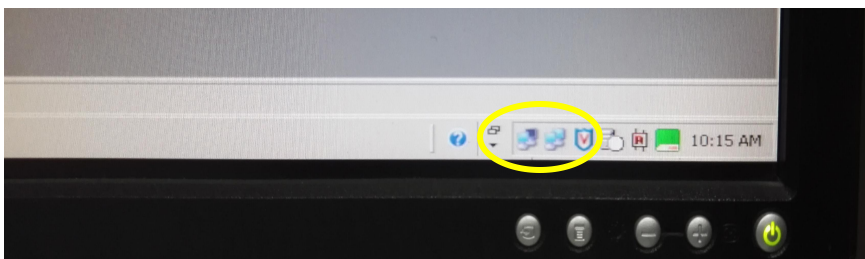

- Ensure AFW icon is green color in bottom right corner of the system after login.

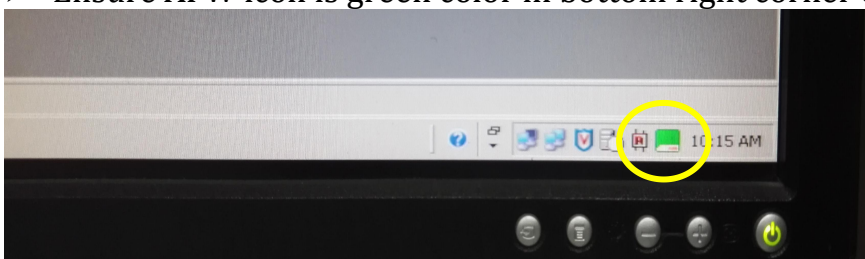

- Double click the AFW icon and ensure all services are green color which is related to Connectivity server.

Issue No. 01	Rev. No: 02	Effective Date: 20.09.2017	SOP/INST/051
---------------------	--------------------	-----------------------------------	---------------------

Issued By: M.R	Approved By: HOD - INSTRUMENTATION
-----------------------	---

SOP for Aspect Server Startup

Afw Service Connection Status -- DCBL

File View 101: AS1 01

Status	Service	Group	Provider	Node	Ignored	Areas: 1
●	Messenger Server	SMS_DCAS1	SMS_DCAS1	DCAS1	False	✓✓✓
●	Calculation Server	IM_IMS	IM_Calculation Server_IMS	DCAS1	False	✓✓✓
●	Time	Basic	Time_DCAS1	DCAS1	False	✓✓✓
●	Time	Basic	Time_CS1	CS1	False	✓✓✓
●	Time	Basic	Time_CS2	CS2	False	✓✓✓
●	Time	Basic	Time_IMS	IMS	False	✓✓✓
●	Time	Basic	Time_CS3	CS3	False	✓✓✓
●	Time	Basic	Time_DCAS2	DCAS2	False	✓✓✓
●	Event Collector	ABB 800xA Soft Alarms OPC Server	Event Collector_DCAS1	DCAS1	False	✓✓✓
●	Event Collector	ABB 800xA Soft Alarms OPC Server	Event Collector_DCAS2	DCAS2	False	✓✓✓
●	Event Collector	IM_IMS	IM_Event Collector_IMS	IMS	False	✓✓✓
●	Event Collector	ABB 800xA System Message Server	Event Collector_DCAS1	DCAS1	False	✓✓✓
●	Event Collector	ABB 800xA System Message Server	Event Collector_DCAS2	DCAS2	False	✓✓✓
●	Event Collector	AC800M_EVENT_COLLECTOR	EVENT_COLLECTOR_CS1	CS1	False	✓✓✓
●	Event Collector	AC800M_EVENT_COLLECTOR	EVENT_COLLECTOR_CS2	CS2	False	✓✓✓
●	Property Transfer	ems	ems1	CS1	False	✓✓✓
●	System Message Server	Basic	System Message Server_DCAS1	DCAS1	False	✓✓✓
●	System Message Server	Basic	System Message Server_DCAS2	DCAS2	False	✓✓✓
●	Scheduler	IM_IMS	IM_Scheduler_IMS	IMS	False	✓✓✓
●	BackupService	Basic	BackupService_DCAS1	DCAS1	False	✓✓✓
●	BackupService	Basic	BackupService_DCAS2	DCAS2	False	✓✓✓
●	Engineering Base Service	Basic	Engineering Base Service_DCAS1	DCAS1	False	✓✓✓
●	Engineering Base Service	Basic	Engineering Base Service_DCAS2	DCAS2	False	✓✓✓
●	Event Storage	Basic	Event Storage_DCAS1	DCAS1	False	✓✓✓
●	Event Storage	Basic	Event Storage_DCAS2	DCAS2	False	✓✓✓
●	System Status	Basic	System Status_DCAS1	DCAS1	False	✓✓✓
●	System Status	Basic	System Status_DCAS2	DCAS2	False	✓✓✓
●	OpCDA_Connector	OPCDA_Control_Network	OPCDA_CS1	CS1	False	✓✓✓
●	OpCDA_Connector	OPCDA_Control_Network	OPCDA_CS2	CS2	False	✓✓✓
●	OpCDA_Connector	OPCDA_EMS	OPADA_EMS	CS1	False	✓✓✓
●	Inform IT History	IM_MIS	IM_MIS	IMS	False	✓✓✓
●	Cross referencing server	Basic	Cross referencing server_DCAS1	DCAS1	False	✓✓✓
●	Cross referencing server	Basic	Cross referencing server_DCAS2	DCAS2	False	✓✓✓
●	Alarm Manager	Basic	Alarm Manager_DCAS1	DCAS1	False	✓✓✓
●	Alarm Manager	Basic	Alarm Manager_DCAS2	DCAS2	False	✓✓✓
●	File Set Distribution	Basic	File Set Distribution_DCAS1	DCAS1	False	✓✓✓
●	File Set Distribution	Basic	File Set Distribution_DCAS2	DCAS2	False	✓✓✓
●	Soft Alarms	Basic	Soft Alarms_DCAS1	DCAS1	False	✓✓✓
●	Soft Alarms	Basic	Soft Alarms_DCAS2	DCAS2	False	✓✓✓
●	AspectDirectory	Basic	AspectDirectory_DCAS1	DCAS1	False	✓✓✓
●	AspectDirectory	Basic	AspectDirectory_DCAS2	DCAS2	False	✓✓✓
●	Lock Server	Basic	Lock Server_DCAS1	DCAS1	False	✓✓✓
●	Lock Server	Basic	Lock Server_DCAS2	DCAS2	False	✓✓✓
●	Engineering XRef Service	Engineering XRef Service_G0	Engineering XRef Service_DCAS1	DCAS1	False	✓✓✓
●	Engineering XRef Service	Engineering XRef Service_G0	Engineering XRef Service_DCAS2	DCAS2	False	✓✓✓
●	Basic History	IM_IMS	Basic History_IMS	IMS	False	✓✓✓
●	Basic History	Basic	Basic History_CS1	CS1	False	✓✓✓
●	Basic History	Basic	Basic History_CS2	CS2	False	✓✓✓
●	Industrial IT Archive	IM_ARCHIVE	IM_ARCHIVE	IMS	False	✓✓✓

Start [Icons] Afw Service Connecti...

➤ Now the system is ready for operation.