

Production Supporting Systems in Factories

ระบบสนับสนุนการผลิตในโรงงานอุตสาหกรรม


Context

Scope

The `scope` of a particular context value.

- `Node` - only visible to the node that set the value
- `Flow` - visible to all nodes on the same flow (or tab in the editor)
- `Global` - visible to all nodes

Working on `flow` context

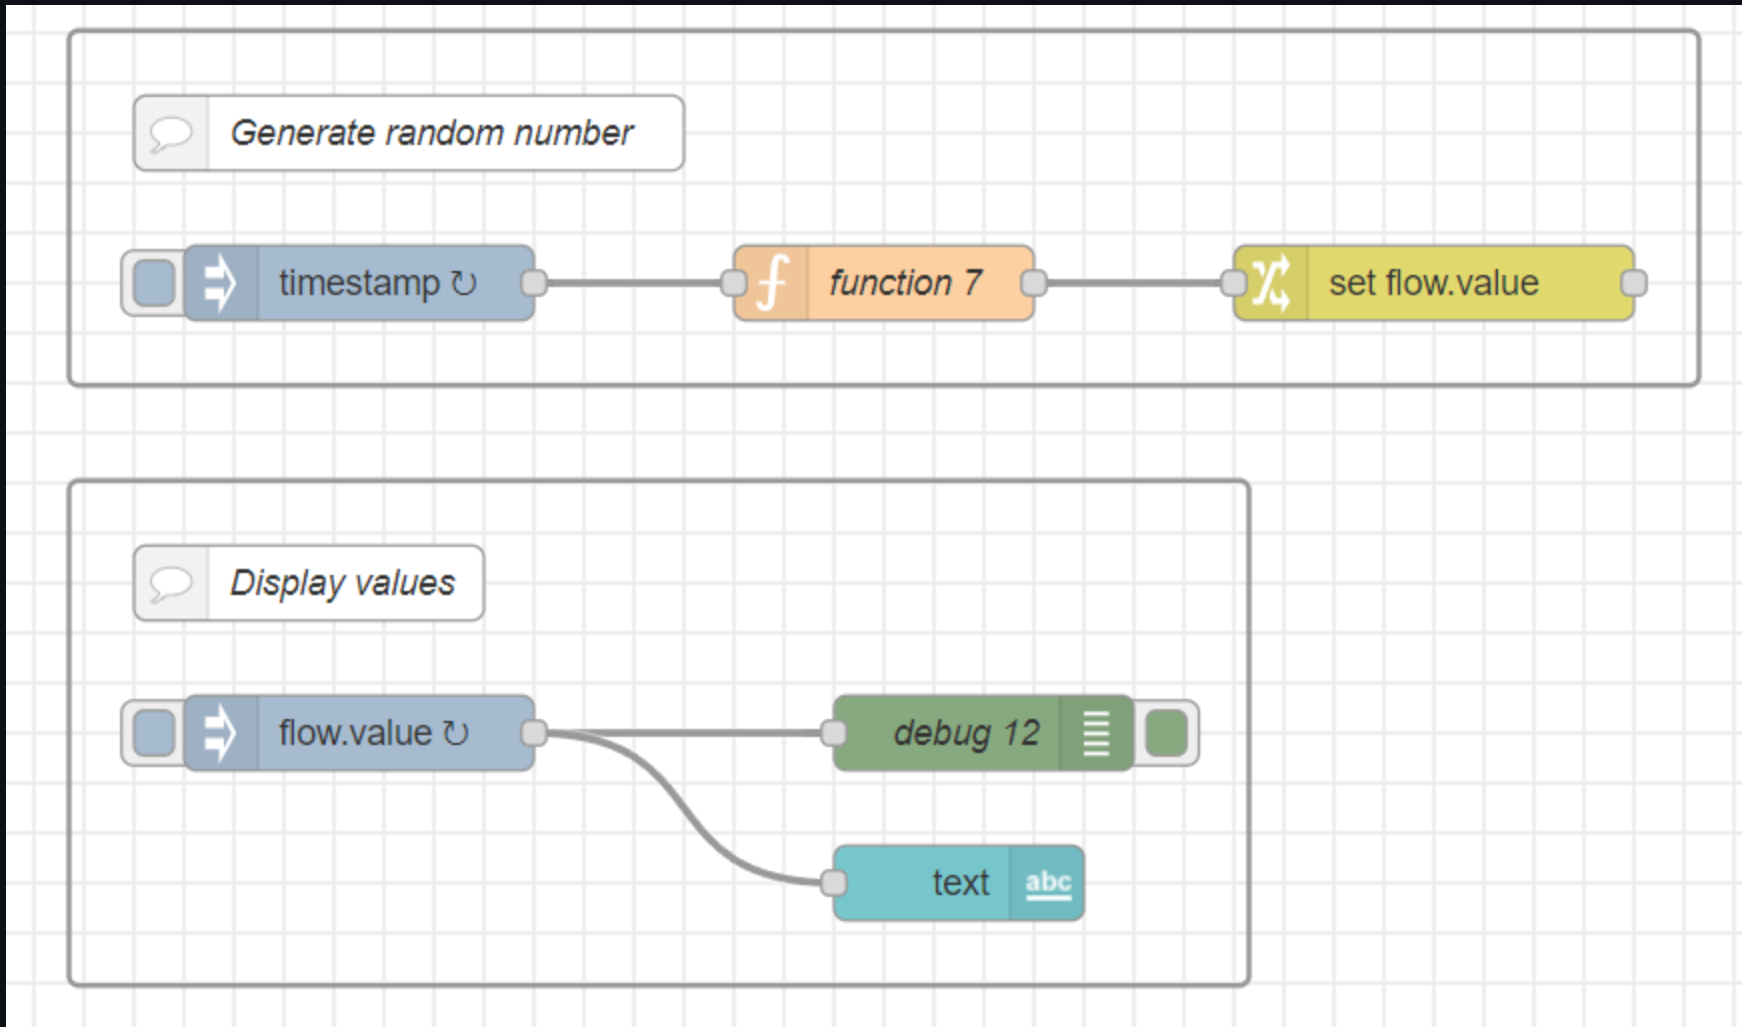





function node


```
msg.payload = Math.random();  
return msg;
```


change node

Edit change node



Delete Cancel Done

 **Properties**   

 **Name**

 **Rules**

▼

 to the value 

☐ Deep copy value

inject node

Edit inject node

Delete Cancel Done

⚙ Properties

📌 Name Name

msg. payload = ▼ flow. value x


msg. topic = ▼ a_z x

Sample flow


- Show random value (real time).
- Store the maximum value.

Home

Default

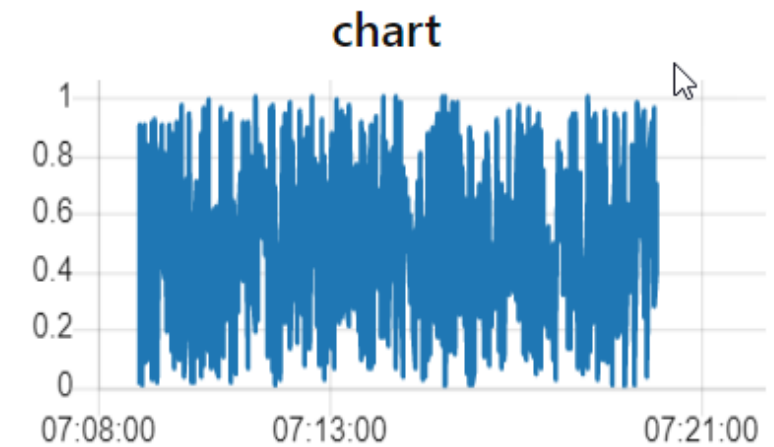

Max value **0.9996943595720056**

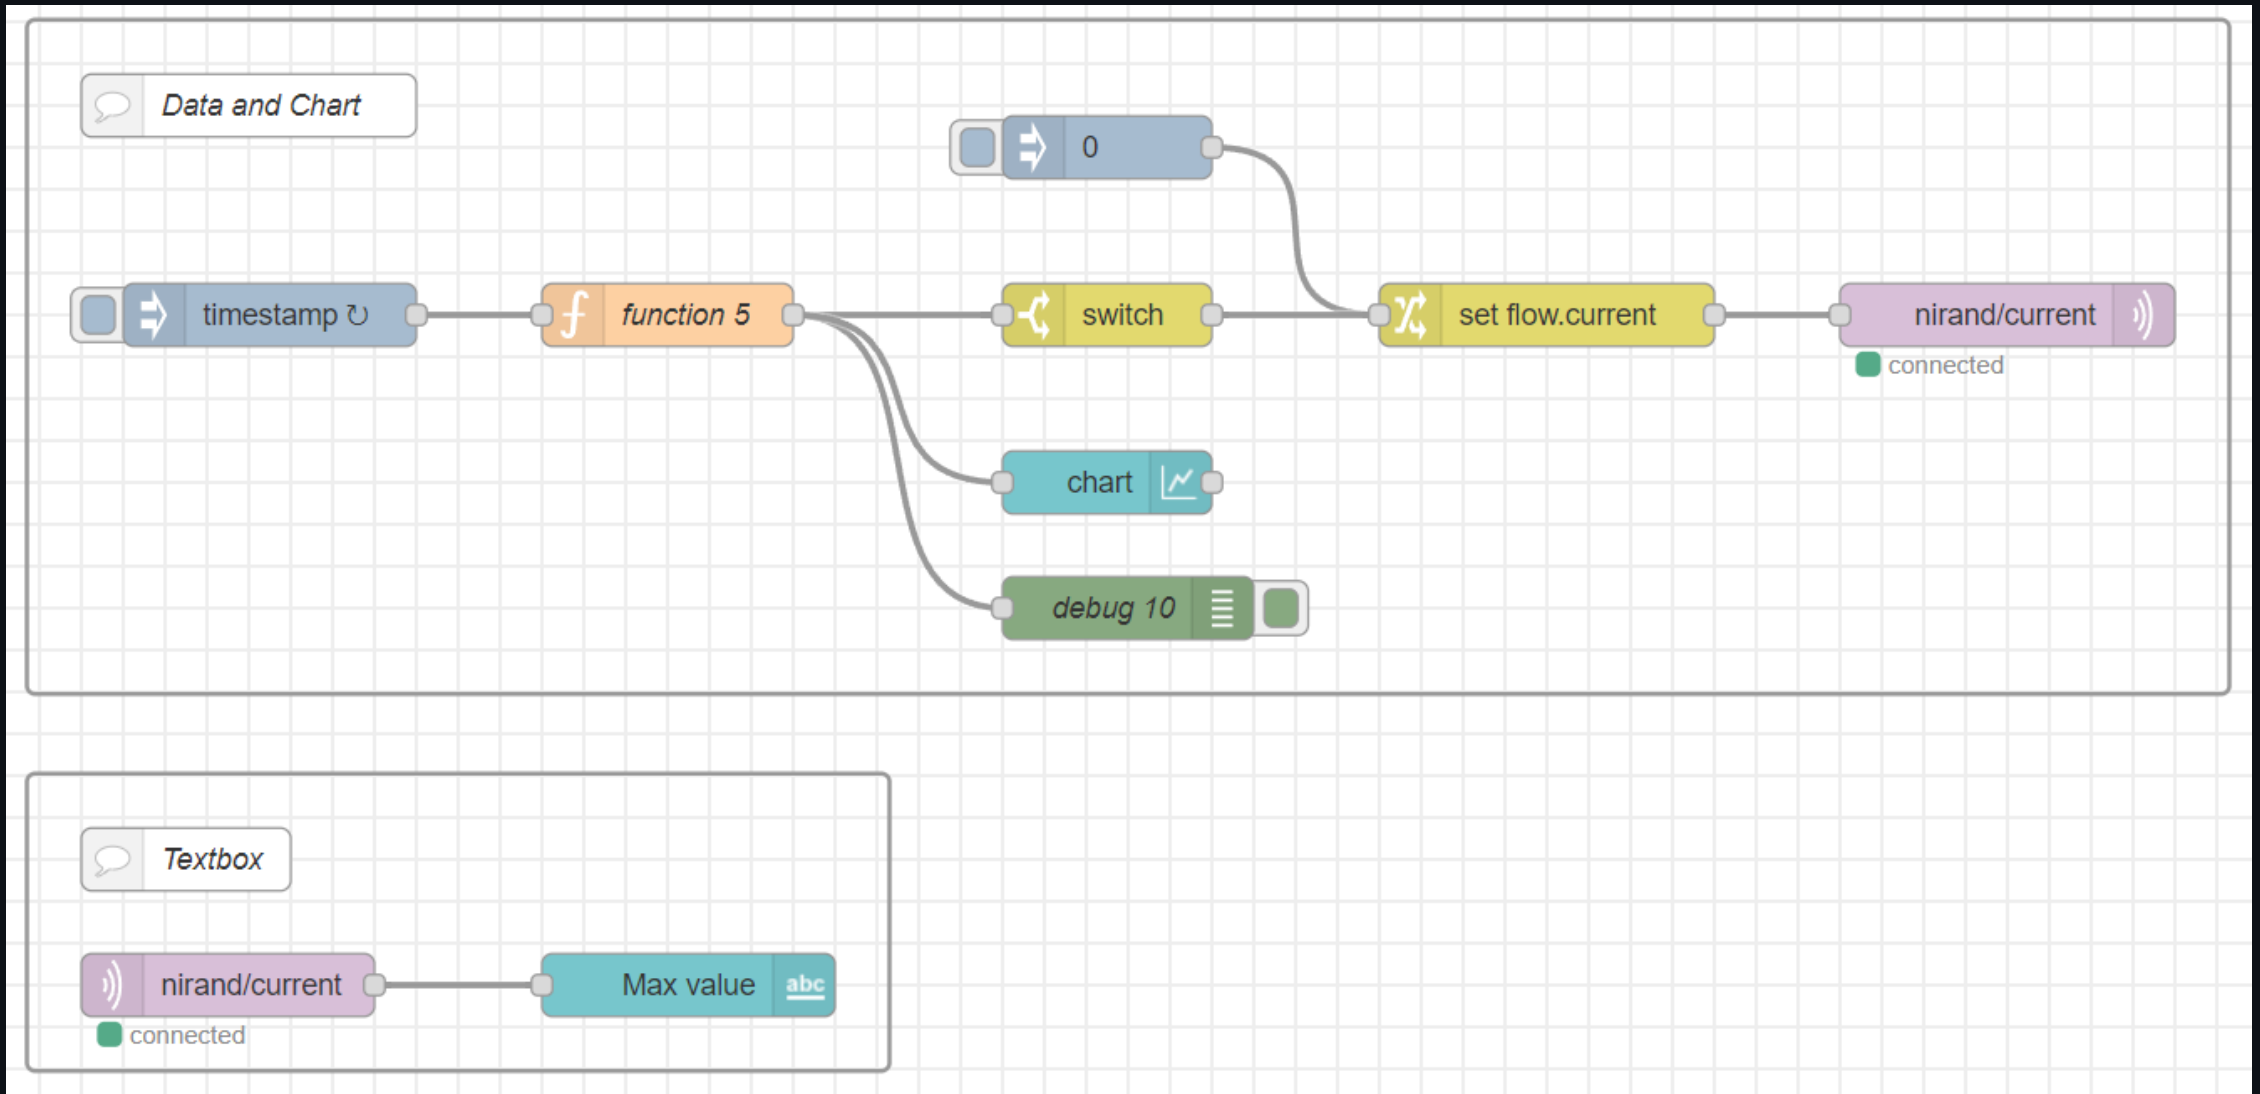

function node

```
msg.payload = Math.random();  
return msg;
```