



There are 8 pages of possible controls. Switching between pages is made using the rightmost column on the grid. Pressing (15,n) brings you to page n. Only three pages hold content for now

page 1

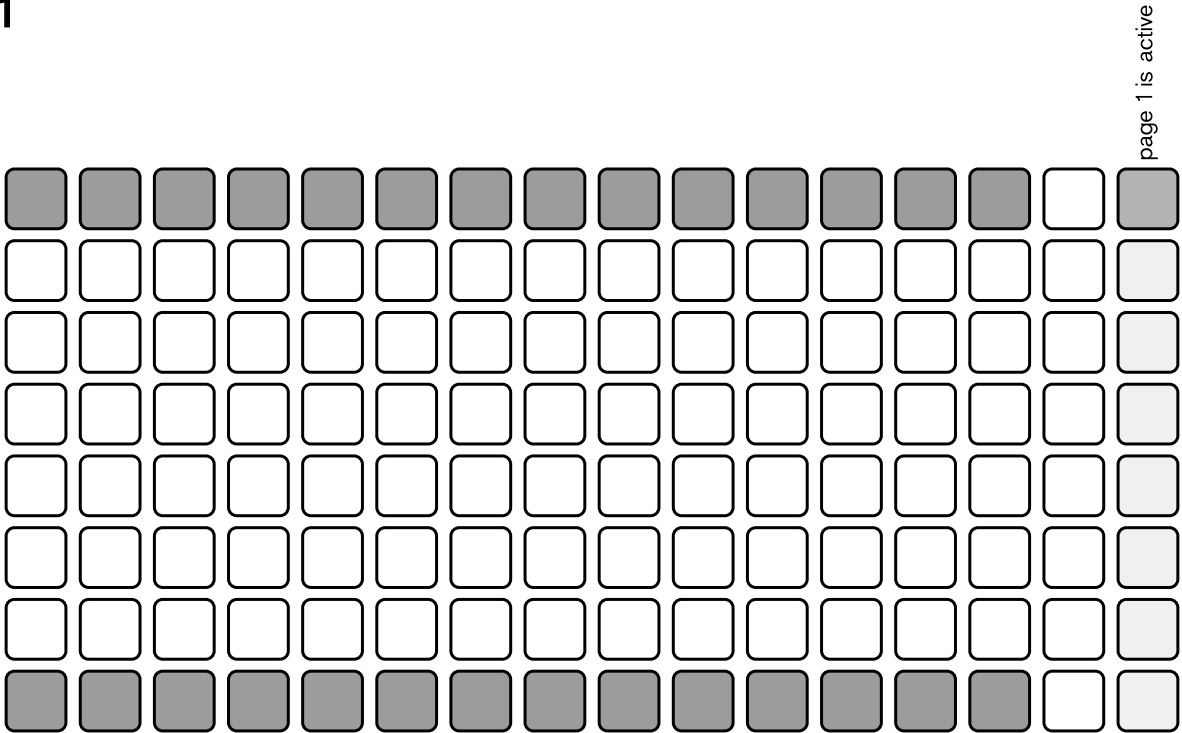


Page 1 contains 14 fine vertical faders. Each fader sends its value to the corresponding SC.CV unit (ports 1 to 14.)

page 2

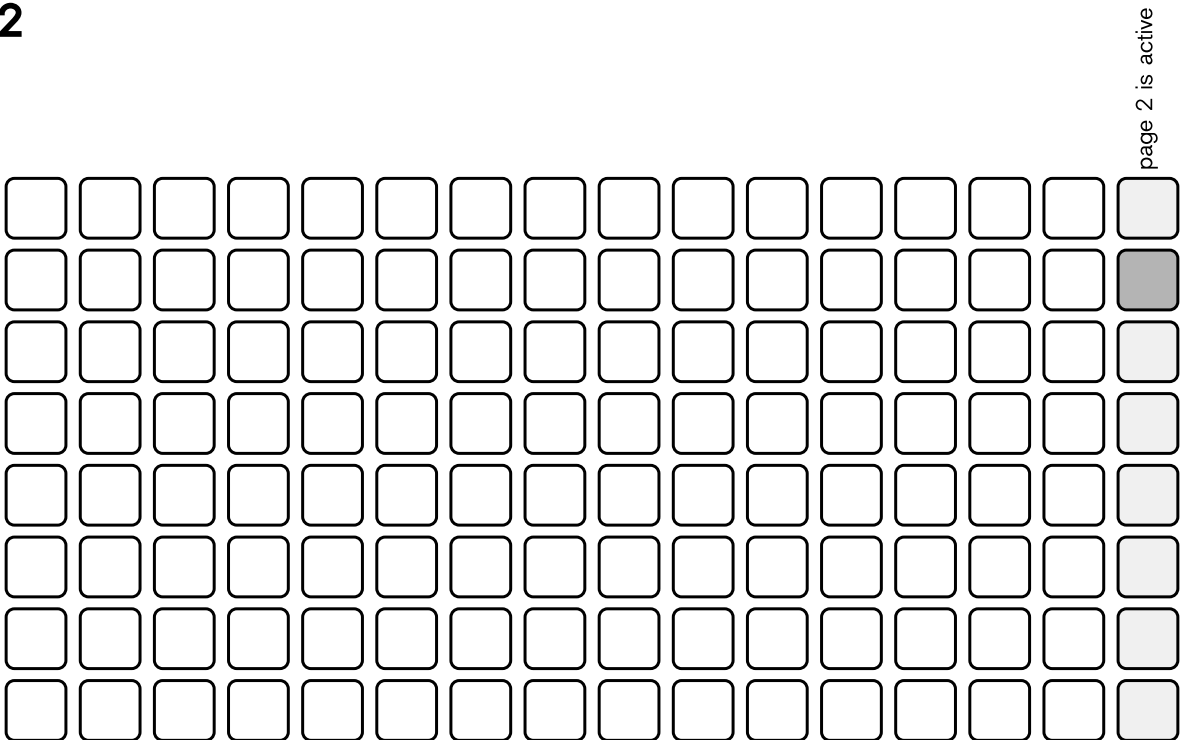


Page 2 contains nothing for now.

page 3

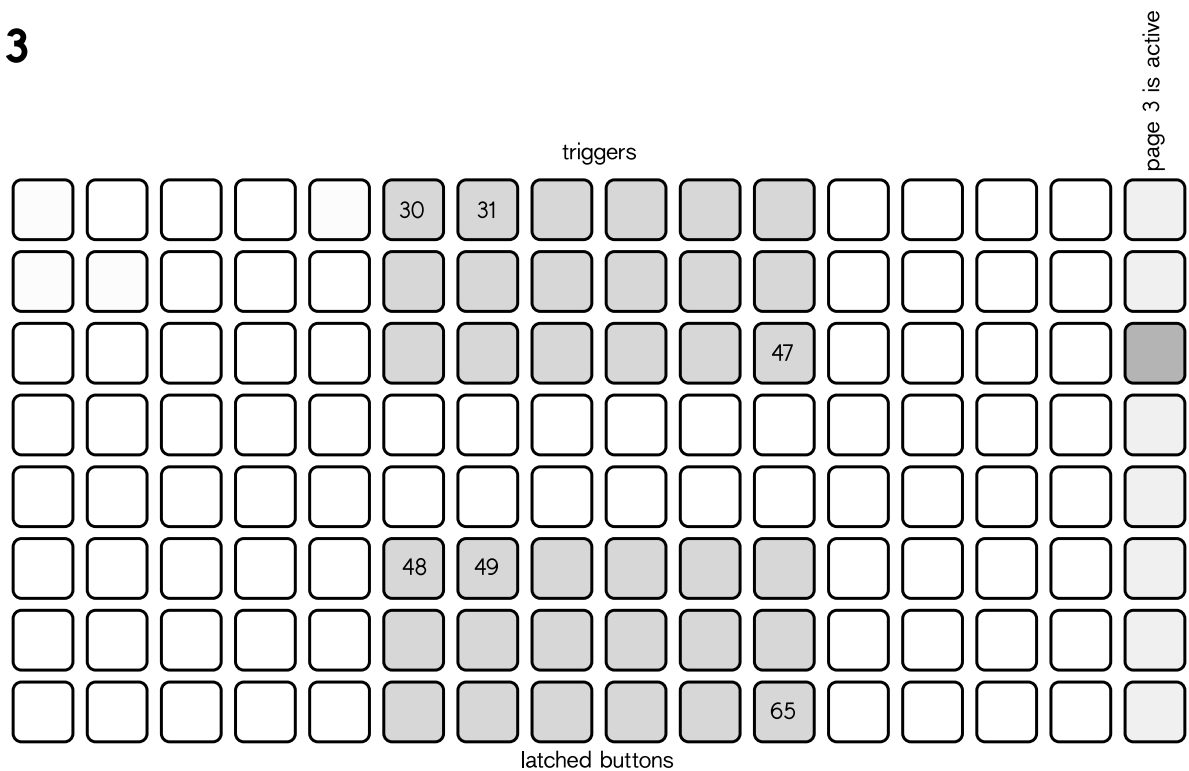

Page 3 features one group of triggers on top (SC,TR 30 to 47) and one group of latched buttons on the bottom (SC,TR 47 to 65).

page 4

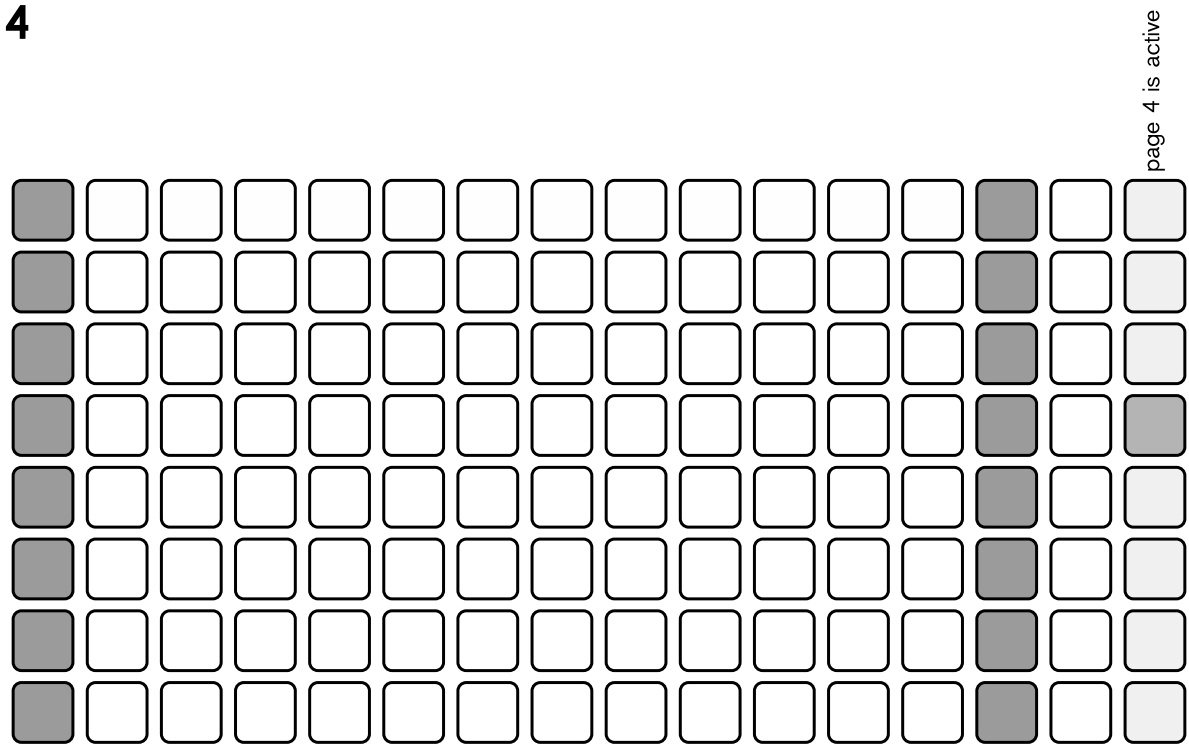

Page 4 features 8 horizontal fine faders (SC,CV 40 to 48)