

# PyAether 试用区服务器使用手册

## 目录

PyAether 试用区服务器使用手册 .....	1
1. 下载 VNC client .....	2
2. 使用 realvnc 登录服务器 .....	2
3. 设置桌面大小（可选） .....	5
4. 打开 terminal 的方式: .....	6

## Copyright and Proprietary Information

Copyright©2009-2024 Empyrean Technology Co., Ltd (or its subsidiaries). All rights reserved.

**Trademarks:** Empyrean PyAether is the trademark of Empyrean Technology Co., Ltd., and belongs to the property of Empyrean Technology Co., Ltd. For queries regarding Empyrean's trademarks, contact us at the following information.

### Contact Information:

Empyrean Technology Co., Ltd.  
2/F Building A, No.2, Lizezhonger Road, Chaoyang District,  
100102, P.R.China  
Email: [support@empyrean.com.cn](mailto:support@empyrean.com.cn)  
Telephone: +8610-84776888  
<http://www.empyrean.com.cn>

**Print Permission:** Unauthorized reproduction, transmission and/or translation of the materials of this document, in whole or in part, is prohibited without the written consent of Empyrean Technology Co., Ltd (or its subsidiaries).

**Disclaimer:** Information in this publication is subject to change without notice and does not represent a commitment on the part of Empyrean Technology Co., Ltd. The information contained herein is the proprietary and confidential information of Empyrean Technology Co., Ltd (and its subsidiaries) or its licensors, and is supplied subject to, and may be used only by Empyrean Technology Co., Ltd 's (and its subsidiaries') customer in accordance with, a written agreement between Empyrean (and its subsidiaries) and its customer. Except as may be explicitly set forth in such agreement, Empyrean Technology Co., Ltd (or its subsidiaries) does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Empyrean Technology Co., Ltd (and its subsidiaries) does not assume any liability for damages or costs of any kind that may result from use of such information.

## 1. 下载 VNC client

(如果已经有 VNC, 则忽略此步骤)

- 1、通过连接下载 realvnc 工具连接 vncserver 服务器


<https://www.realvnc.com/en/connect/download/viewer/>

下载完成后, 根据提示默认安装即可


## 2. 使用 realvnc 登录服务器

**注意:** 请勿自行启动 VNC server; 请严格按照给您的 vnc 端口进行填写。如果出现问题, 请及时联系管理员。

### 1) 输入 vnc 端口

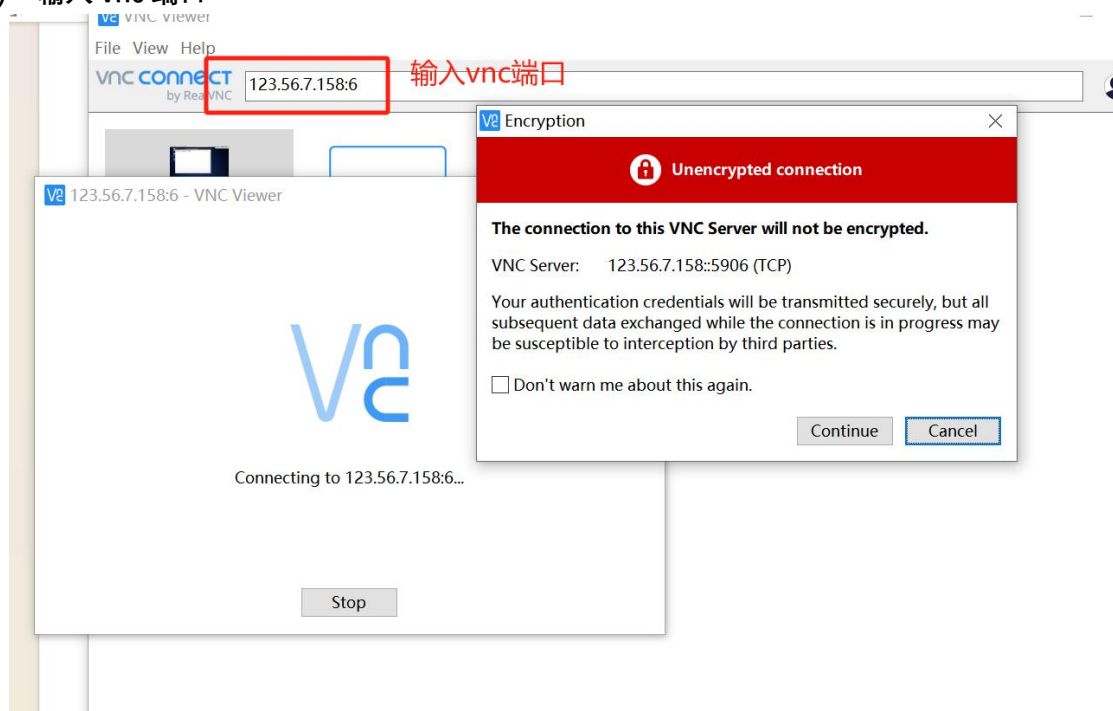


### 2) 输入密码

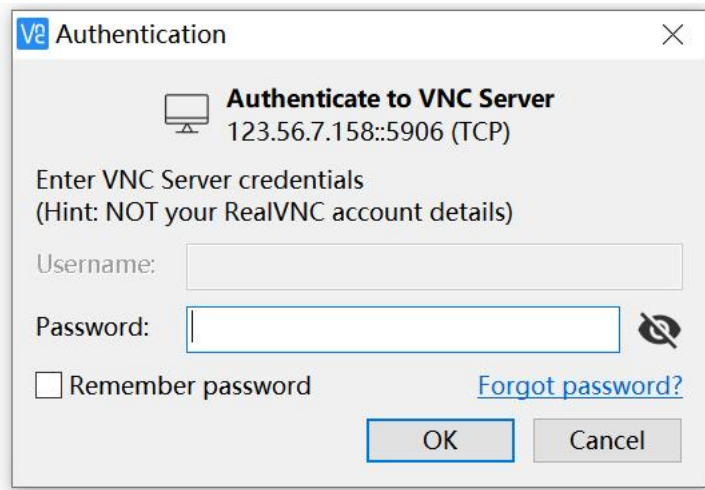


3) 再次输入密码 （密码相同）




进入到了 VNC

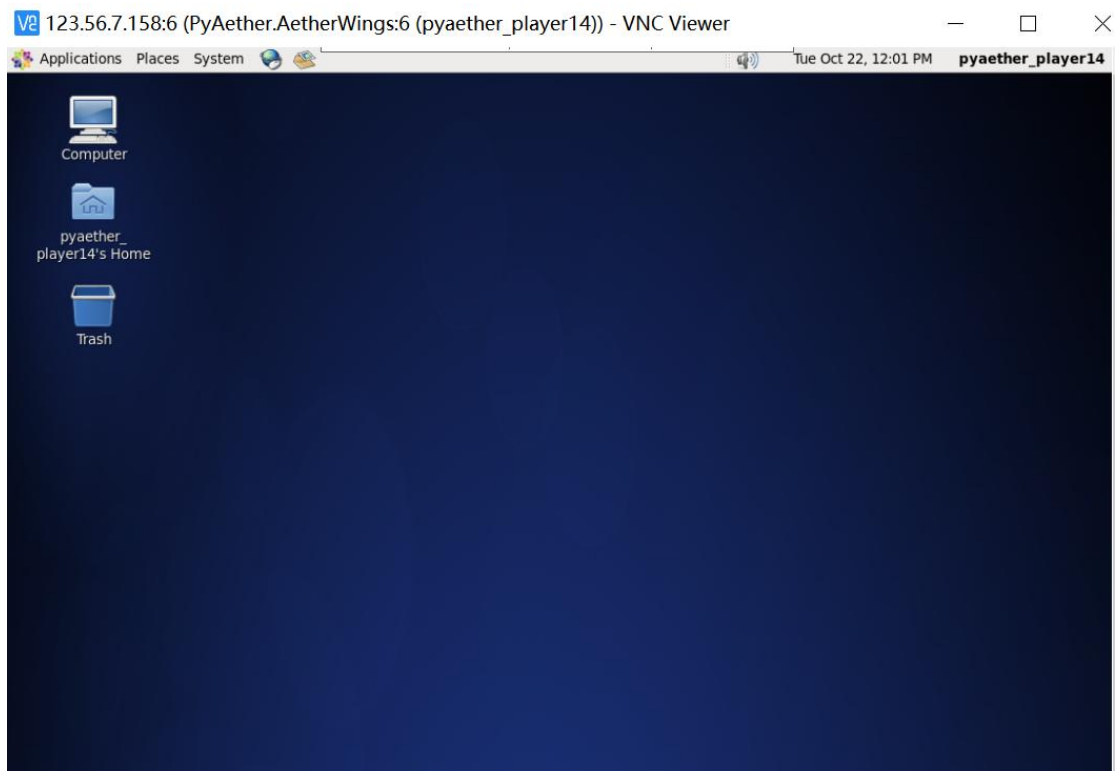

将报错信息关掉

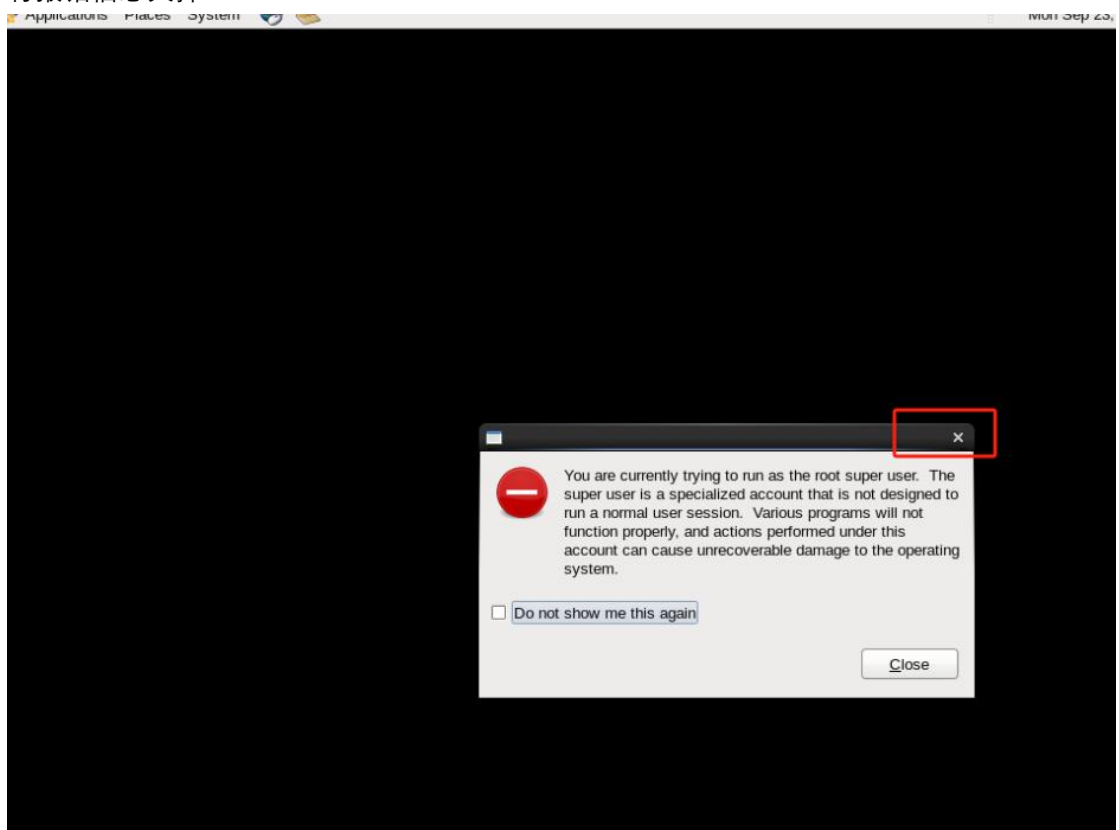


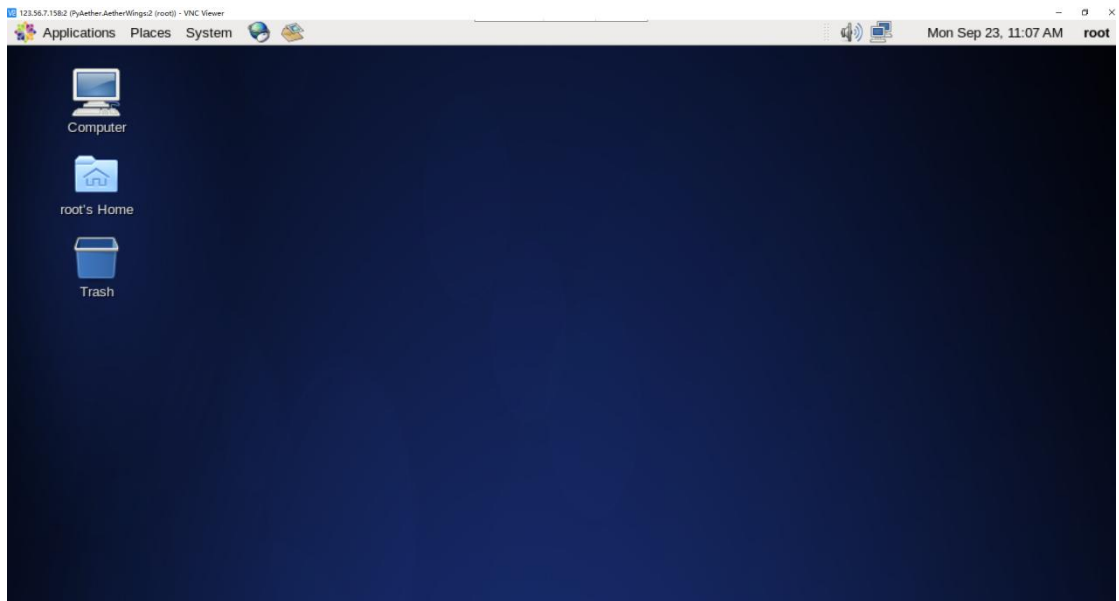

### 3. 设置桌面大小（可选）



按照如下图设置，选择 Medium 和 Automatic，OK。

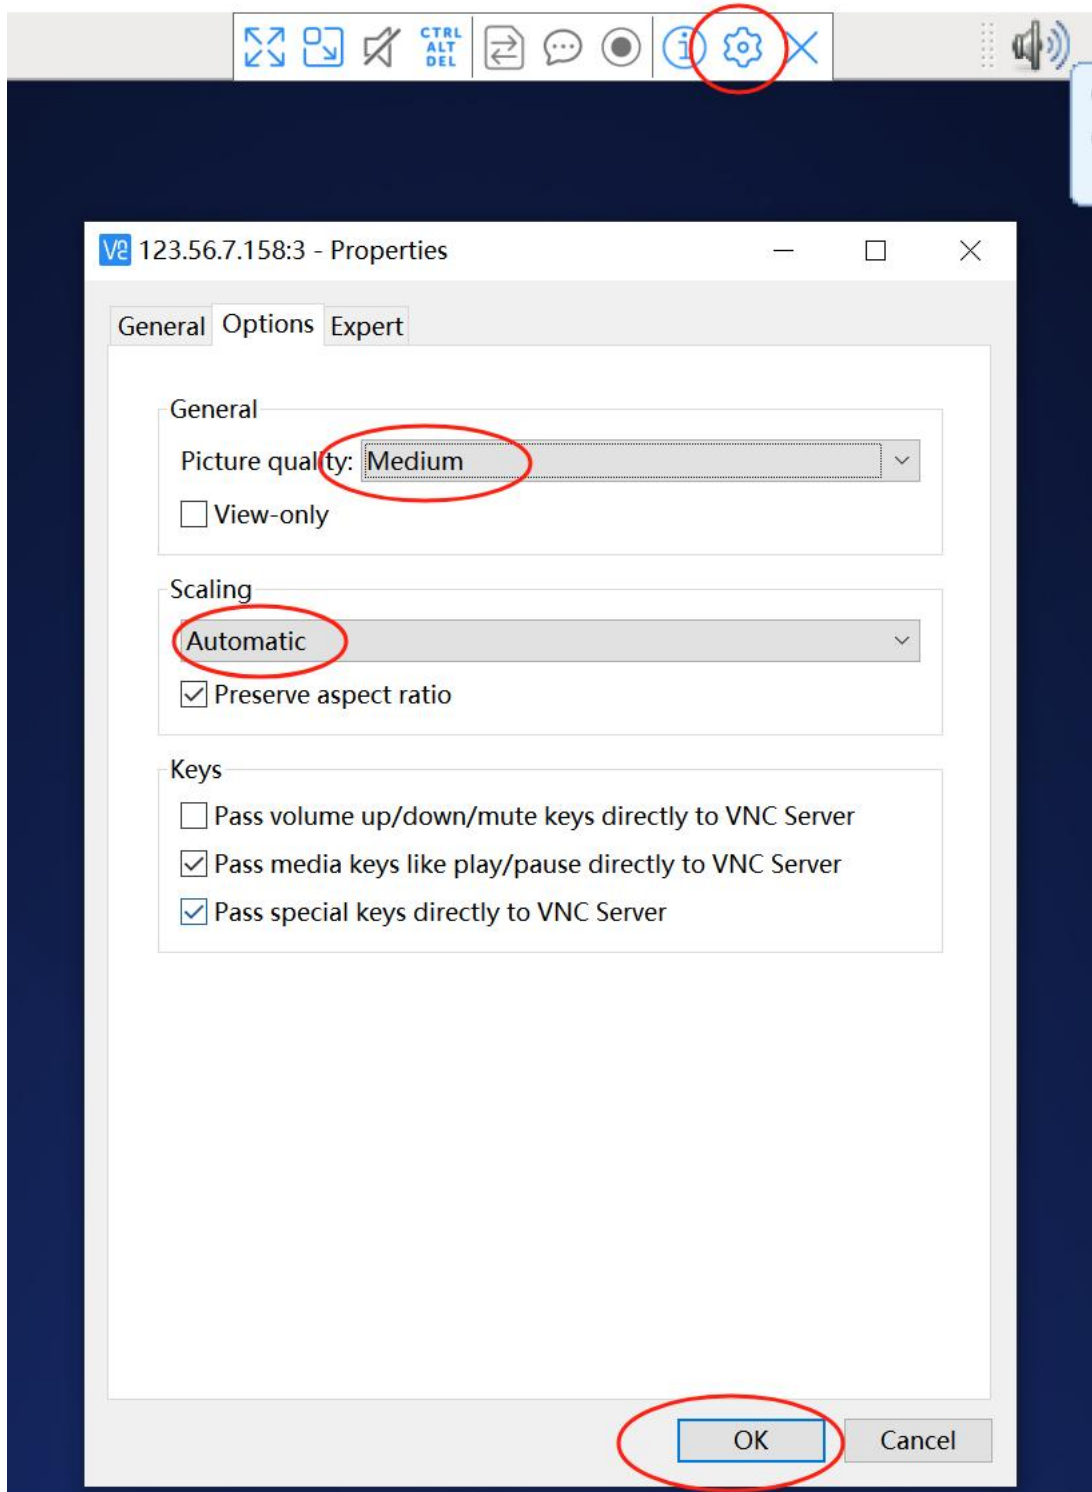

#### 4. 打开 terminal 的方式：

Applications---> System Tools----> Terminal

123.56.7.158:3 (PyAether.AetherWings:3 (pyaether\_player11)) - VNC Viewer

