

# REAR SEAT


## REAR SEAT

### Component Parts Location

### BENCH SEAT

To ESM

SEC. 880

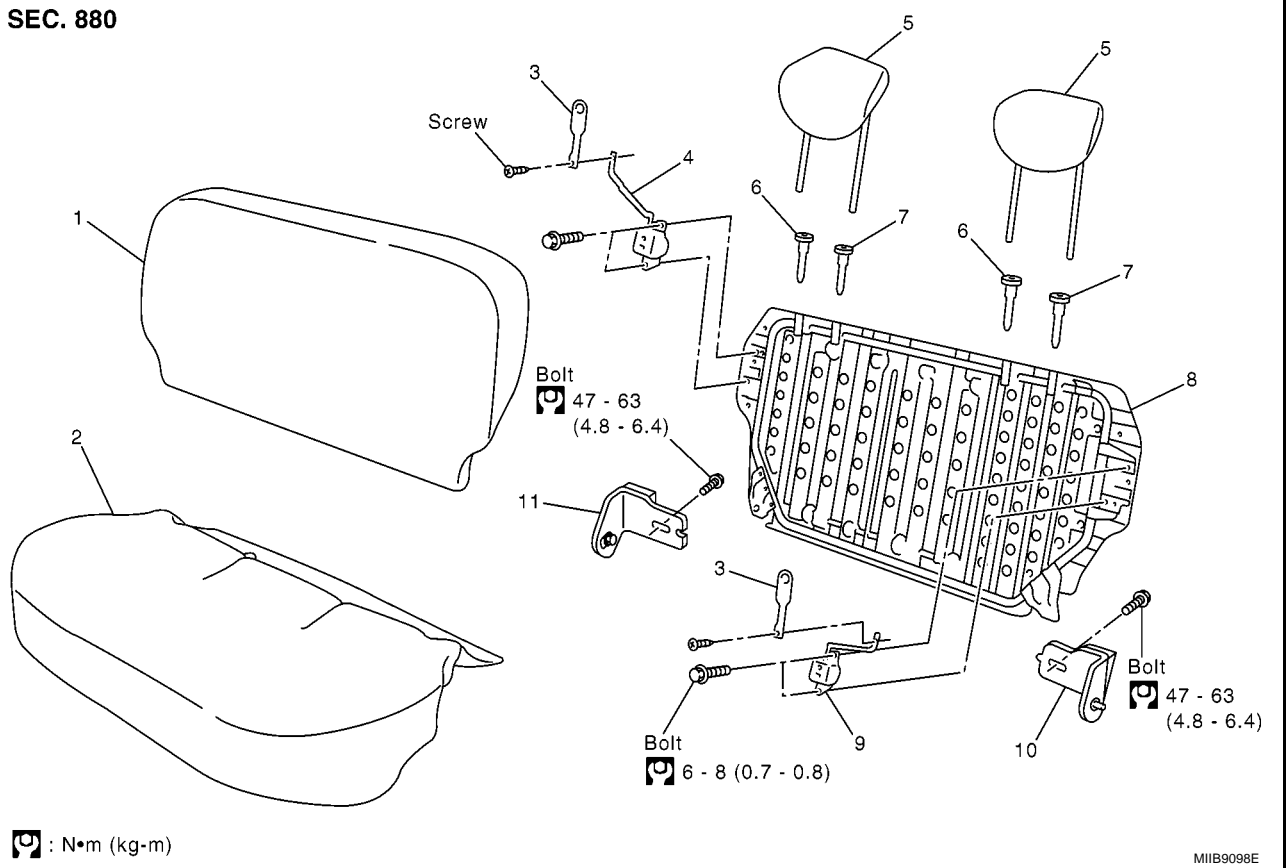


- |                                 |                                 |                           |
|---------------------------------|---------------------------------|---------------------------|
| 1. Rear seatback trim and pad   | 2. Seat cushion trim and pad    | 3. Seatback lock knob     |
| 4. Rear seat lock (RH)          | 5. Headrest                     | 6. Headrest holder (free) |
| 7. Headrest holder (locked)     | 8. Seatback frame               | 9. Rear seat lock (LH)    |
| 10. Rear seat side bracket (LH) | 11. Rear seat side bracket (RH) |                           |

# REAR SEAT

## SPLIT SEAT

SEC. 880

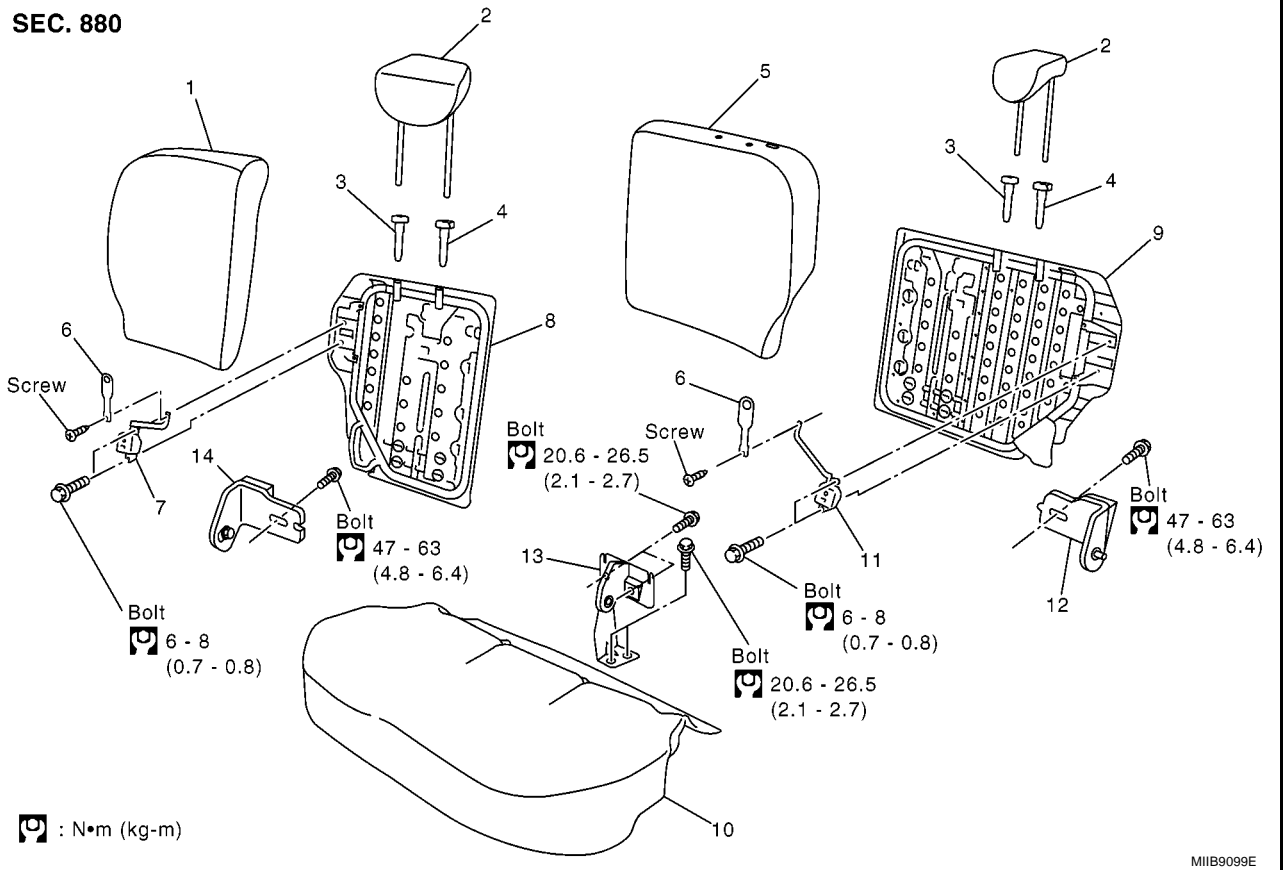


M11B9099E


- |                                    |                                    |                                 |
|------------------------------------|------------------------------------|---------------------------------|
| 1. Rear seatback trim and pad (RH) | 2. Headrest                        | 3. Headrest holder (free)       |
| 4. Headrest holder (locked)        | 5. Rear seatback trim and pad (LH) | 6. Seatback lock knob           |
| 7. Rear seat lock (RH)             | 8. Rear seatback frame (RH)        | 9. Rear seatback frame (LH)     |
| 10. Rear seat cushion assembly     | 11. Rear seat lock (LH)            | 12. Rear seat side bracket (LH) |
| 13. Rear center bracket (RH)       | 14. Rear seat side bracket (RH)    |                                 |

## REAR SEAT

### SLIDE SEAT

SEC. 880

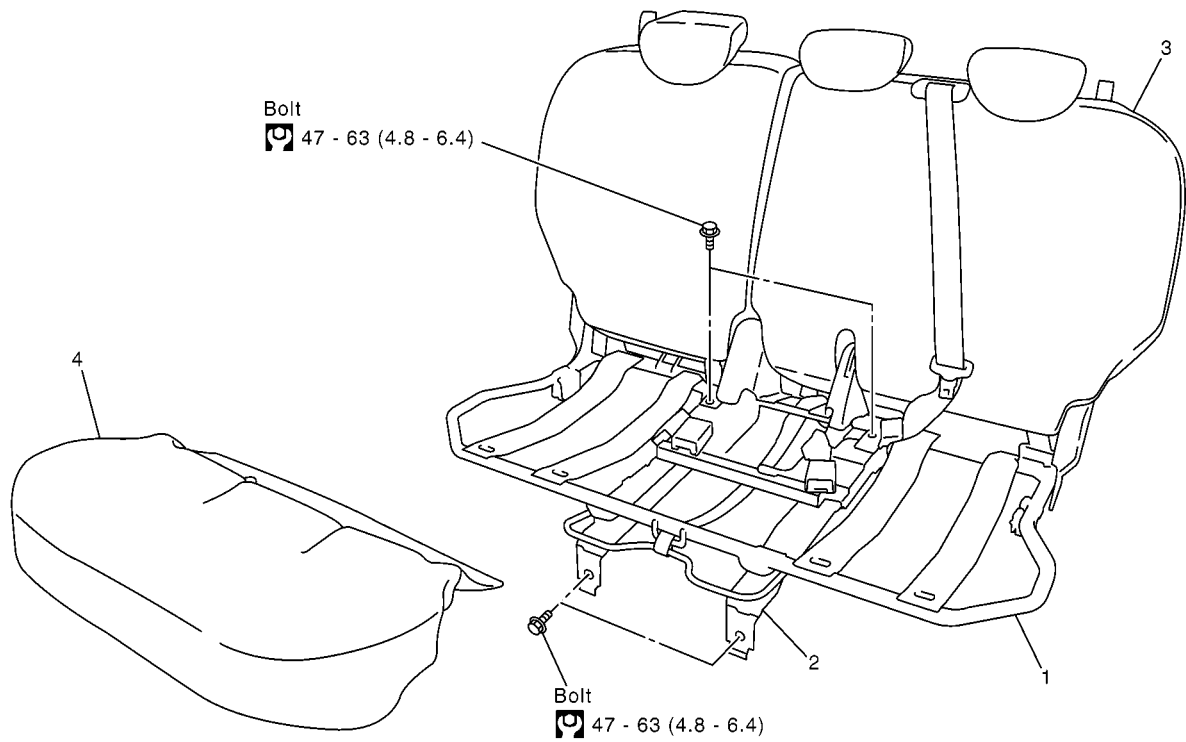

 : N•m (kg-m, ft-lb)

MIIB9069E

1. Seat slide assembly
2. Slide rail
3. Rear seatback trim and pad
4. Seat cushion trim and pad