

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR)

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR)

Removal and Installation of Rain Sensor


To ESM

REMOVAL

1. Remove inside mirror. Refer to GW-80, "INSIDE MIRROR" on ESM.
2. Remove clip and pawl.
3. Pull out the rain sensor.
4. Remove rain sensor harness connector.

CAUTION:

Do not touch the electronic circuit board on rain sensor.

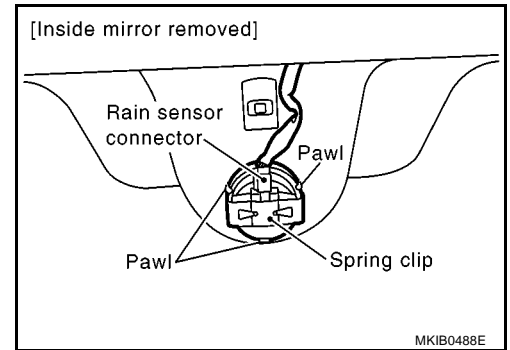

INSTALLATION OF RAIN SENSOR

Install in the reverse order of removal.

INSTALLATION OF RAIN SENSOR HOUSING

CAUTION:

When windshield is replaced, always replace rain sensor housing.

1. Clean the surface of bonded area on the windshield.
2. Fix rain sensor housing against rain sensor bracket from the top, then press it in a downward motion until it is completely attach together.

CAUTION:

Do not touch the adhesive.

