
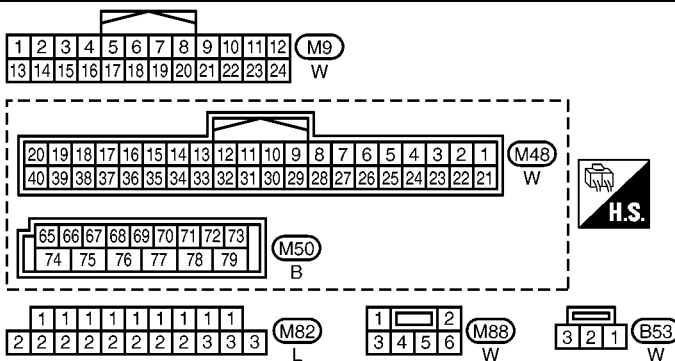


REAR WIPER AND WASHER SYSTEM

REAR WIPER AND WASHER SYSTEM

Wiring Diagram — WIP/R —

To ESM
WW-WIP/R-01

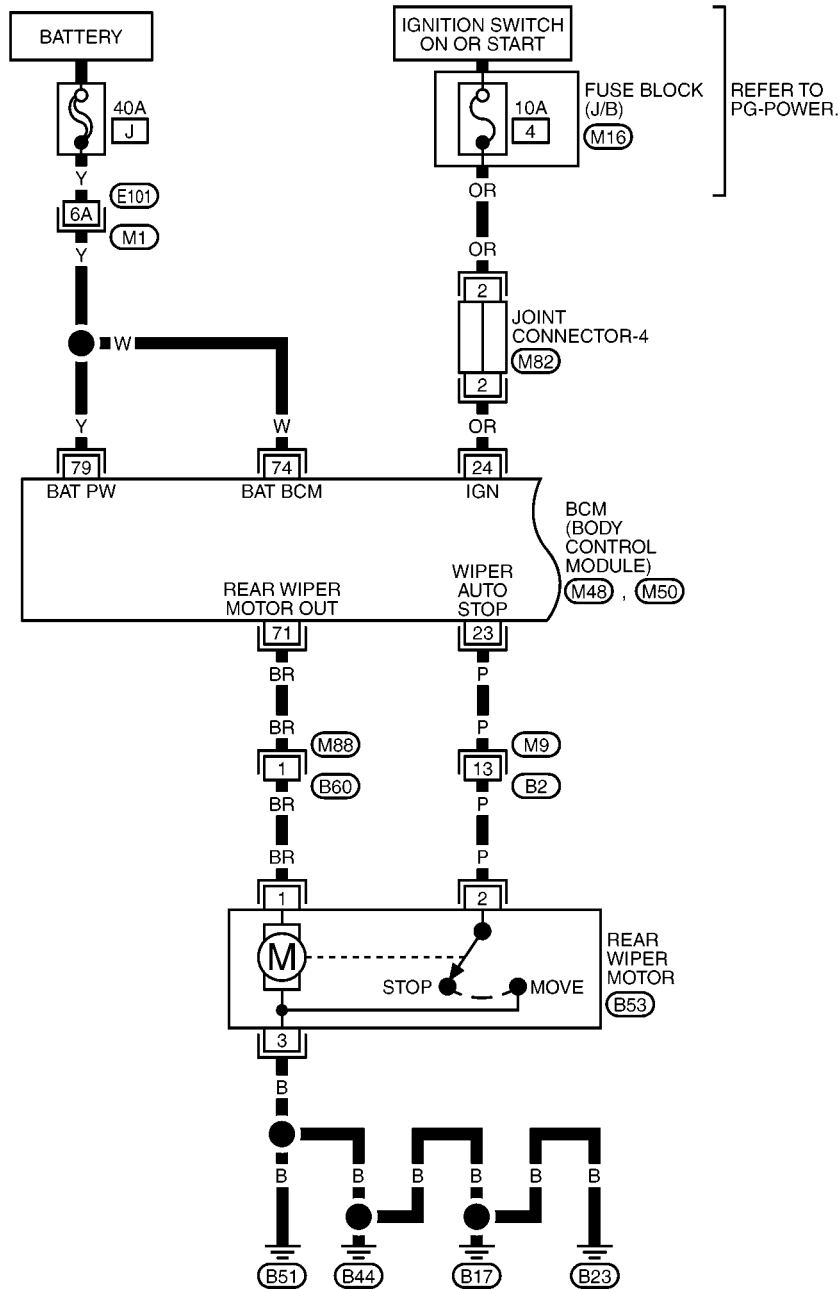





REFER TO THE FOLLOWING.

(M1) -SUPER MULTIPLE
JUNCTION (SMJ)

(M16) -FUSE BLOCK-
JUNCTION BOX (J/B)

REAR WIPER AND WASHER SYSTEM

WW-WIP/R-02

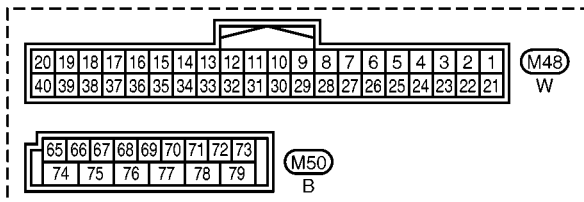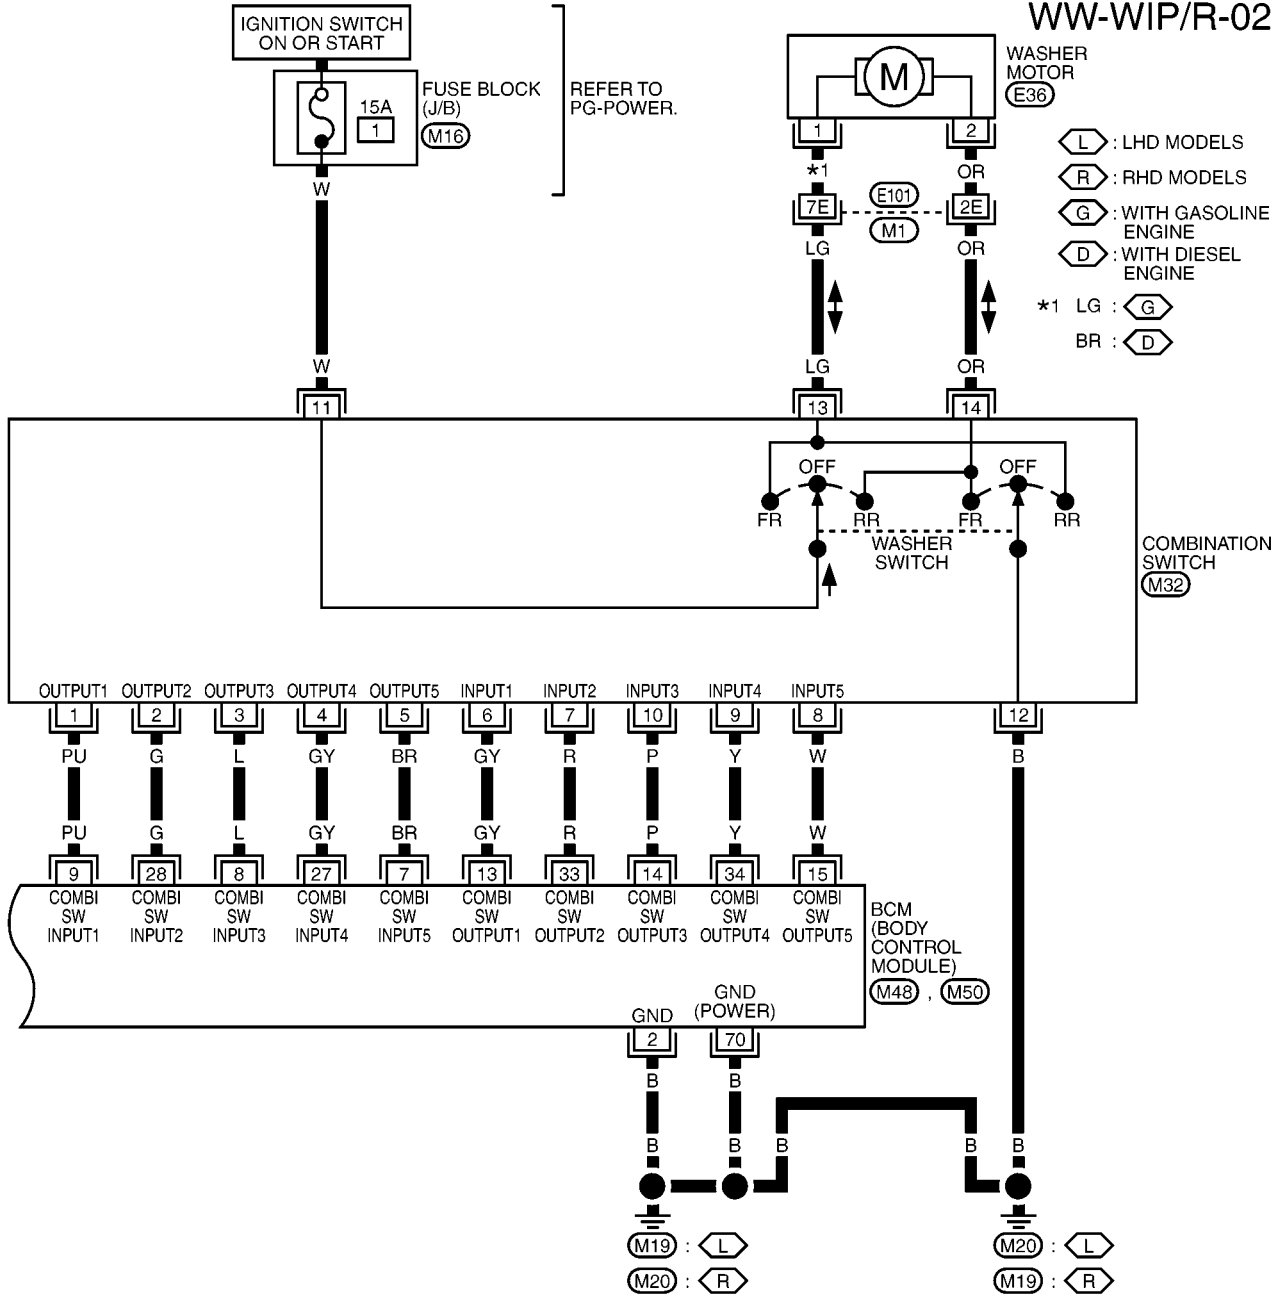

REFER TO THE FOLLOWING.

(M1) -SUPER MULTIPLE
JUNCTION (SMJ)

(M16) -FUSE BLOCK-
JUNCTION BOX (J/B)

Wiring Diagram —HORN—

WW-HORN-01

BATTERY

10A
25

GY

GY

2

1

R

R

11D

R

25

COMBINATION SWITCH (SPIRAL CABLE) (STEERING SWITCH)

20

M29, M502

B

RELEASED

PUSHED

HORN SWITCH

REFER TO PG-POWER.

3

G

2

1

B

B




B

E40

E26

HORN RELAY (E51)

HORN (E30, E31)



(M1) -SUPER MULTIPLE JUNCTION (SMJ)

MKWA3094E