
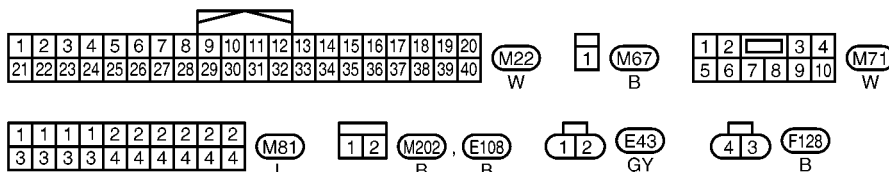


WARNING LAMPS

To ESM

Wiring Diagram — WARN — K9K Engine Models

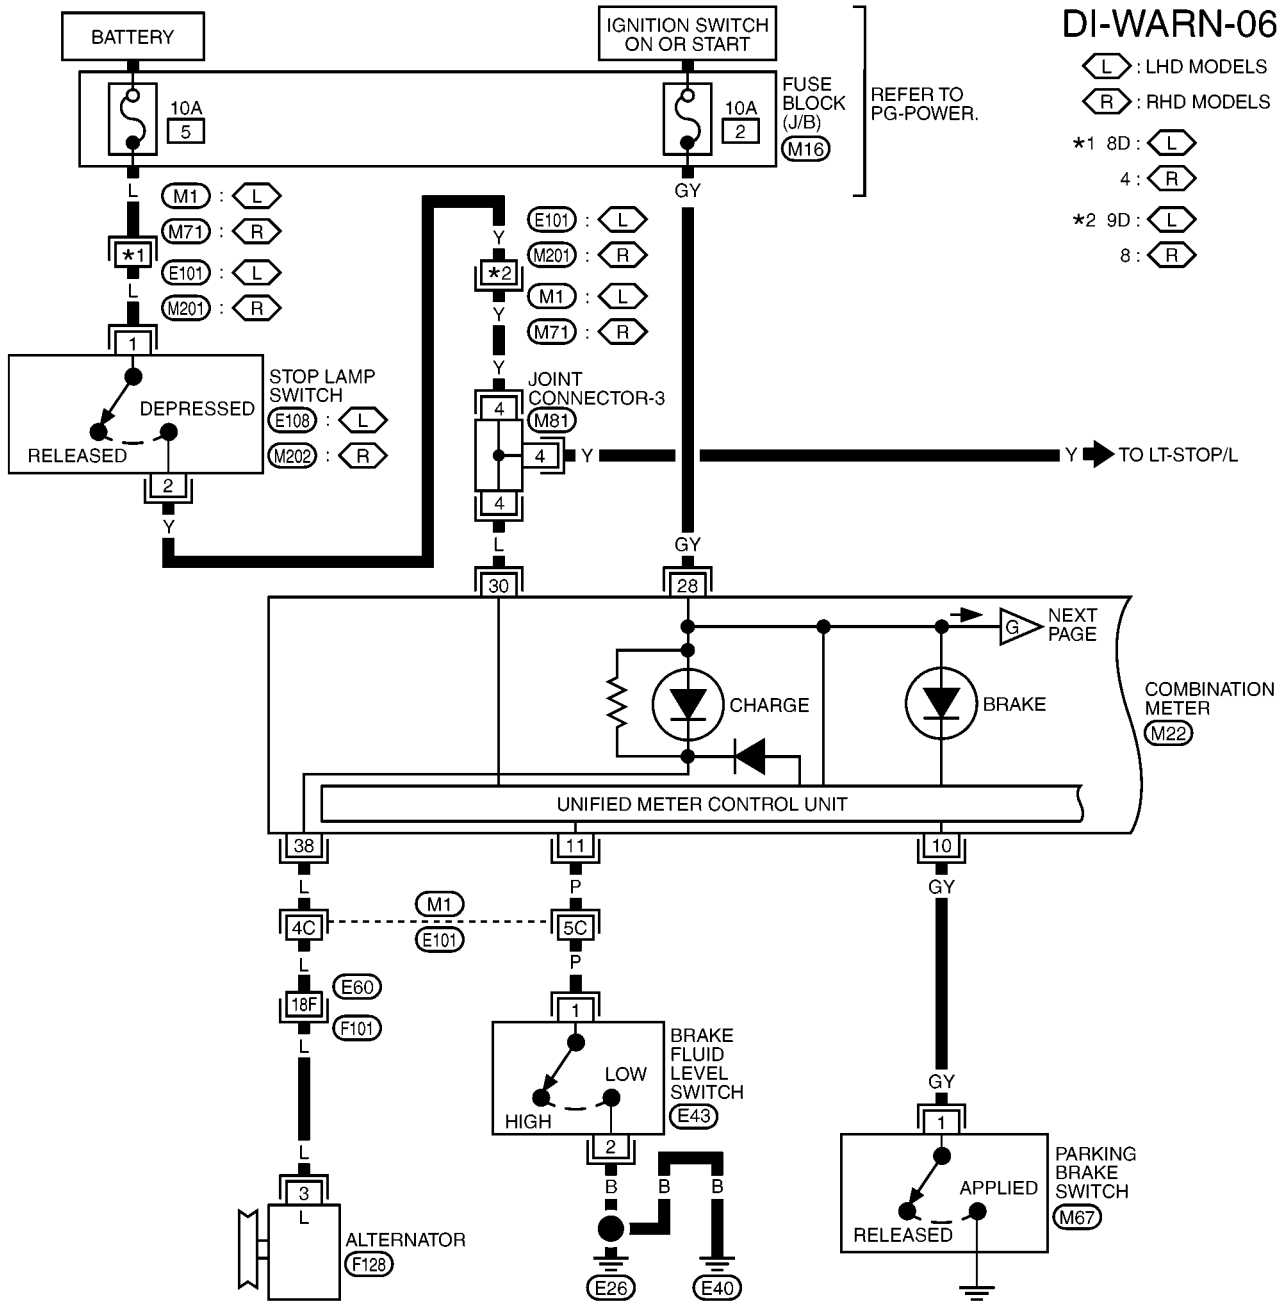

REFER TO THE FOLLOWING.

(M1) , (F101) -SUPER
MULTIPLE JUNCTION (SMJ)


(M16) -FUSE BLOCK-
JUNCTION BOX (J/B)

WARNING LAMPS

DI-WARN-07

⬡IK⬡ : WITH INTELLIGENT KEY SYSTEM

REFER TO PG-POWER.

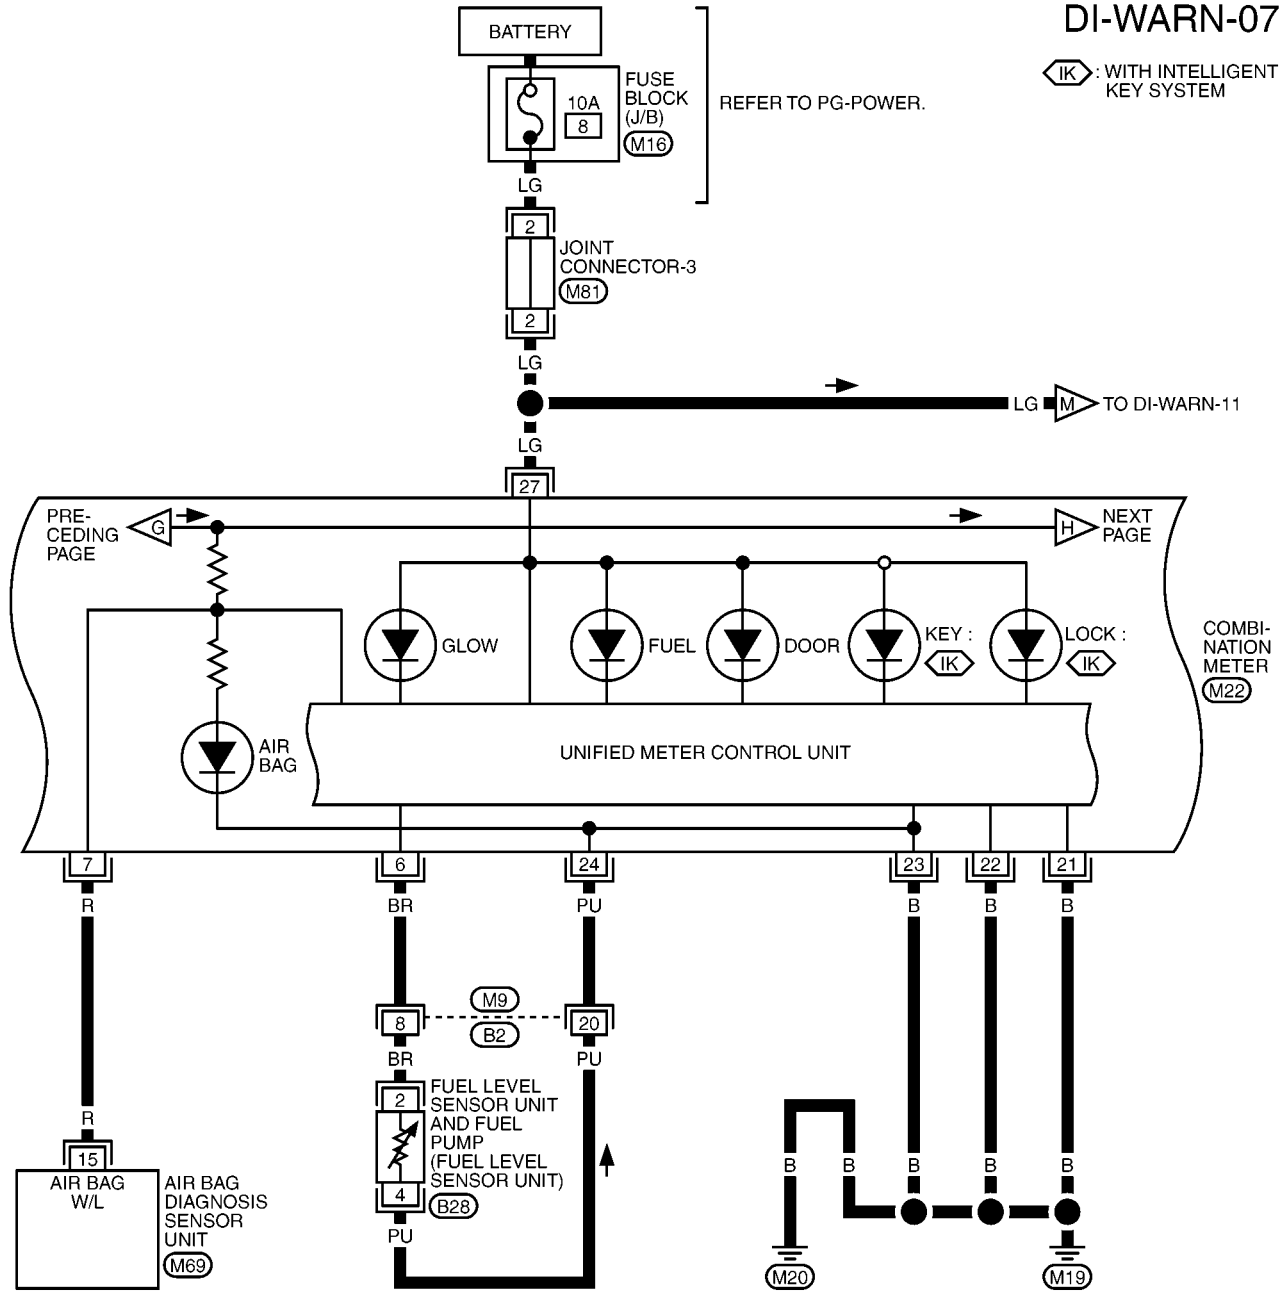

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

M9
W

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

M22
W

3	4	12	11	6	5
22	15	1	16	2	

M69
Y

1	1	1	1	2	2	2	2	2	2
3	3	3	3	4	4	4	4	4	4

M81
L

4	3	2	1
---	---	---	---

B28
GY


REFER TO THE FOLLOWING.

M16 - FUSE BLOCK- JUNCTION BOX (J/B)

WARNING LAMPS

DI-WARN-08

DATA LINE

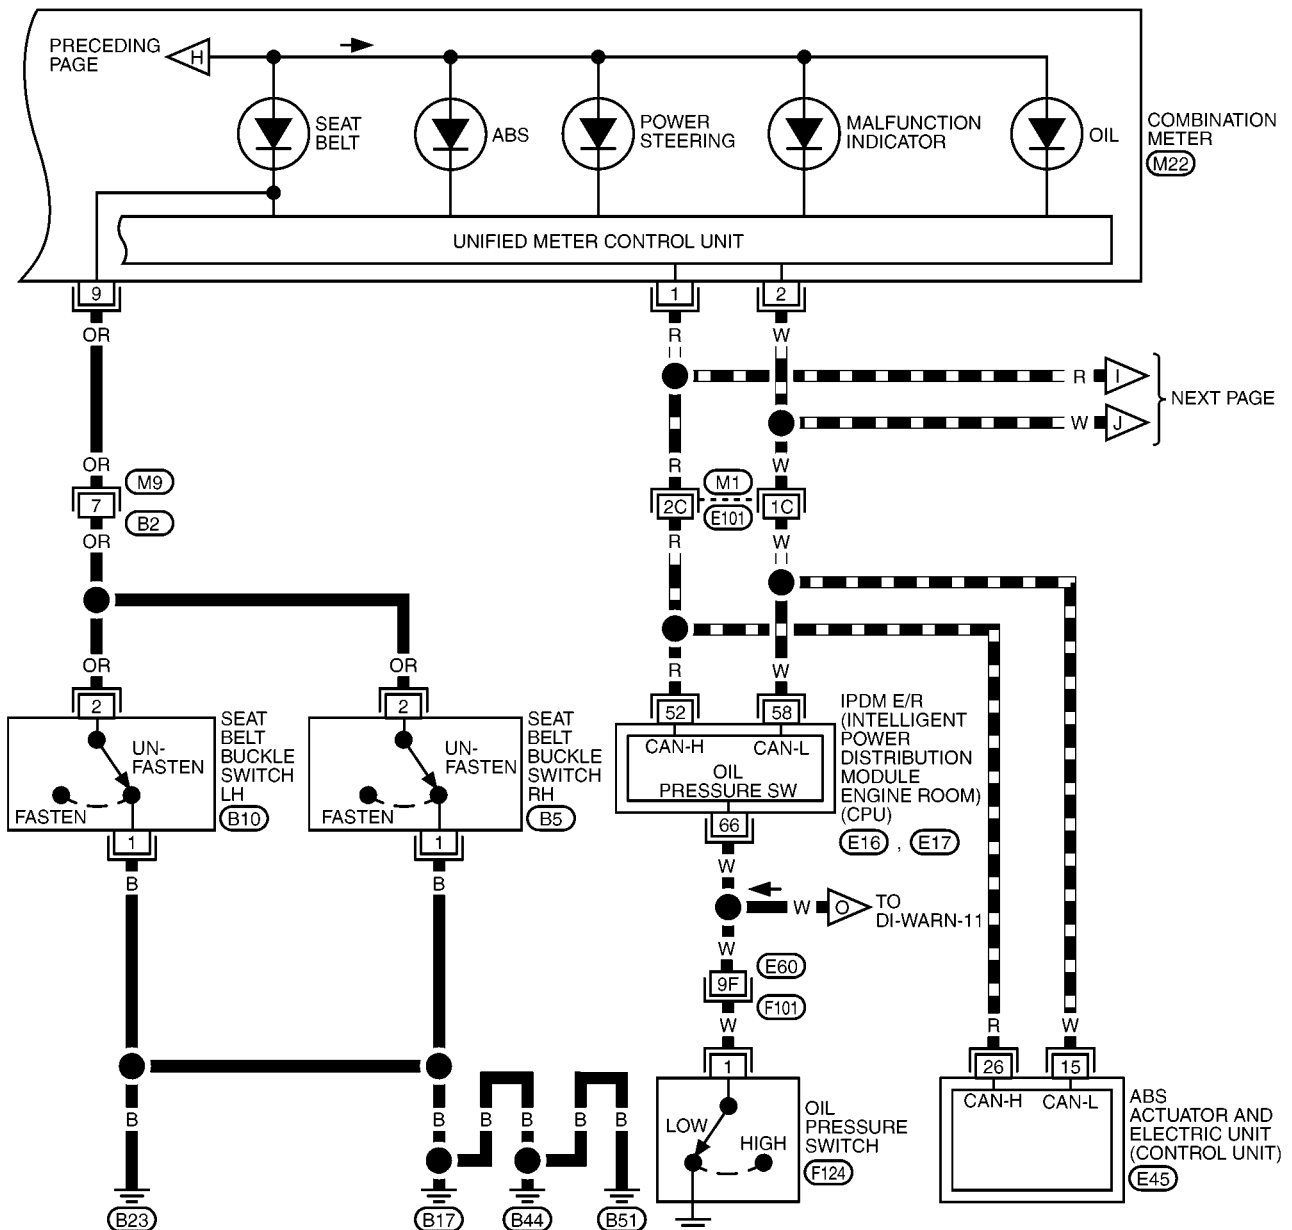

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

M9
W

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

M22
W

51	52	53	54	55	56
57	58	59	60	61	62

E16
W

63	64	65	66
67	68	69	70

E17
W



B5
W

B10
W



F124
W




REFER TO THE FOLLOWING.

(M1), (F101) -SUPER MULTIPLE JUNCTION (SMJ)

(E45) -ELECTRICAL UNITS

WARNING LAMPS

DI-WARN-09




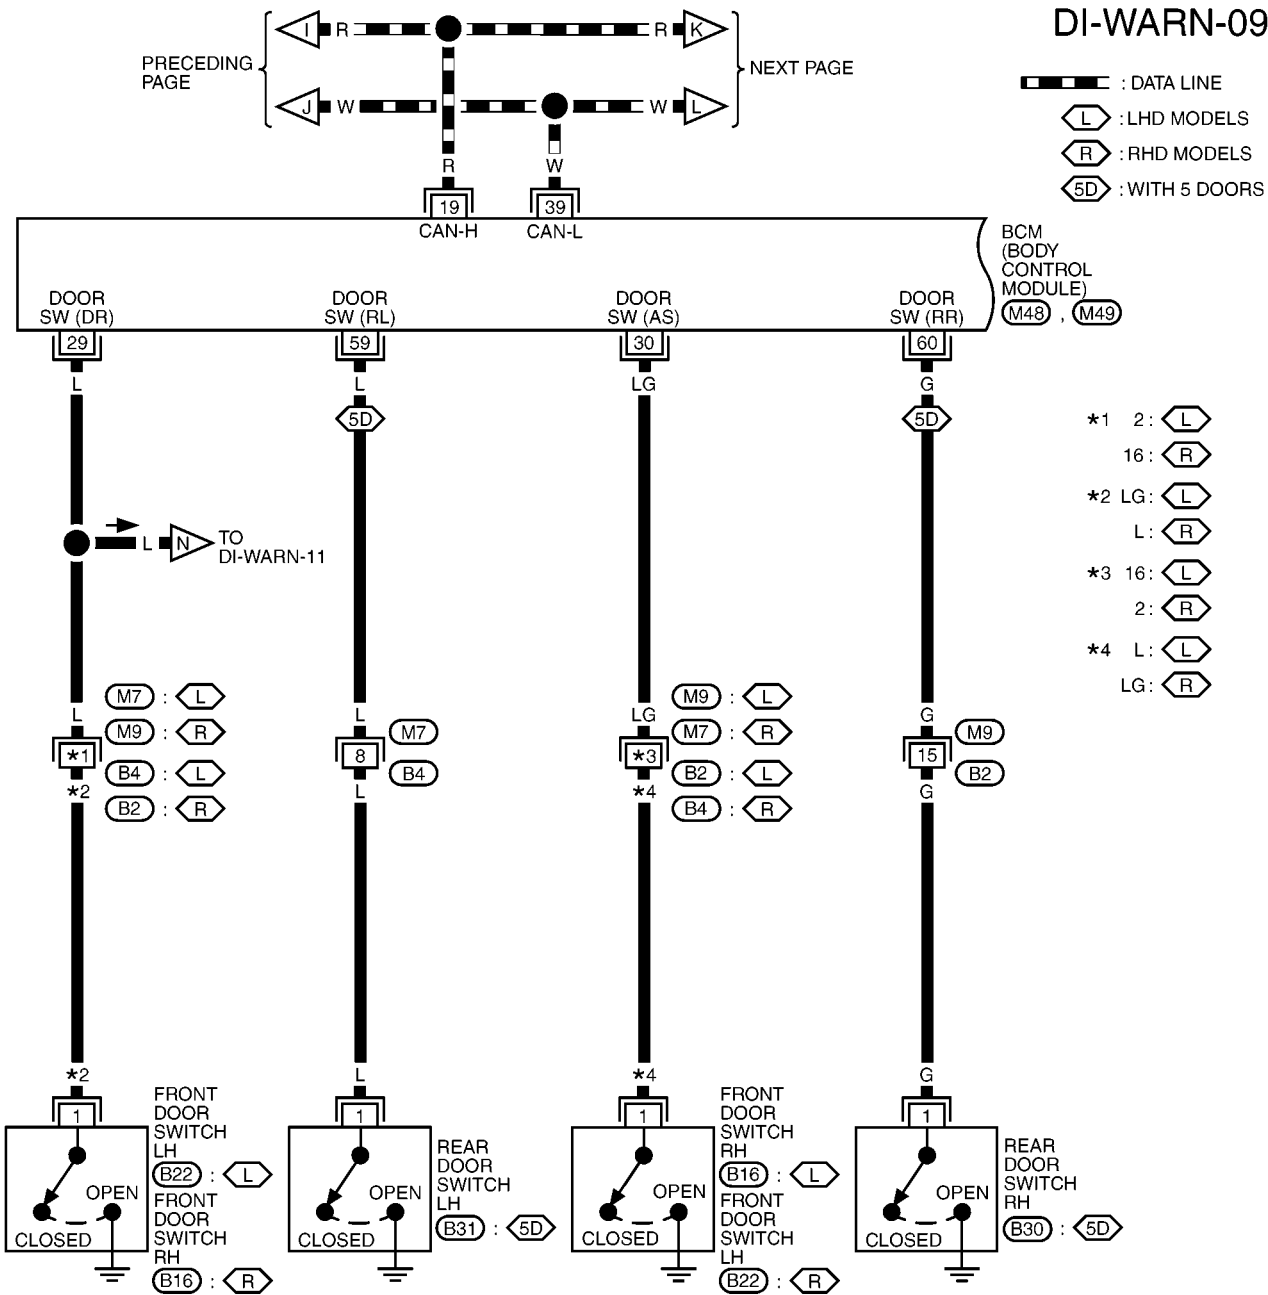


MKWA1811E

WARNING LAMPS

DI-WARN-10

— : DATA LINE

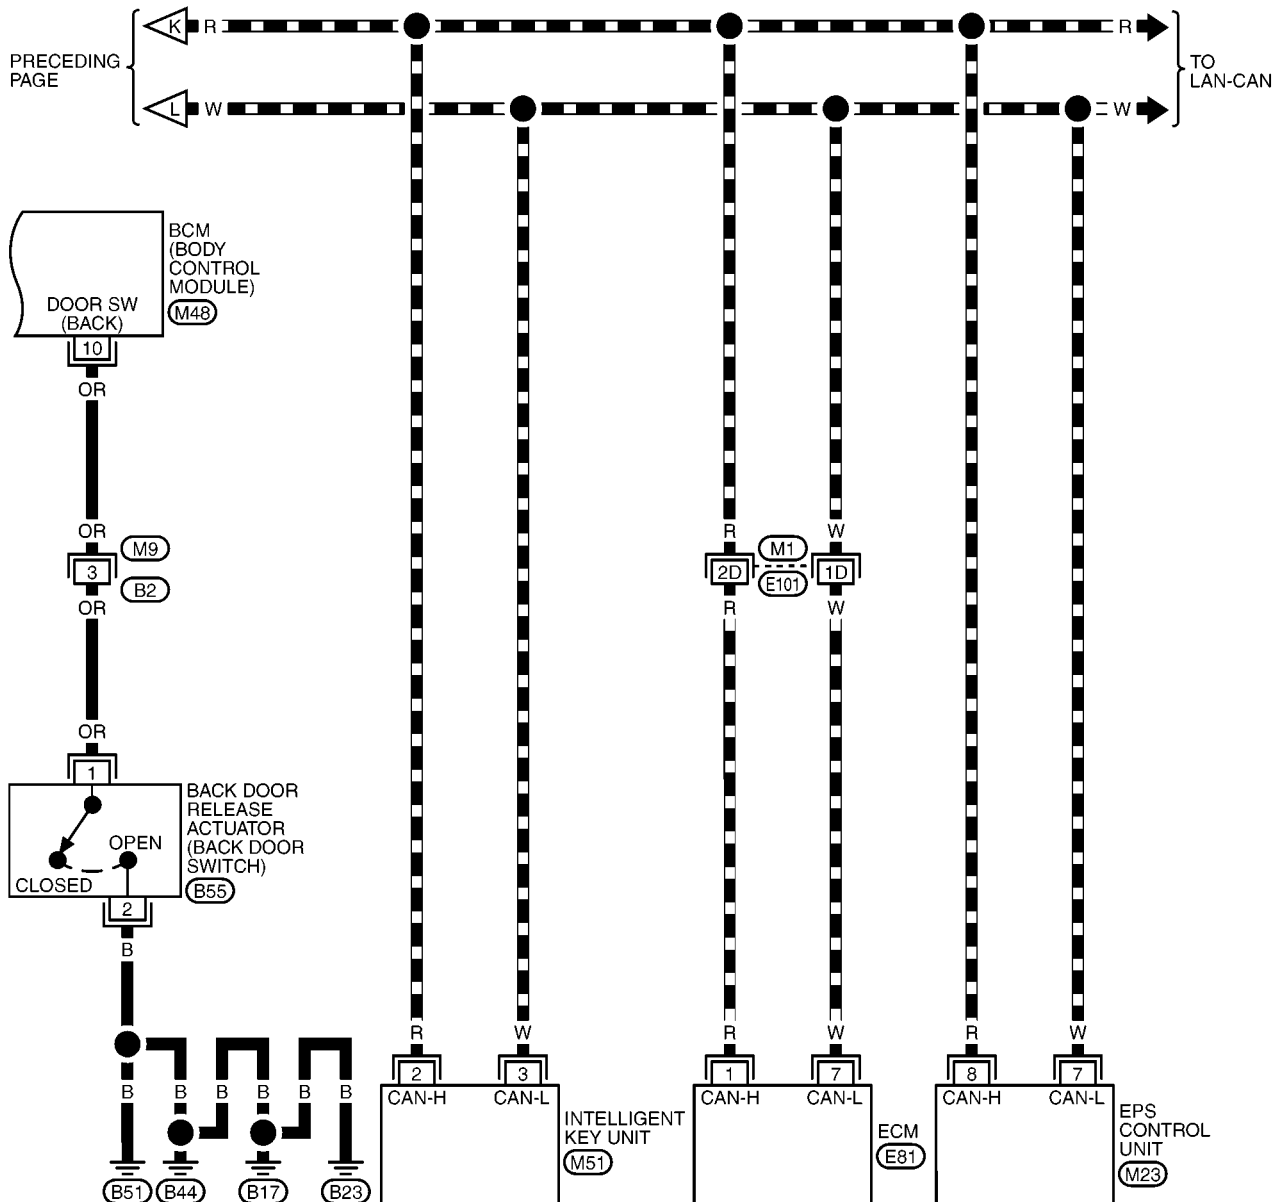

REFER TO THE FOLLOWING.


(M1) -SUPER MULTIPLE JUNCTION (SMJ)

(E61) -ELECTRICAL UNITS

MKWA3238E

WARNING LAMPS

DI-WARN-11

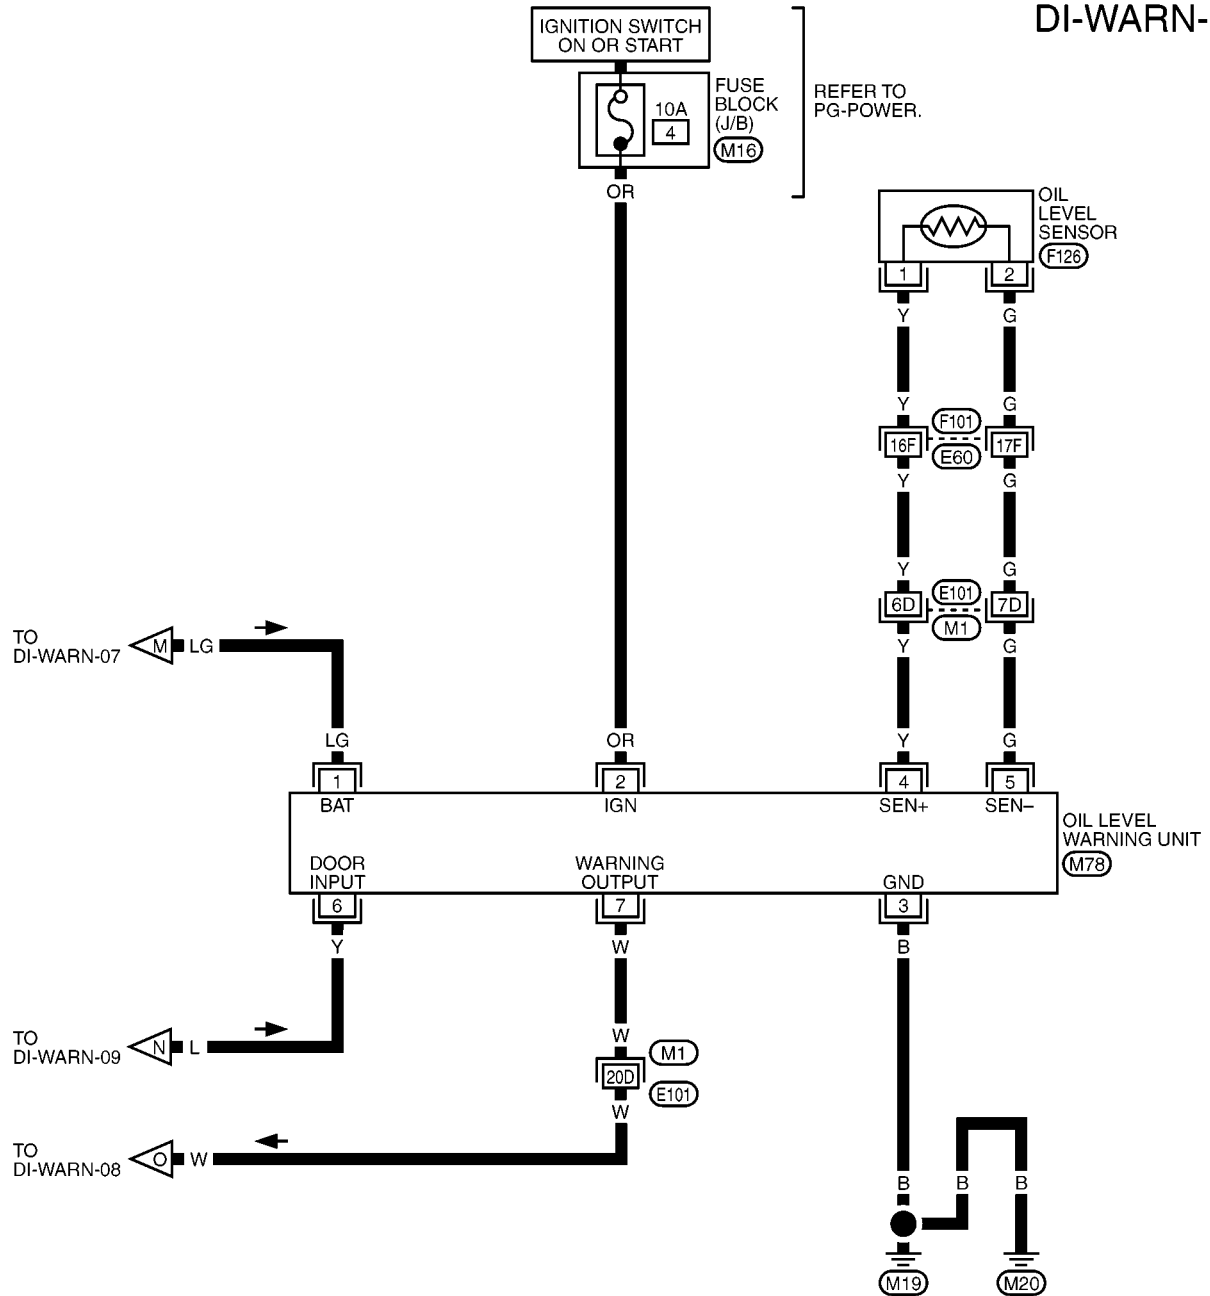

REFER TO THE FOLLOWING.

- (M1), (F101) -SUPER MULTIPLE JUNCTION (SMJ)
- (M16) -FUSE BLOCK-JUNCTION BOX (J/B)