








TROUBLE DIAGNOSIS

To ESM

Wiring Diagram — ABS — Models with CR Engine

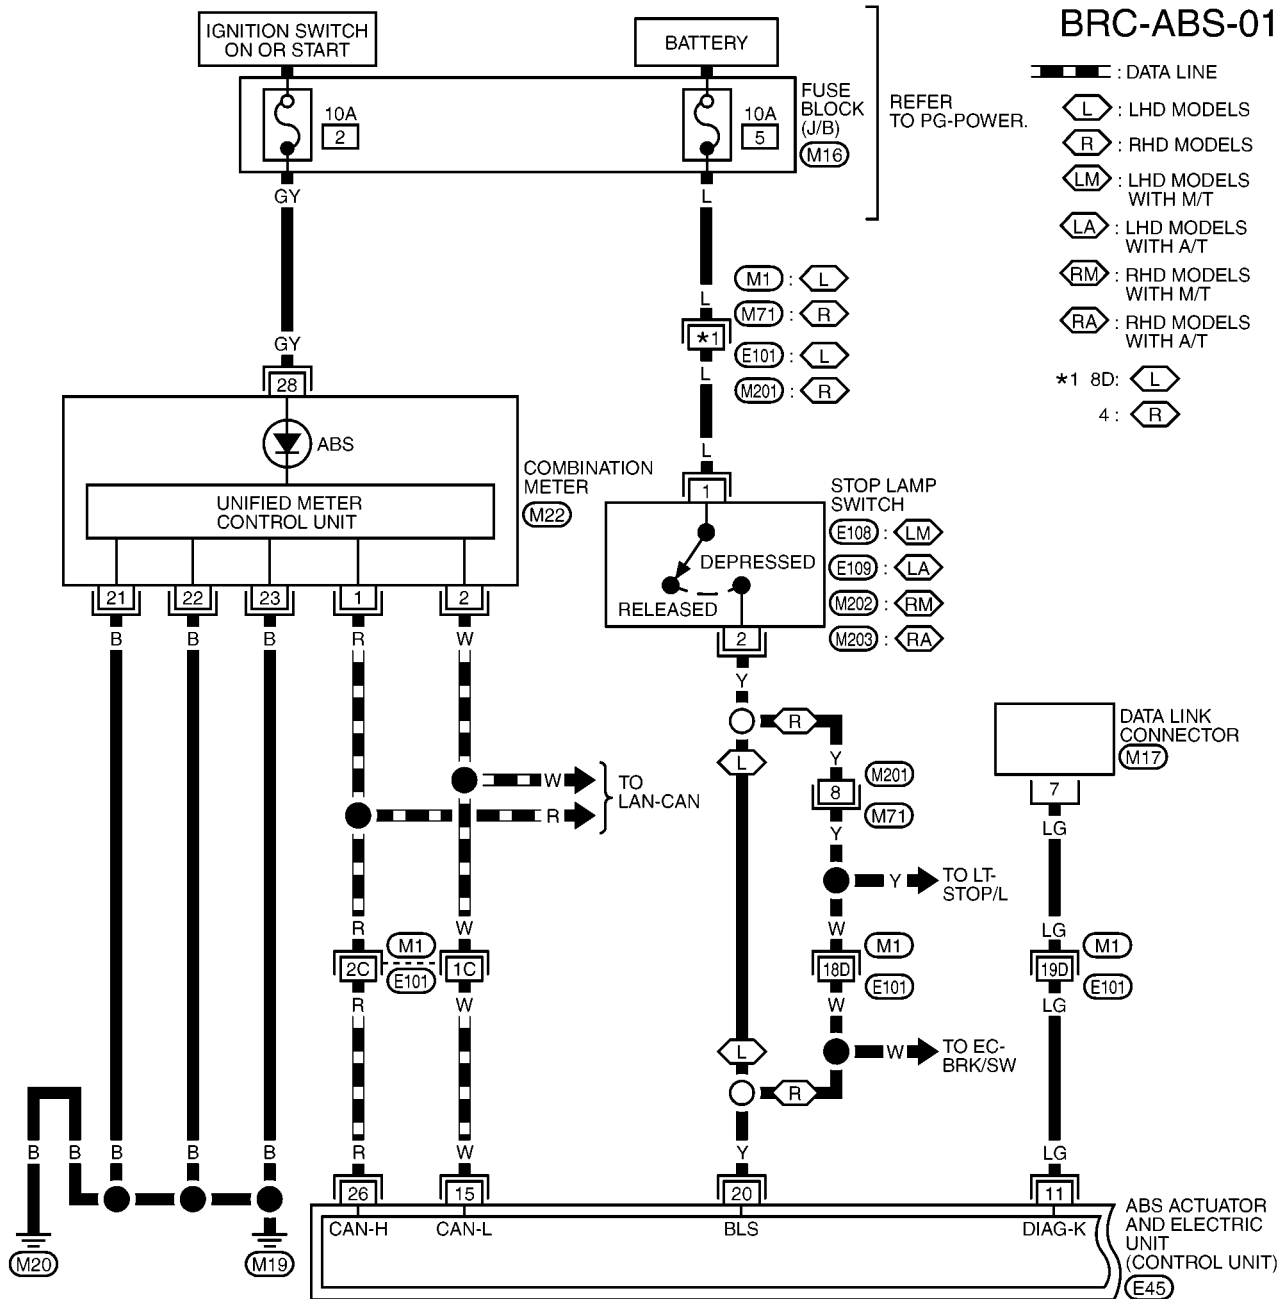


REFER TO THE FOLLOWING.

(M1) -SUPER MULTIPLE JUNCTION (SMJ)

**(M16) -FUSE BLOCK-
JUNCTION BOX (J/B)**


TROUBLE DIAGNOSIS

BRC-ABS-02

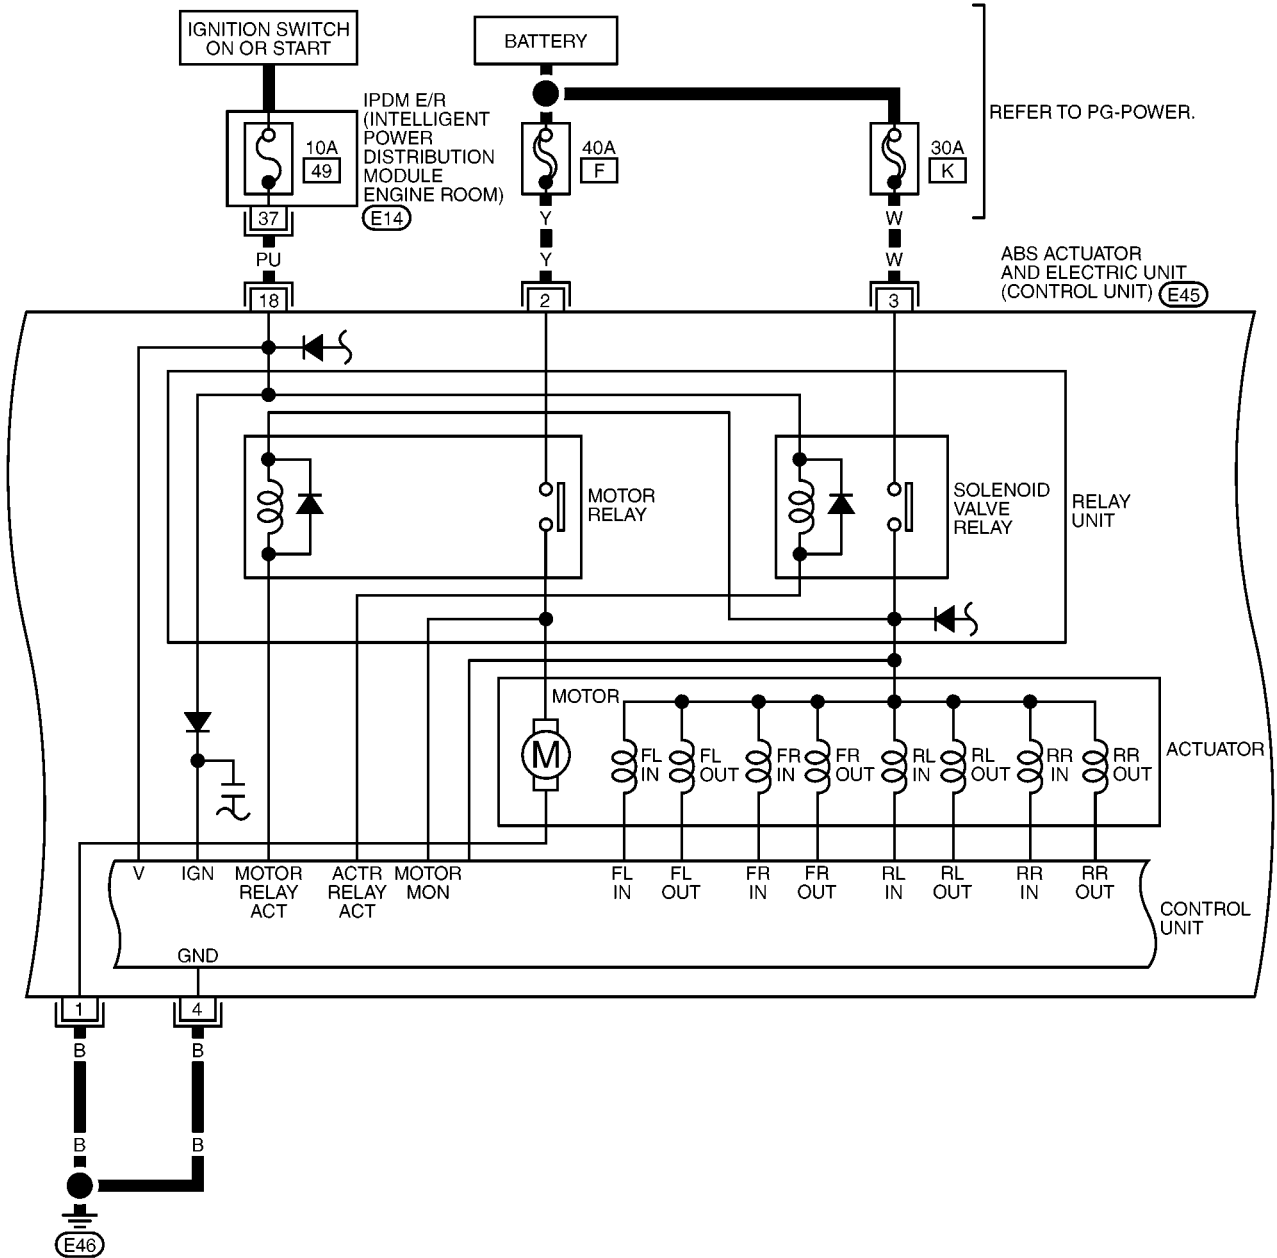


| | | | | | | |
|----|----|----|----|----|----|----|
| 27 | 28 | 29 | 30 | 31 | 32 | 33 |
| 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| 41 | 42 | | | | | |

E14
W




TROUBLE DIAGNOSIS

BRC-ABS-03

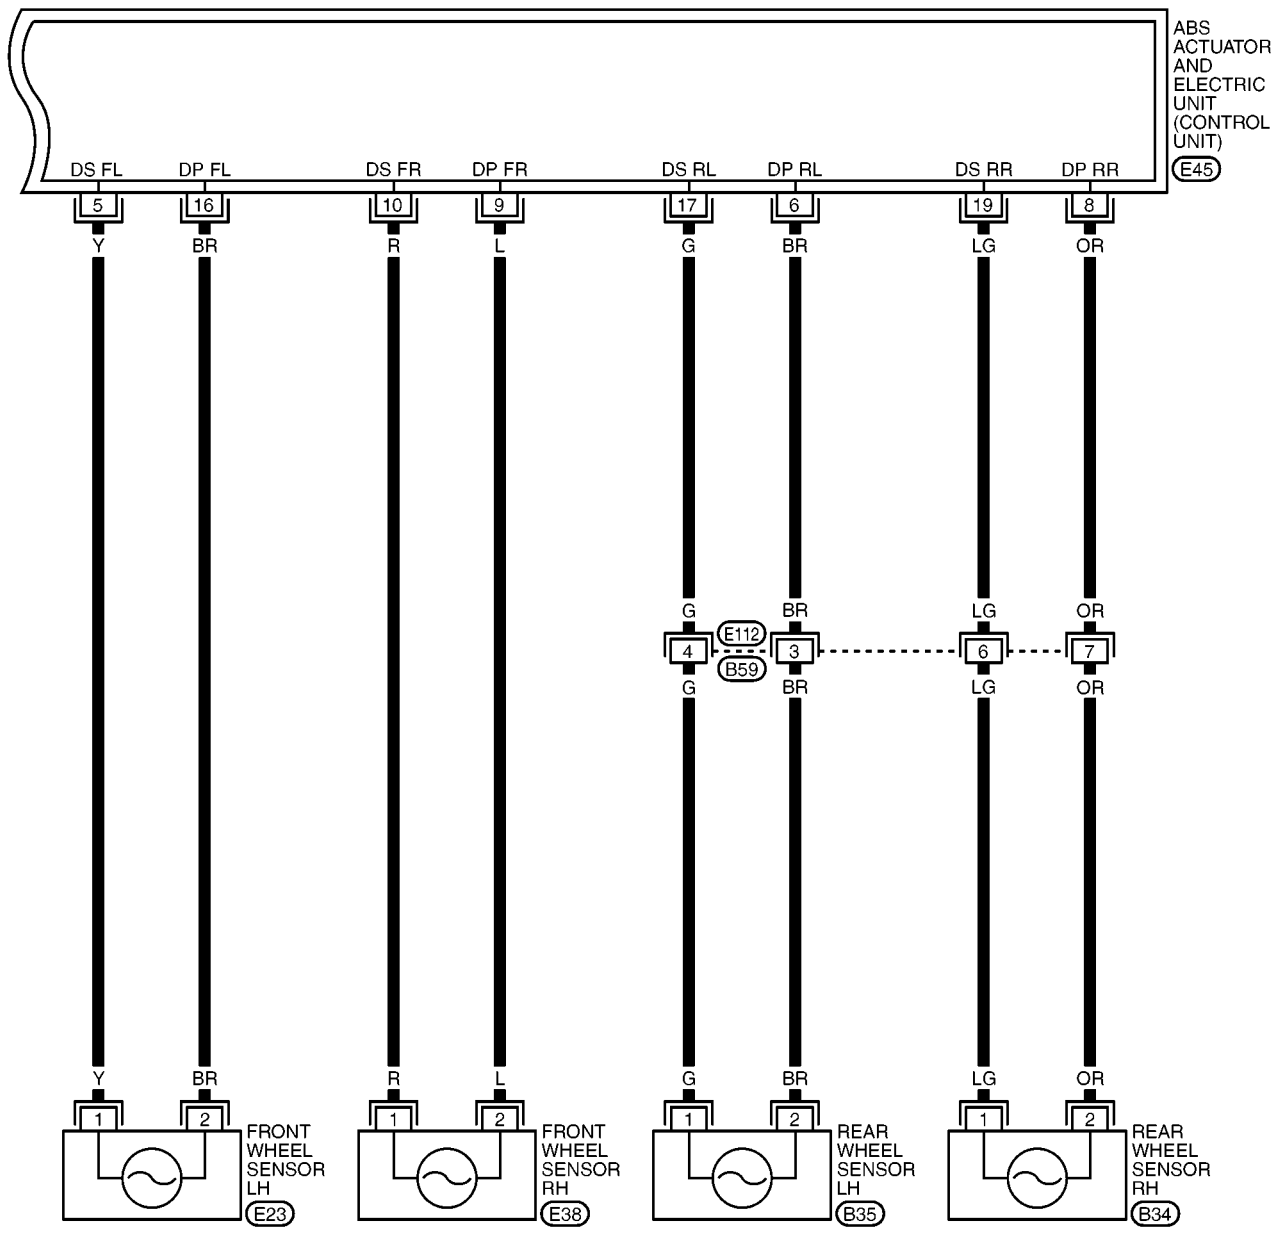


MFWA0111E

Wiring Diagram — ABS — Models with K9K Engine




TROUBLE DIAGNOSIS

BRC-ABS-05

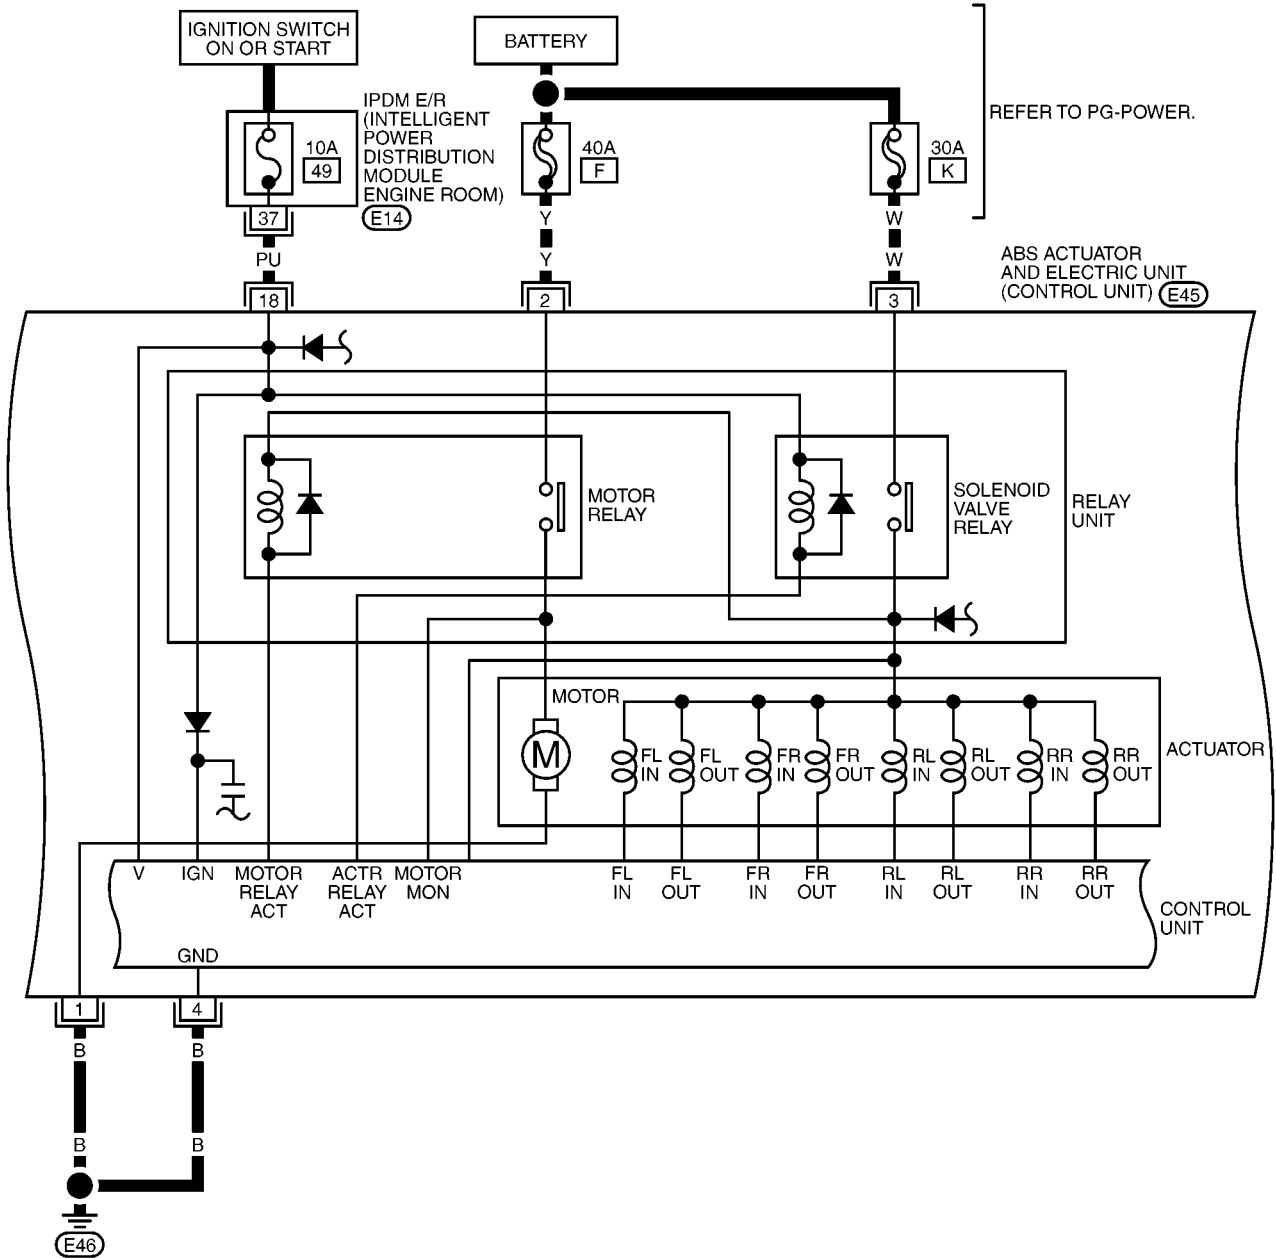

| | | | | | | |
|----|----|----|----|----|----|----|
| 27 | 28 | 29 | 30 | 31 | 32 | 33 |
| 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| 41 | 42 | | | | | |



E14
W



E45
B

TROUBLE DIAGNOSIS

BRC-ABS-06

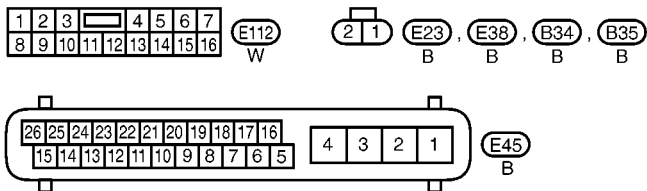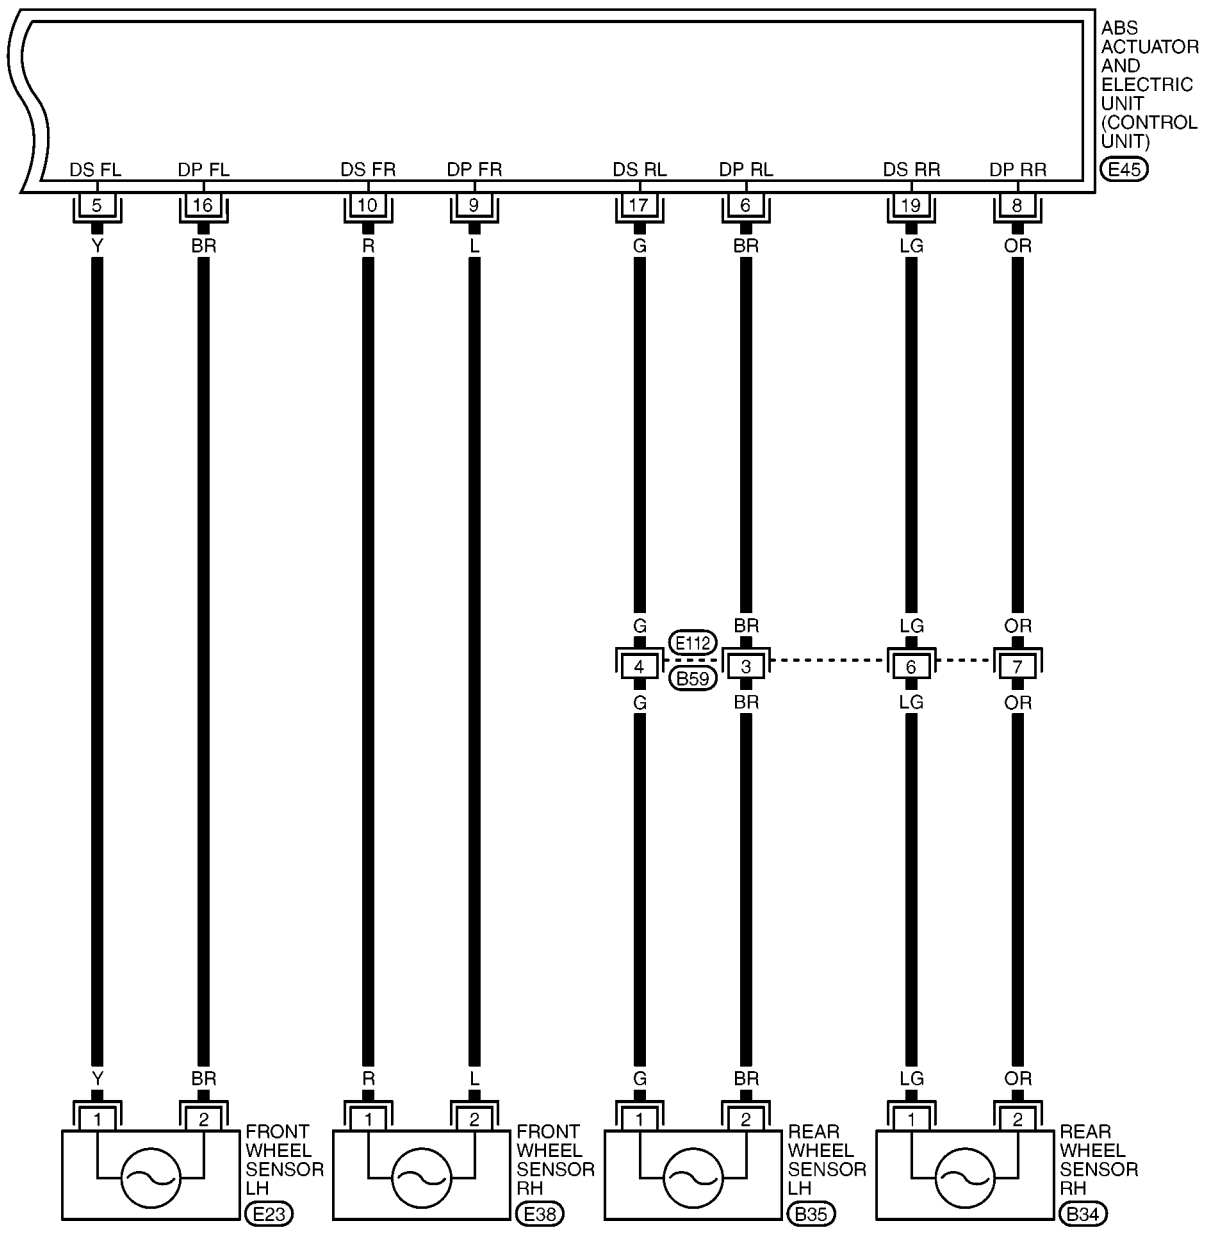

MFWA0112E