

FRONT SEAT


FRONT SEAT

Component Parts Location

To ESM

CAUTION:

When removing and installing seats, use shop cloths to protect the parts from damage.

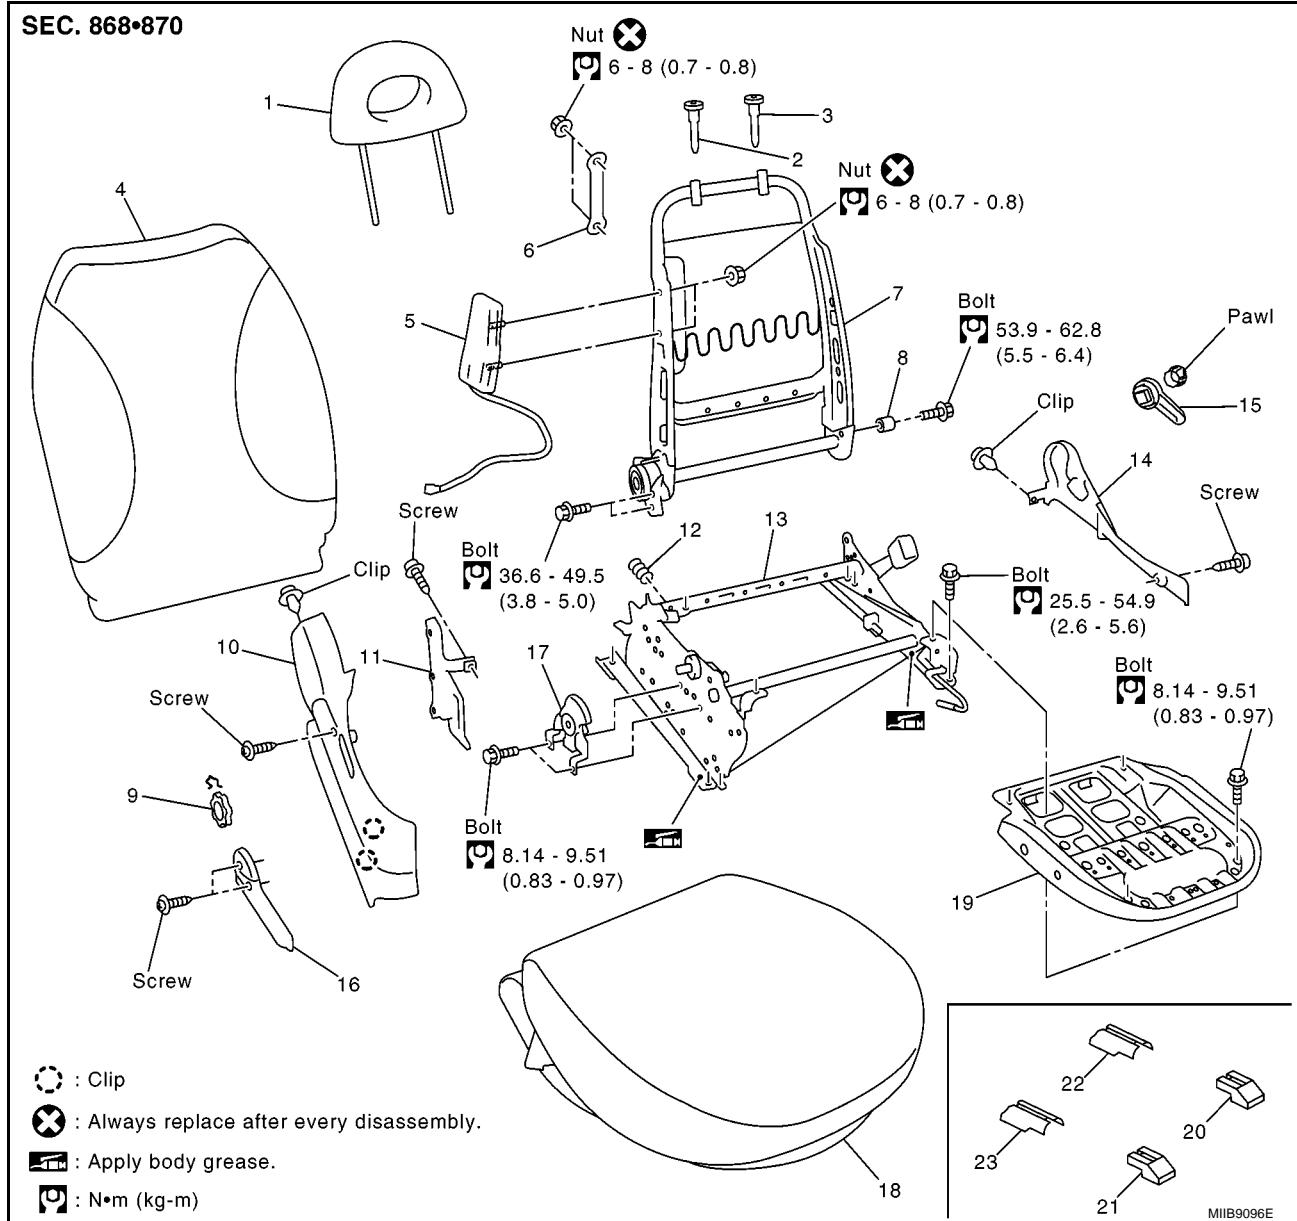

FRONT SEAT


Disassembly and Assembly of Seatback

To ESM


SEATBACK TRIM PAD

Disassembly


1. Unfasten seatback fastener. (Vehicles with side air bags)
2. Remove retainer.

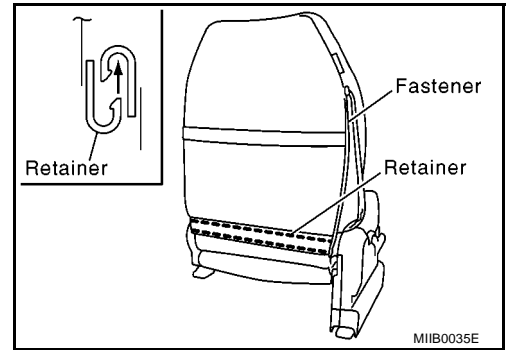

3. Turn over seatback trim, remove nuts (2), and remove fixed inner cross rod. (Vehicles with side air bags)

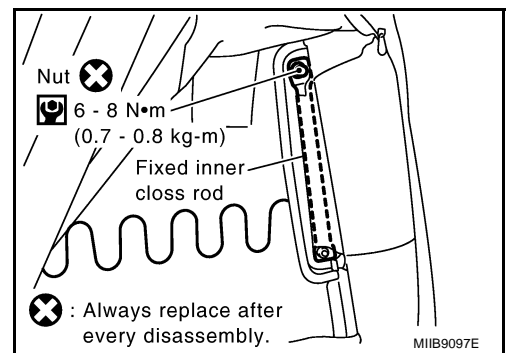

4. Use pincers, etc., to push up hooks shown by the arrows in the figure, and remove headrest holder from seatback.
5. Remove seatback trim and pad from seatback frame.

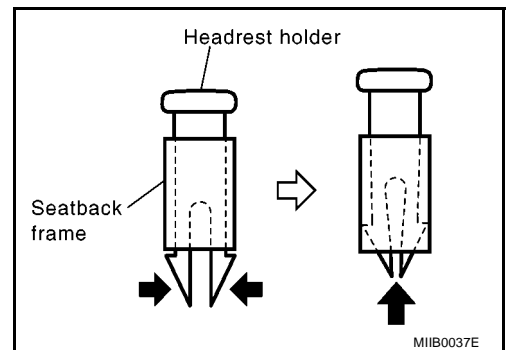

Assembly

Install in the reverse order of removal.

CAUTION:

Before installing headrest holder, check its orientation (front/rear and right/left).

SEATBACK FRAME

Disassembly

1. Remove seatback trim&pad.
2. Pull out side air bag connector from back of seat cushion.
3. Remove lumbar support lever knob, seat lifter lever, reclining dial, seat slide out finisher, slide inner cover, and seat slide inner finisher.
4. Remove seatback frame bolts and remove seatback frame from seat slide assembly.

Assembly

Install in the reverse order of removal.

CAUTION:

After assembling seatback frame, make sure reclining device operates.