

# Maximo

Build Your Party



Model No.: iG-1061

## Features

Bluetooth wireless connectivity  
Supports USB/TF card  
AUX function  
Karaoke function  
Rechargeable Lithium battery

## Specifications


Output power	: 20W
Driver unit size	: 6.5Inch
Impedance	: 3 Ohm
S/N ratio	: $\geq 85\text{dB}$
Separation	: $\geq 80\text{dB}$
Distortion	: $\leq 10\%$
Frequency response	: 10Hz-20KHz
Bluetooth version	: V4.2+EDR
Bluetooth range	: 10 meters
Bluetooth pairing name	: iGear-Maximo
Bluetooth profiles supported	: A2DP
USB & TF max. memory supported	: 32 GB
Battery capacity	: Built-in 1200mAh
Battery type	: Li-ion
Charging indicator	: Yes
Input power	: DC 5V

## Accessory

Charging cable	: 1piece	Mic	: 1piece
Aux cable	: 1piece	Mic cable	: 1piece
User manual	: 1piece	Remote	: 1piece

## Connect to Bluetooth device

Turn on the speaker unit and the Bluetooth switch on your mobile/other device and search for the speaker model name "iGear-Maximo". Pair the device. Once the device is paired, Bluetooth will automatically connect every time the unit is turned on subsequently.

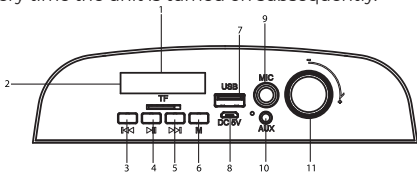

- |                           |                      |
|---------------------------|----------------------|
| 1. Digital Display        | 7. USB slot          |
| 2. TF-card slot           | 8. 5V charging port  |
| 3. Previous / Back button | 9. Mic jack          |
| 4. Play / Pause button    | 10. AUX-IN jack      |
| 5. Forward / Next button  | 11. Power on/off and |
| 6. Mode button            | Master volume knob   |

## Bluetooth

Turn on the speaker, it come into the Bluetooth mode directly. After pairing, the device can play music. Short time Press ►|| to Pay/Pause, Short press ◀◀ and ▶▶ to surf through Prev. and Next. Long press ◀◀ and ▶▶ to turn down and turn up the volume.

## AUX-IN

AUX-IN using the audio cable into AUX jack, and press 'M' to switch to AUX-IN mode. Long press ⏮ and ⏭ to turn down and turn up the volume. Under AUX-IN, it can't shift to Prev. and Next by Bluetooth speaker, but can be controlled by connected devices.

## USB/TF card

Insert the U flash memory or TF card into the USB/TF slot. It will read the MP3 format music automatically. Press ▶|| to Play/Pause. Short press ⏮ and ⏭ to surf Prev. and Next. Long press ⏮ and ⏭ to turn down and turn up the volume.

## FM Radio

Long press ▶|| to search FM channels automatically. This operation will scan all FM stations and pre-record them to memory. The scan procedure will take several minutes to complete and should not be interrupted. Once complete, you can short press ⏮ or ⏭ to move forward or backward. Long press ⏮ or ⏭ to turn down or turn up Volume.

**Note:** AUX Port connection can receive the FM radio clearly as, it has the same function as the antenna.

## Charging

Please use the original charging cable to charge Red LED display when on charging.

**iGear Tech Pvt. Ltd.,** 204, Sai Corporate Park, Laxmi Nagar, Off Link Road, Goregaon West, Mumbai - 400104.

In case of consumer complaints: Toll free number - 1800 22 8495,  
Email: sales@igear.asia (Between 10am to 5pm, Mon- Fri)