



Andhra Pradesh State Skill Development Corporation



Andhra Pradesh State Skill Development Corporation



INDUSTRIAL AUTOMATION WITH PLC


WPL SOFTWARE INSTALLATION

DVP Programmable Logic Controllers


Delta WPL Software Installation:

The download and installation process of the Delta WPL software is explained Stepwise in the below format.

Go to Google and Search for **DELTA WPL SOFTWARE** as shown below.

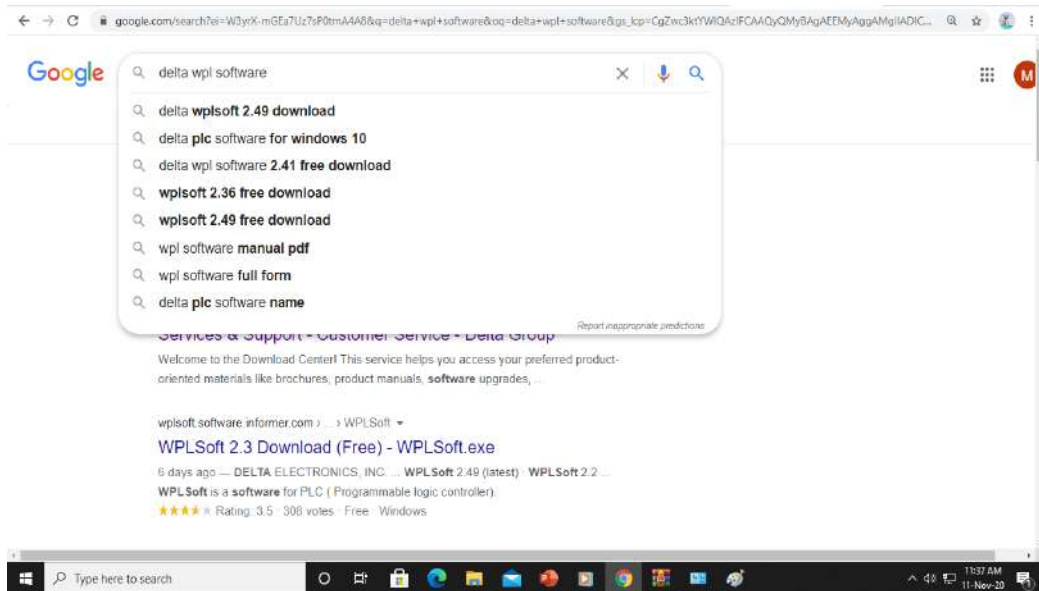


Now, go to **Services & Support - Customer Service - Delta Group** click on it.

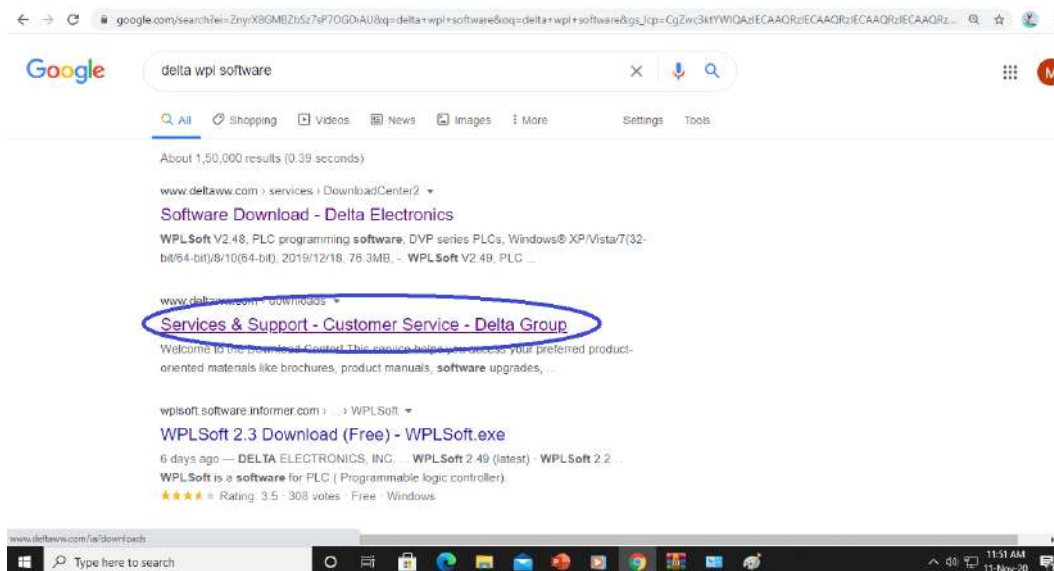




On this page we will get 3 selecting options. Select it as 1) **Industrial Automation** as shown below.

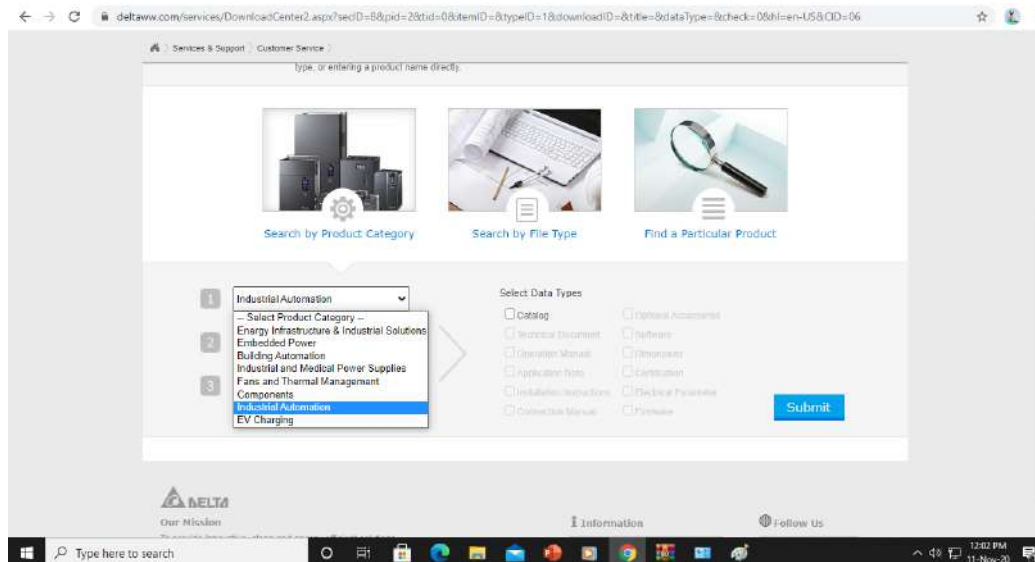


On this page we want to select it as 2) **PLC - Programmable Logic Controller**.

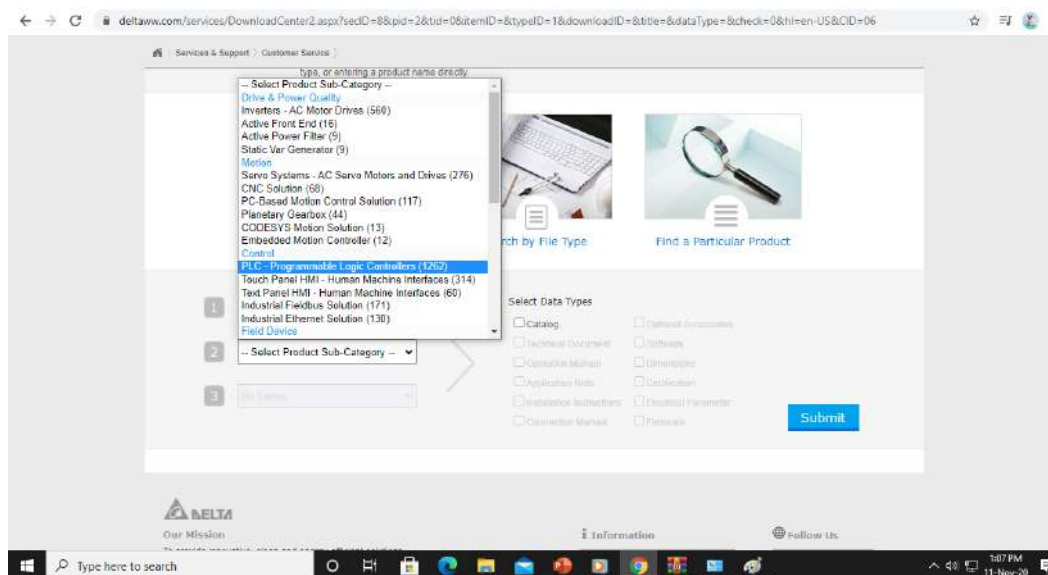





On this page we want to select it as 3) DVP Series anyone to download software.

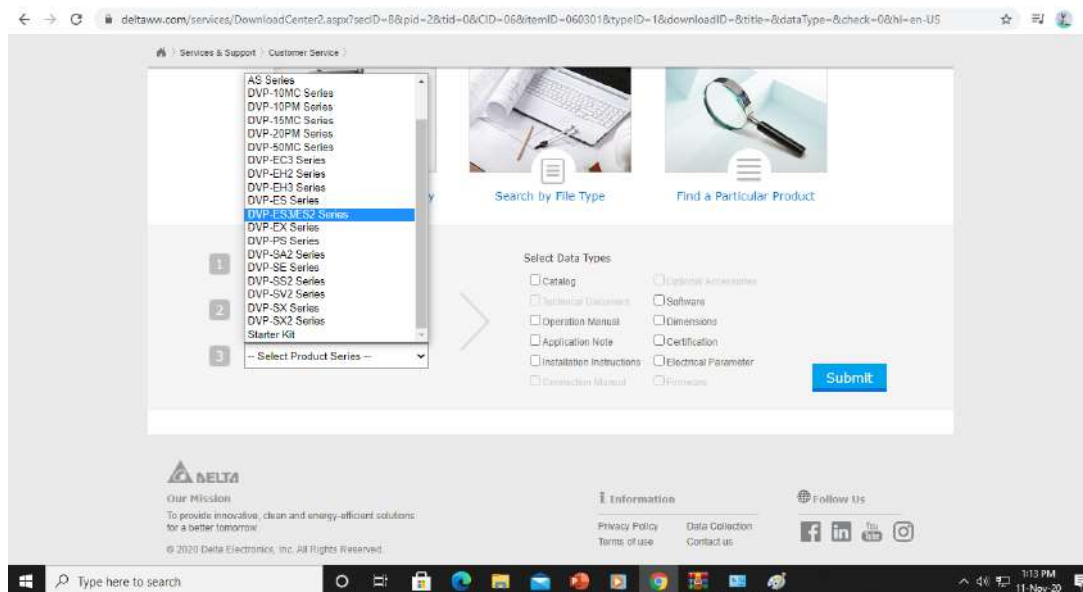


Next, we have to **Select Data Types** as **Software** (Check Box is there for selection) then Click on **Submit**.

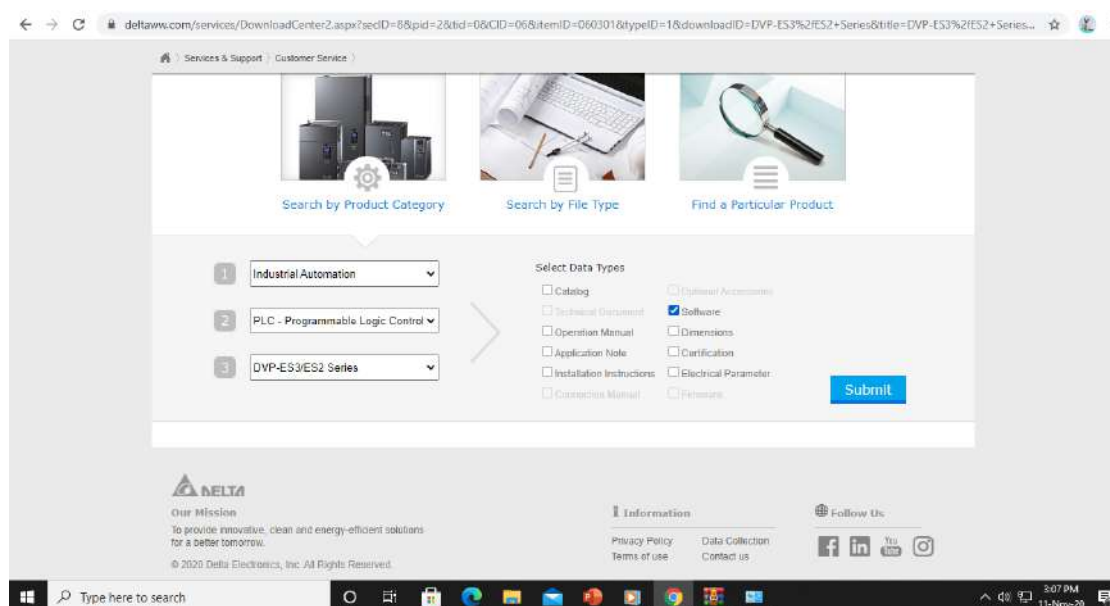


Now we have to download the WPL soft V2.49 as shown below (Download Zip file).

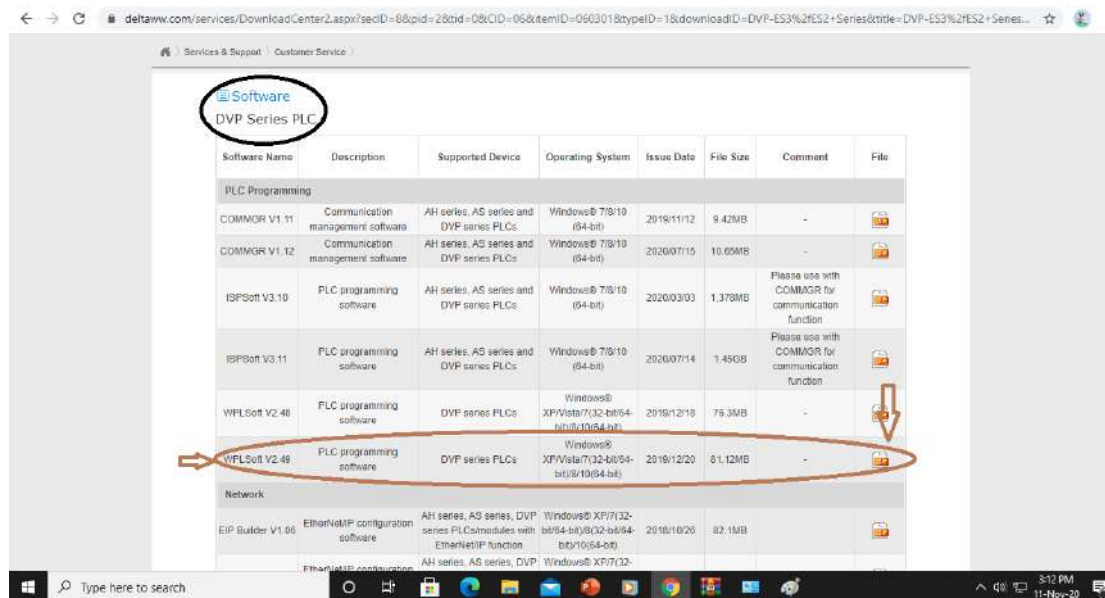


After the download is completed, then open the file and double click on it. You will get one setup file again double click on it.

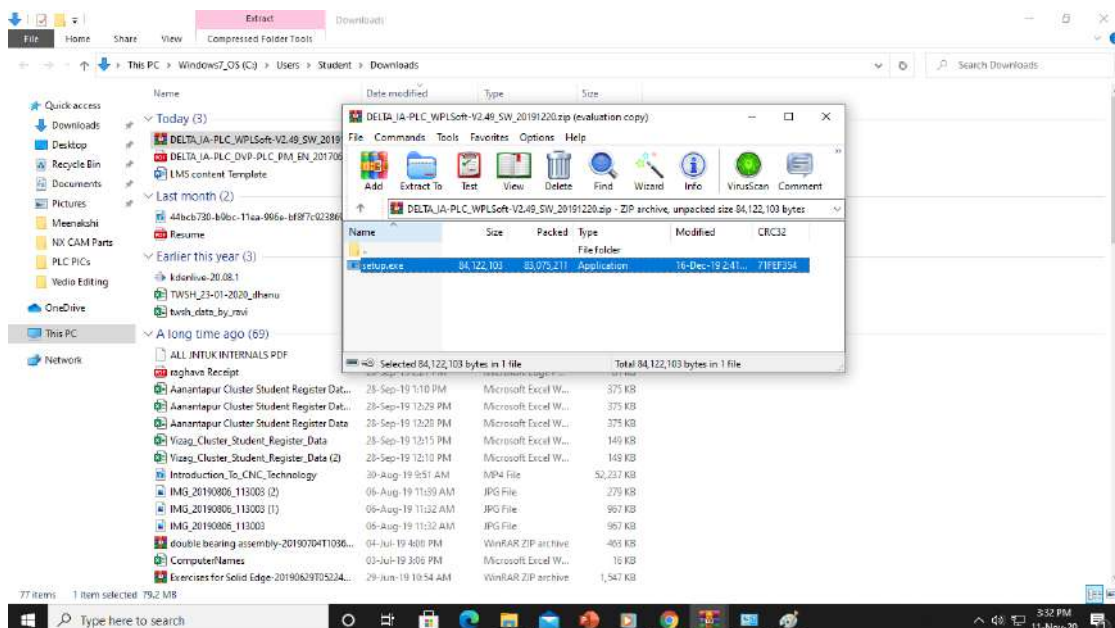


Now the installation process will start. Click on **NEXT**.

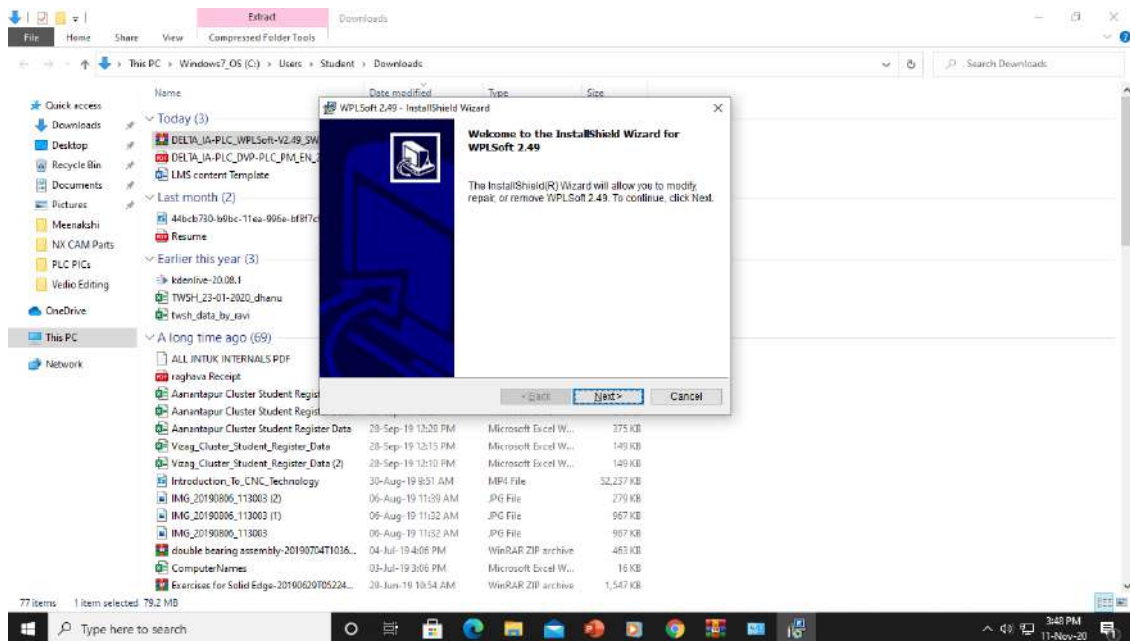


In this you will get the License Agreement. We have to **accept the terms in the License Agreement**. Then Click on **NEXT**.

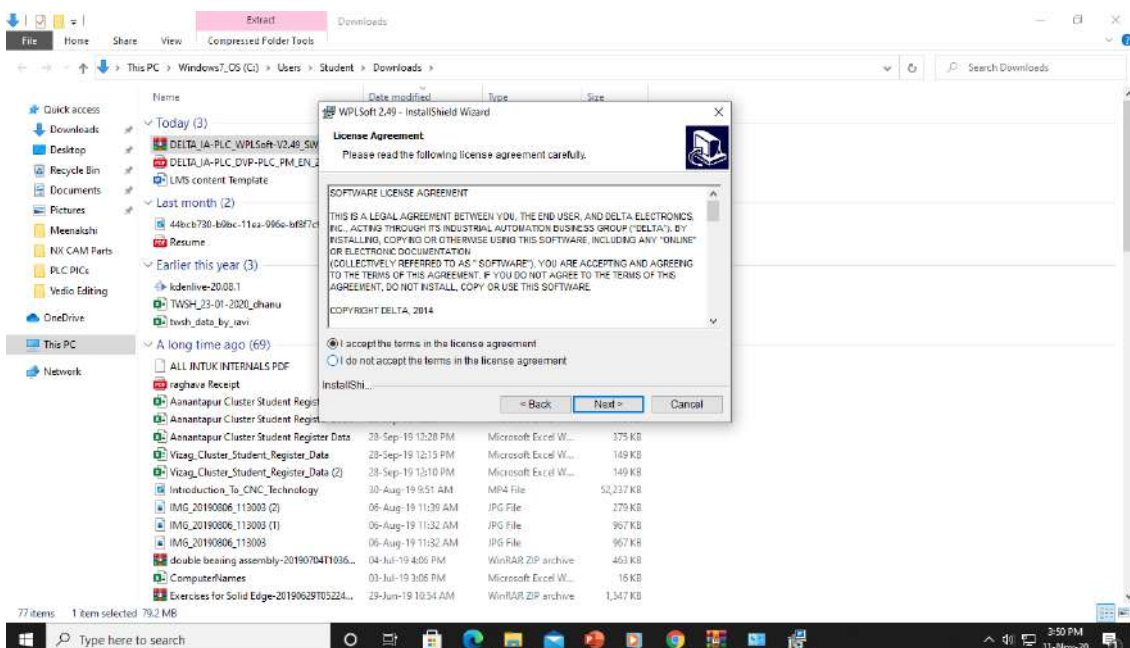


In this we have to continue with the default **User Name** or we can change it also. Then Click on **NEXT**.

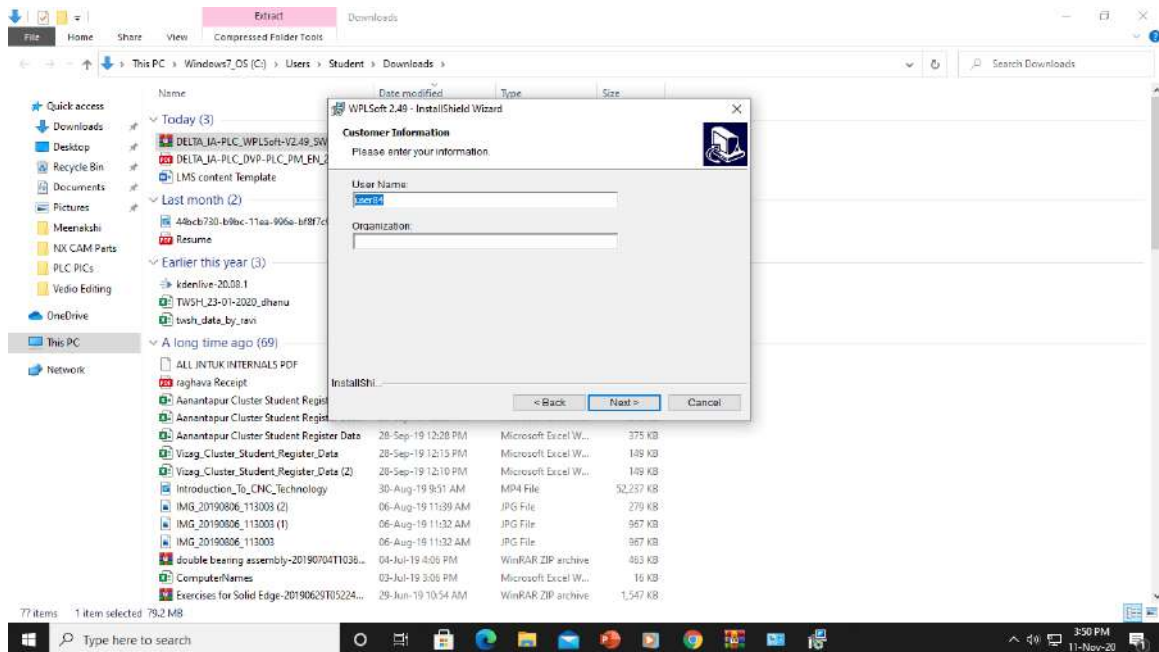

Now Click on **Install**.

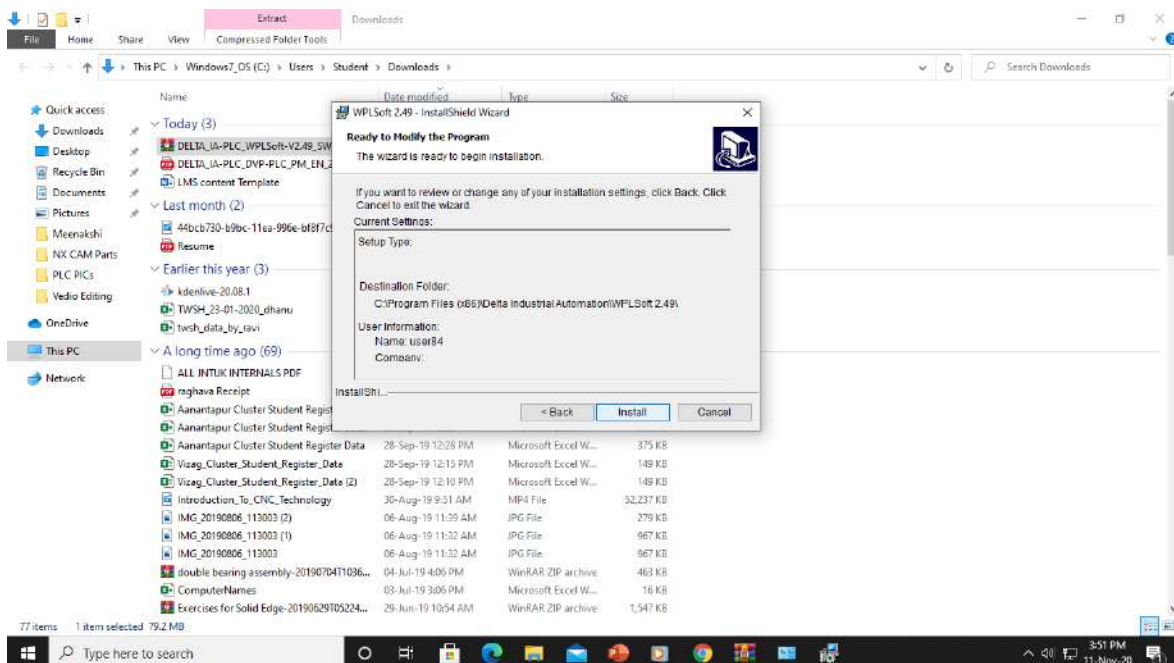

Now click on Finish.

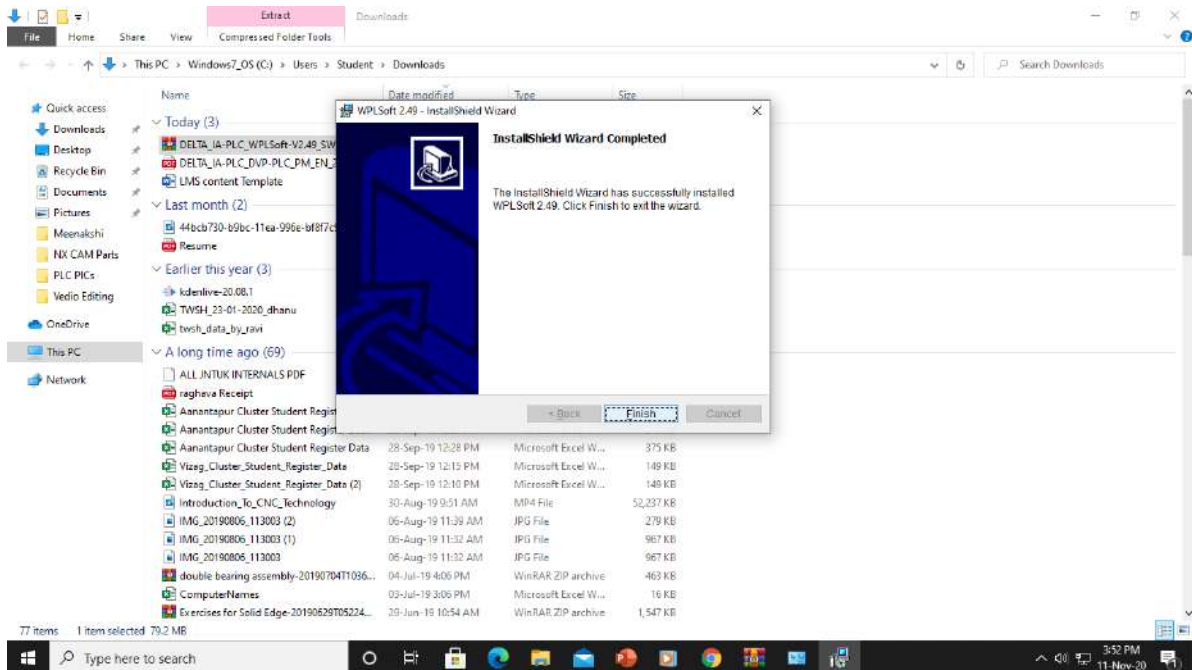

We will get the software on the Desktop After completing all the steps Shown Above.

