


NOTES:
1. Removed J35 and all its associated nets (used for LA De-Bugging Reasons only).

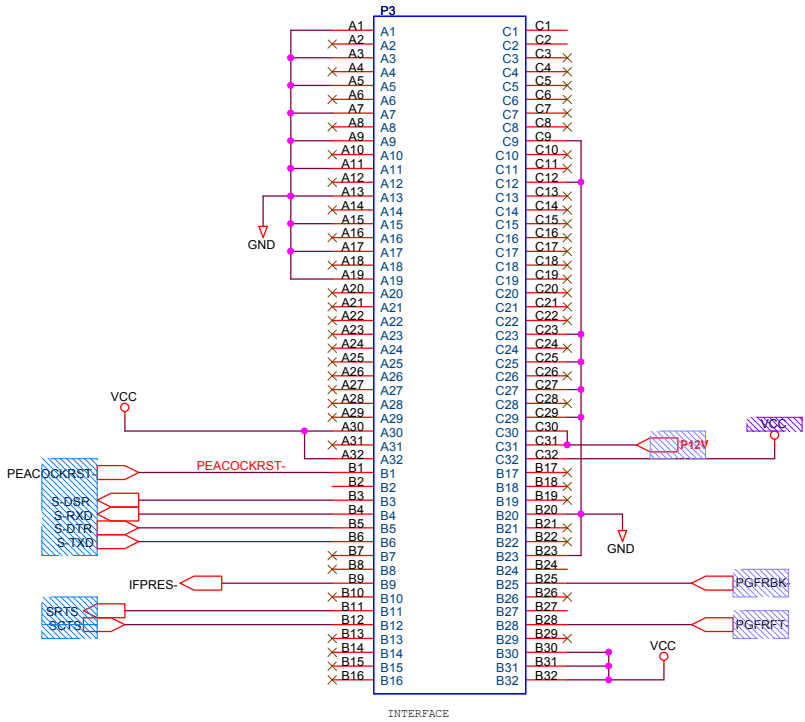

PEACOCK INTERFACE PIN OUTS			
P3 PEACOCK I/F			
	A	B	C
1	GND	RST-	
2		S-DSR	
3	GND	S-RXD	
4		S-DTR	
5	GND	S-TXD	
6			
7	GND		
8			
9	GND	IFFRES-	GND
10			
11	GND	SRTS	GND
12		SCTS	
13	GND		
14			
15	GND		
16			
17	GND		
18			
19	GND		
20		GND	
21			
22			
23		GND	GND
24			
25		PGFRBK-	GND
26			
27			GND
28		PGFRFT-	
29			GND
30	+5V	+5V	+12V
31		+5V	+12V
32	+5V	+5V	+5V

