


12V Deep-Cycle Battery + BatteryMINDER 128CEC2 + 20A Load

Maintainer and load wired in parallel across the battery

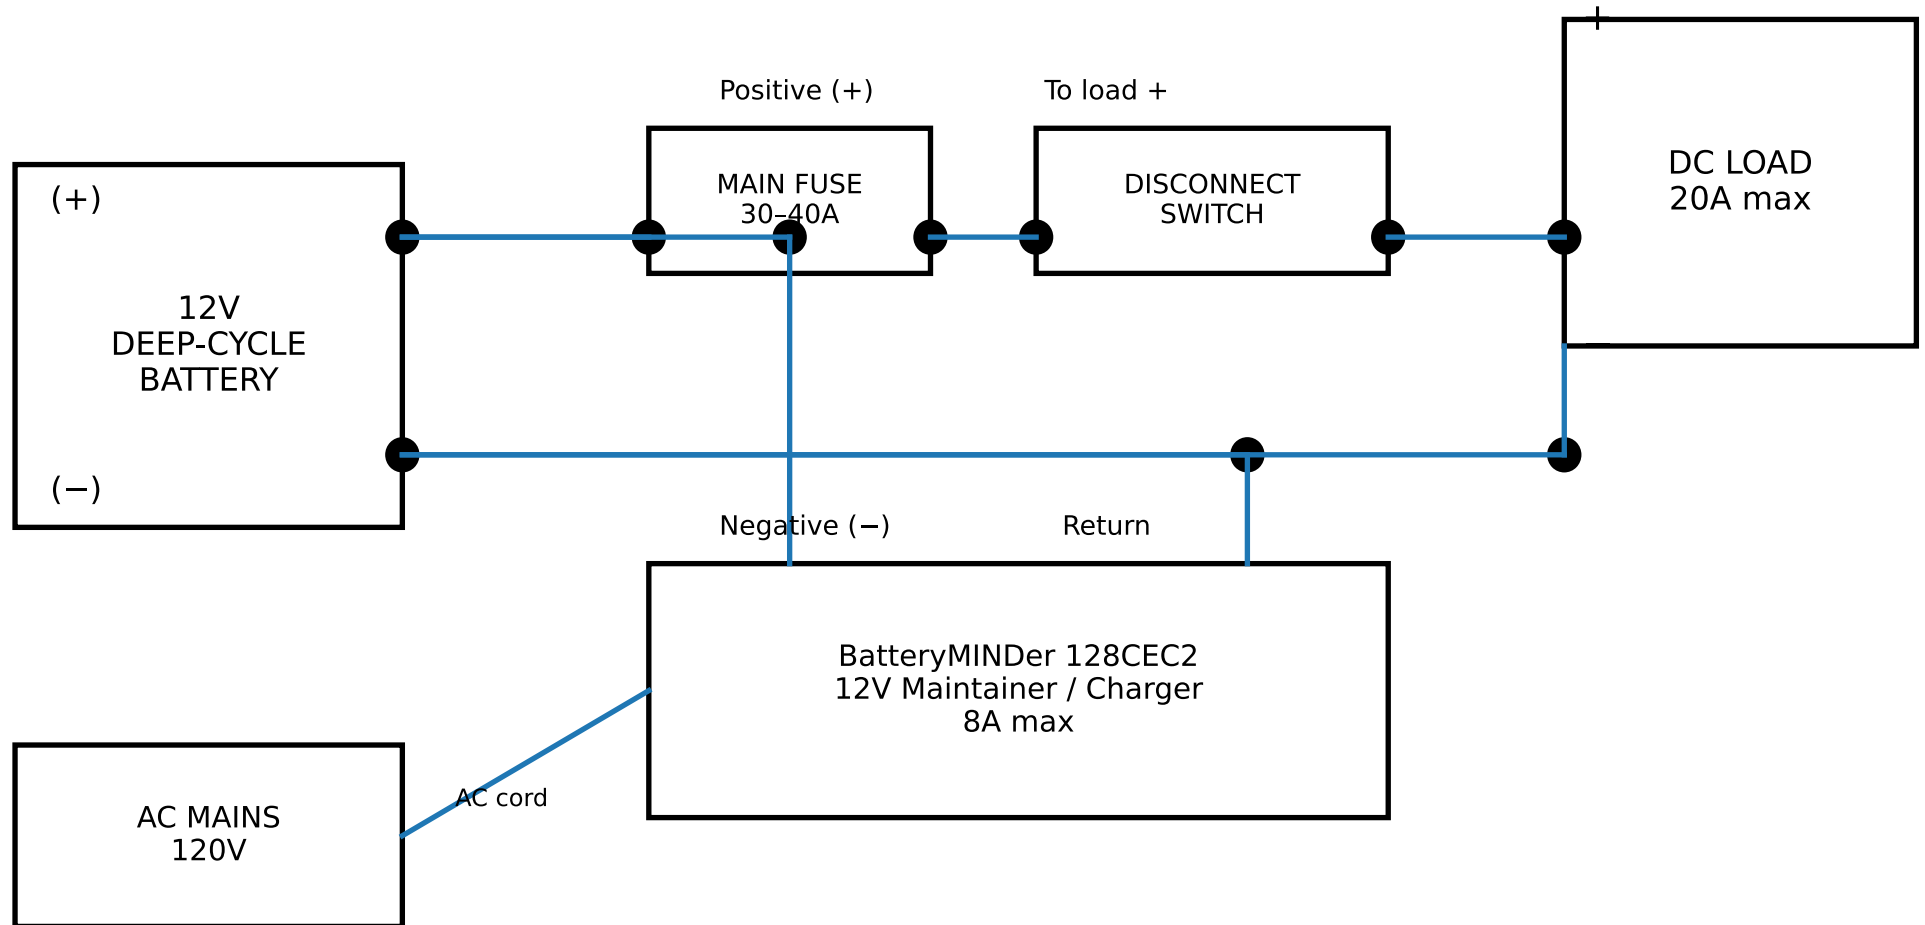

NOTES:

- BatteryMINDER output is 8A max; any load current above this is supplied by the battery.
 - Main fuse must be within 6-12 inches of the battery positive terminal.
 - Fuse size protects the wire, not the load.
- Use appropriate wire gauge (12 AWG short runs, 10 AWG longer runs).