



DEFAULT	PORT	ADC	PWM
USER LED	P1_4		
IO2	P1_5		X
IO1	P1_6		X
SS2	P2_4	A4	X
SS1	P2_5	A5	X
IRQ	P2_6	A6	X
ATN	P2_7	A7	X
SSEL	P2_3	A3	X
SCK	P2_2	A2	X
MISO	P2_1	A1	X
MOSI	P2_0	A0	X
3.3 VOLTS	3V3		
GROUND	GND		
USER BUTTON	P3_4		

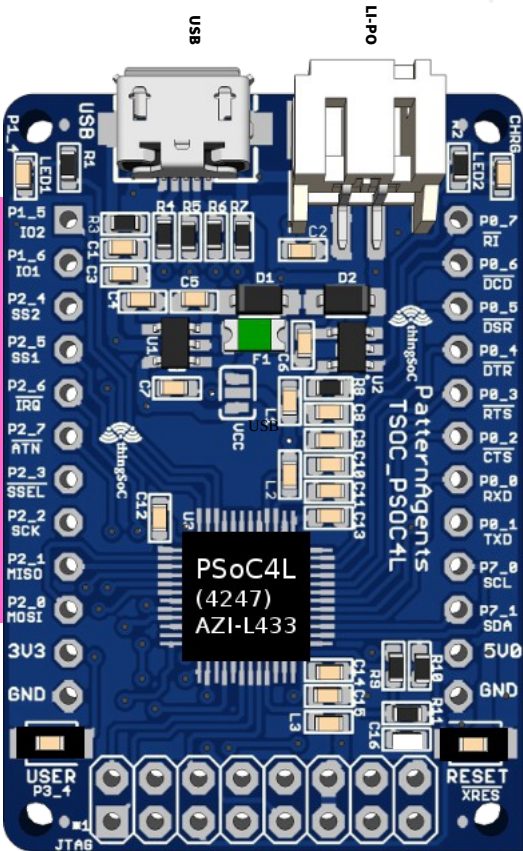

PSoC4L (4247) AZI-L433

DEFAULT	PORT	PWM
CHARGE LED	P0_7	X
RI	P0_7	X
DCD	P0_6	X
DSR	P0_5	X
DTR	P0_4	X
RTS	P0_3	X
CTS	P0_2	X
RXD	P0_0	
TXD	P0_1	
SCL	P7_0	
SDA	P7_1	
5.0 VOLTS	5V0	
GND	GND	
RESET BUTTON	XRES	

LEGEND	
POWER/GROUND PINS	
DIGITAL PINS	
ANALOG/ADC PINS	
PWM PINS	
TOUCH PINS	
UART PINS	
JTAG/DEBUG PINS	
I2C BUS PINS	



PatternAgents TSOC\_PSoC4L Board

[thingsoc/TSOC\\_PSoC4L/](https://thingsoc.com/TSOC_PSoC4L/)

GND	GND
CTS1 (P1_2)	SDA1 (P3_1)
5V0	VCC
RXD1 (P1_0)	SWDIO (P3_2)
TXD1 (P1_1)	SWDCLK (P3_3)
DTR1 (P3_7)	RESET#
RTS1 (P1_3)	SCL1 (P3_0)
DSR1 (P3_5)	DEBUG (P3_6)