




GND	RC0
GND	RC1
GND	RC2
GND	RC3
GND	RC4
GND	RC5
GND	RC6
GND	RC7

GND	GND	GND	GND	GND	GND	GND	GND
RE2	RE2	RE1	RA5	RA3	RA2	RA1	RA0

GND	RD0
GND	RD1
GND	RD2
GND	RD3
GND	RD4
GND	RD5

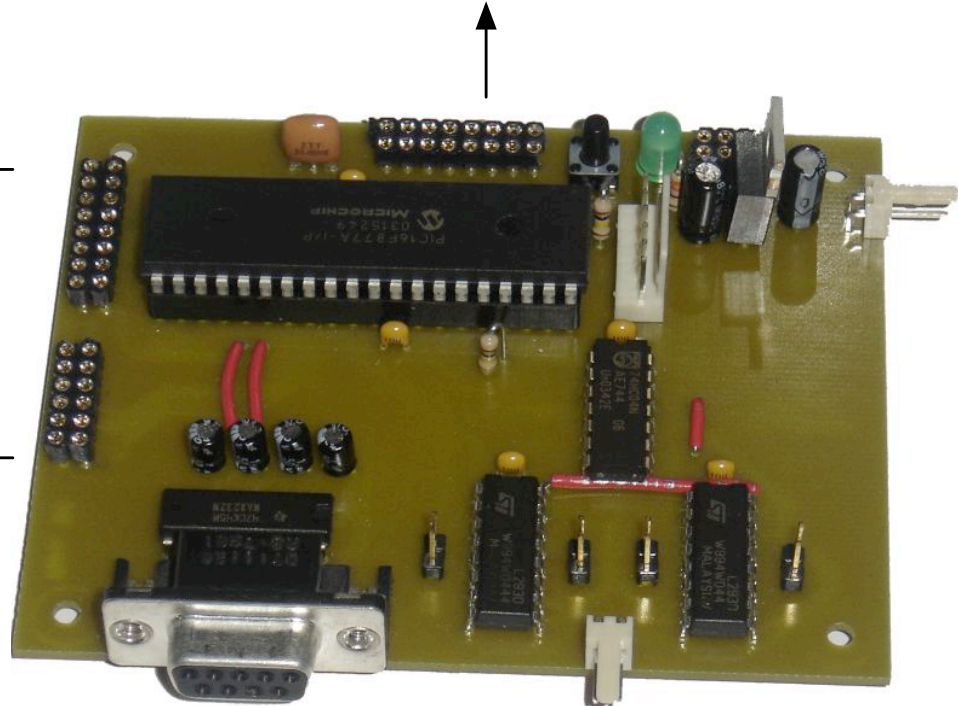

This picture depicts the BotBoard05 Pro Rev. 4 and its I/O ports. Please note that RC6 and RC7 are unavailable if the wire jumpers to the RS-232 level converter are present, as the MAX232 interferes with their normal, non-serial operation.

The diagram on the next page details the disposition of each I/O pin on the PIC.

