

Compact SD Card Adapter V4 for the Ender 3 Pro & V2.


Installation Guide for the Ender 3 Pro & V2

You will Need the following items in addition to the standard range of wrenches, side cutters, pliers etc.


1. 1 x M3 x 6 mm hex bolt.
2. Micro SD to SD Card Adapter. I would suggest something like the following:

https://www.amazon.co.uk/gp/product/B0855DBVXF/ref=ppx_yo_dt_b_search_asin_title?ie=UTF8&psc=1

1. Clip Hatch Lid onto the main body

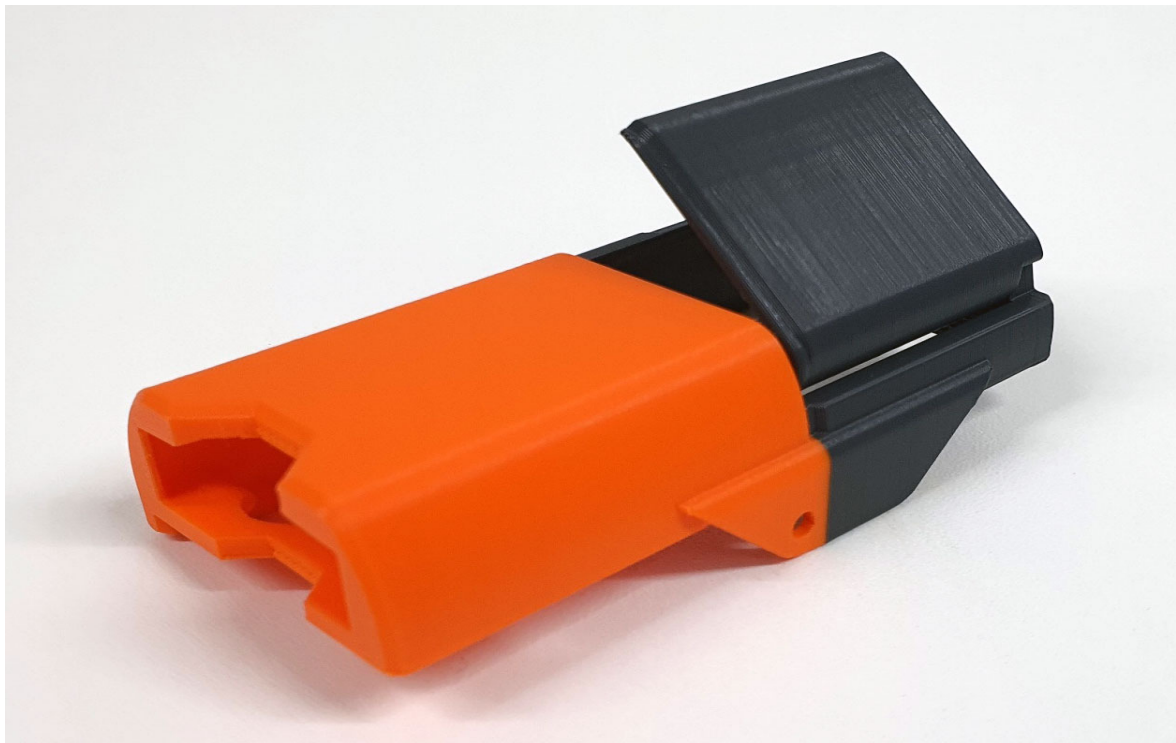

2. Insert the Card Adapter into the main body and place the Packer Bracket into the slot provided. The bracket will hold itself against the steelwork when fixed so does not need to be a tight fit. A small amount of double sided tape will hold it in place if there are any issues when installing.

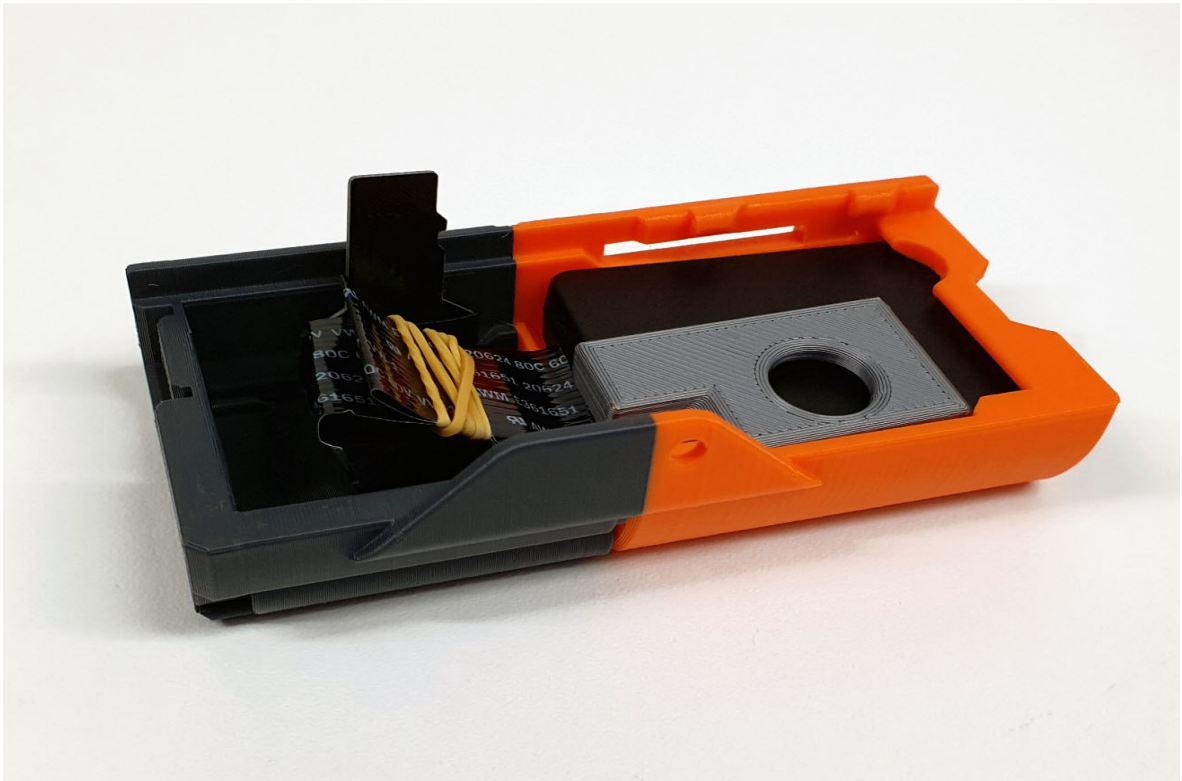

3. Hook the two fixing tabs over the edge of the steel panel where it meets the 4040 extrusion.



4. Remove the nearest motherboard plate fixing on the underside of the printer and hook the tab under the body. Replace the stock M3 x 3 mm bolt with a M3 x 6mm bolt or longer.



6. Carefully insert the card reader Micro SD end into the Micro SD slot, tidy the ribbon cable and close the hatch.....Done!



Apologies in advance for any typos or errors in this document. Boothy
28\09\20