



ConneXium Ethernet Cabling System

TCSESM-E Managed Switch Rugged Installation Guide

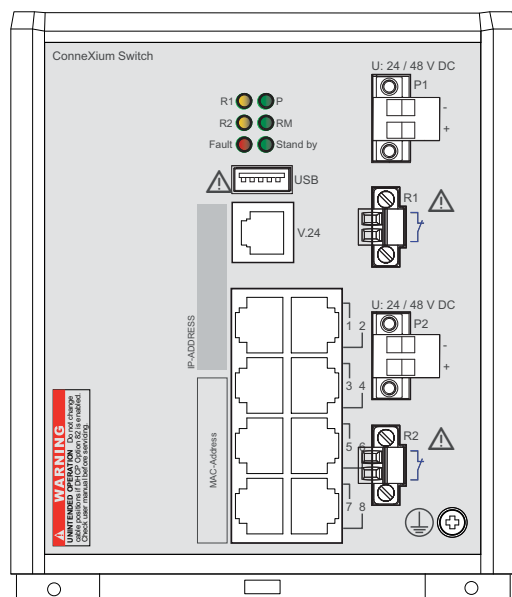

TCSESM083F23F1

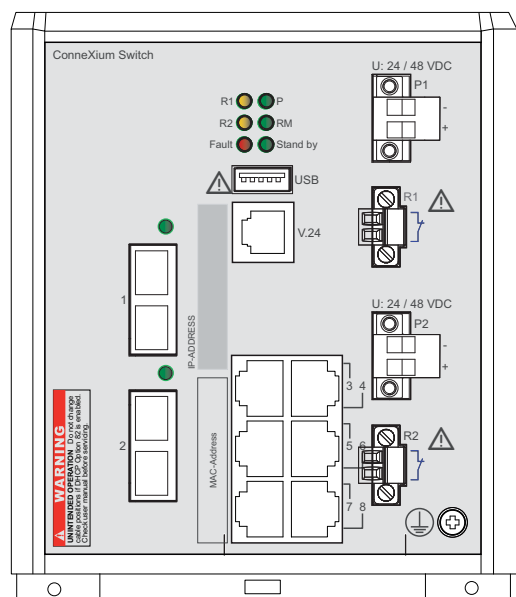

TCSESM063F2CU1 / TCSESM063F2CS1

EIO00000000529.01

Content

	About this Manual	5
	Key	7
	Safety instructions	8
1	Device description	15
1.1	General device description	15
1.2	Device versions	16
2	Assembly and start-up	18
2.1	Safety instructions	18
2.2	Installing the device	18
	2.2.1 Overview of installation	18
	2.2.2 Unpacking and checking	19
	2.2.3 Insert data in label area	19
	2.2.4 Connecting the terminal blocks for supply voltage and signal contact	20
	2.2.5 Installing the device and grounding	22
	2.2.6 Installing the terminal blocks; start-up procedure	23
	2.2.7 Connecting the data lines	24
2.3	Display elements	25
2.4	Basic set-up	28
2.5	Disassembly	30
3	Technical data	31

About this Manual

Validity Note

The data and illustrations found in this book are not binding. We reserve the right to modify our products in line with our policy of continuous product development. The information in this document is subject to change without notice and should not be construed as a commitment by Schneider Electric.

Product Related Information

Schneider Electric assumes no responsibility for any errors that may appear in this document. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, please follow the relevant instructions.

Failure to use Schneider Electric software or approved software with our hardware products may result in improper operating results.

Failure to observe this product related warning can result in injury or equipment damage.

User Comments

We welcome your comments about this document. You can reach us by e-mail at techpub@schneider-electric.com

Related Documents

Title of Documentation	Reference-Number
ConneXium Ethernet Cabling System Managed Switch User Manual Redundancy Configuration	31007126.03
ConneXium Ethernet Cabling System Managed Switch User Manual Basic Configuration	31007122.04
ConneXium Ethernet Cabling System Managed Switch Reference Manual Command Line Interface	31007130.03
ConneXium Ethernet Cabling System Managed Switch Reference Manual Web-based Interface	EIO0000000482.01
ConneXium Ethernet Cabling System Managed Switch Installation Manual TCSESM	31007118.05
ConneXium Ethernet Cabling System Managed Switch Installation Manual TCSESM-E	EIO0000000529.01

Note: The Glossary is located in the Reference Manual „Command Line Interface”.

The "Web-based Interface" reference manual contains detailed information on using the Web interface to operate the individual functions of the device.

The "Command Line Interface" reference manual contains detailed information on using the Command Line Interface to operate the individual functions of the device.

The "Installation" user manual contains a device description, safety instructions, a description of the display, and the other information that you need to install the device.

The "Basic Configuration" user manual contains the information you need to start operating the device. It takes you step by step from the first startup operation through to the basic settings for operation in your environment.

The "Redundancy Configuration" user manual contains the information you need to select a suitable redundancy procedure and configure that procedure.

Key

The commendations used in this manual have the following meanings:

▶	Listing
□	Work step
■	Subheading

Safety instructions

■ Important Information

Notice: Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

PLEASE NOTE: Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

© 2010 Schneider Electric. All Rights Reserved.

■ Usage

The device may only be employed for the purposes described in the catalog, technical description, and manuals.

■ Supply voltage

- ☐ The device does not contain any user-serviceable components. Internal fuses only trigger if there is a detected fault in the device.
- ☐ Only apply supply voltage to the device if terminal blocks are wired and installed correctly as described in chapter “[Connecting the terminal blocks for supply voltage and signal contact](#)” on page 20.
- ☐ Connect the protective conductor with the ground screw before you set up the other connections. When removing the connections, you remove the protective conductor last.
- ☐ Make sure that the cross-section of the protective conductor cable is the same size as or bigger than the cross-section of the voltage supply cables.
- ☐ Only use connection cables that are permitted for the specified temperature range.



WARNING

LOSS OF COMMUNICATION

If the neutral conductor or the negative terminal of the supply voltage is not grounded, install a suitable input fuse.

Use a slow-blow fuse with a nominal rating of 6.3 A for the voltage supply input.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

- ☐ Use a cable cross-section of at least 1.0 mm² (for North America, AWG 16) for the current conductor at the voltage input.
- ☐ Relevant for North America:
Only use 75 °C copper wire.

■ Shielding ground

Note: The shielding ground of the connectable twisted pairs lines is connected to the front panel as a conductor.



DANGER

HAZARD OF ELECTRIC SHOCK

Never insert sharp objects (small screwdrivers, wires, etc.) into the inside of the product.

Failure to follow these instructions will result in death, serious injury, or equipment damage.



CAUTION

EQUIPMENT OVERHEATING

When installing the device, make sure the ventilation slots remain free. Maintain a clearance of at least 10 cm (3.94 in).

Failure to follow these instructions can result in injury or equipment damage.

Only technicians authorized by the manufacturer are permitted to open the housing.

The device is grounded via the separate ground screw. It is located on the bottom left of the front panel.

- ☐ Make sure that the electrical installation meets local or nationally applicable safety regulations.
- ☐ The ventilation slots must not be covered so as to ensure free air circulation.
- ☐ The clearance to the ventilation slots of the housing must be at least 10 cm (3.94 in).
- ☐ The device must be installed in the vertical position.
- ☐ If installed in a living area or office environment, the device must be operated exclusively in switch cabinets with fire protection characteristics according to EN 60950-1.

■ Environment

The device may only be operated at the specified maximum ambient temperature (temperature of the surrounding air at a distance of up to 5 cm (1.97 in) to the device) and relative air humidity.

- ☐ Install the device in a location where the climatic threshold values specified in the technical data are adhered to.
- ☐ Only to be used in an environment with a pollution degree specified in the technical data.

■ General safety instructions

Electricity is used to operate this equipment. Comply with every detail of the safety requirements specified in the operating instructions regarding the voltages to apply (see page 9).

- ☐ Only qualified personnel should work on this device or in its vicinity. These personnel must be thoroughly familiar with all the warnings and maintenance procedures in accordance with this operating manual.
- ☐ The proper and safe operation of this device depends on proper handling during transport, proper storage and assembly, and conscientious operation and maintenance procedures.
- ☐ Never start operation with damaged components.
- ☐ Any work that may be required on the electrical installation may only be carried out by personnel trained for this purpose.

Note: LED or LASER components in compliance with IEC 60825-1 (2001):

CLASS 1 LASER PRODUCT

CLASS 1 LED PRODUCT

Light is emitted from the optical connections or from the ends of the connected optical fibers that are connected to the optical connections. LIGHT EMITTING DIODE CLASS 2 M, wave length 650 nm, power <2 mW in accordance with DIN EN 60825-1:2003-10.

LIGHT EMITTING DIODE CLASS 1 - CLASS 1 LED PRODUCT



WARNING

EYE DAMAGE DUE TO LASER LIGHT

Do not look into the beam or view the beam directly with optical instruments (magnifying glasses, microscope). At a distance of less than 100 mm (3.94 in), failure to observe this precaution can cause injury to your eyes.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

■ National and international safety regulations

- ☐ Make sure that the electrical installation meets local or nationally applicable safety regulations.

■ Note on the CE marking

The devices comply with the regulations contained in the following European directive(s):

2004/108/EG

Directive of the European Parliament and the council for standardizing the regulations of member states with regard to electromagnetic compatibility.

In accordance with the above-named EU directive(s), the EU conformity declaration will be at the disposal of the relevant authorities at the following address:

Schneider Electric SA
43-45, boulevard Franklin-Roosevelt
92500 Rueil-Malmaison - France
Tel.:

The product can be used in living areas (living area, place of business, small business) and in industrial areas.

- ▶ Interference immunity: EN 61000-6-2:2005
- ▶ Emitted interference: EN 55022:2006 + A1:2007 Class A

■ FCC note:

Appropriate testing has established that this device fulfills the requirements of a class A digital device in line with part 15 of the FCC regulations.

These requirements are designed to provide sufficient protection against interference when the device is being used in a business environment. The device creates and uses high frequencies and can radiate same, and if it is not installed and used in accordance with this operating manual, it can cause radio transmission interference. The use of this device in a living area can also cause interference, and in this case the user is obliged to cover the costs of removing the interference.

■ Instructions for Use in Hazardous Locations

SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C AND D
HAZARDOUS LOCATIONS, OR NONHAZARDOUS LOCATIONS
ONLY.



WARNING

EXPLOSION HAZARD

Substitution of any components may impair suitability for CLASS I, DIVISION 2.

Failure to follow these instructions can result in death, serious injury, or equipment damage.



WARNING

EXPLOSION HAZARD

Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.

Failure to follow these instructions can result in death, serious injury, or equipment damage.




WARNING

EXPLOSION HAZARD

The USB connector is for temporary connection only. Do not use, connect, or disconnect unless area is known to be non-hazardous. Connection or disconnection in an explosive atmosphere could result in an explosion.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

CONTROL DRAWING: Hazardous Locations Class I Division 2 Groups A, B ,C ,D

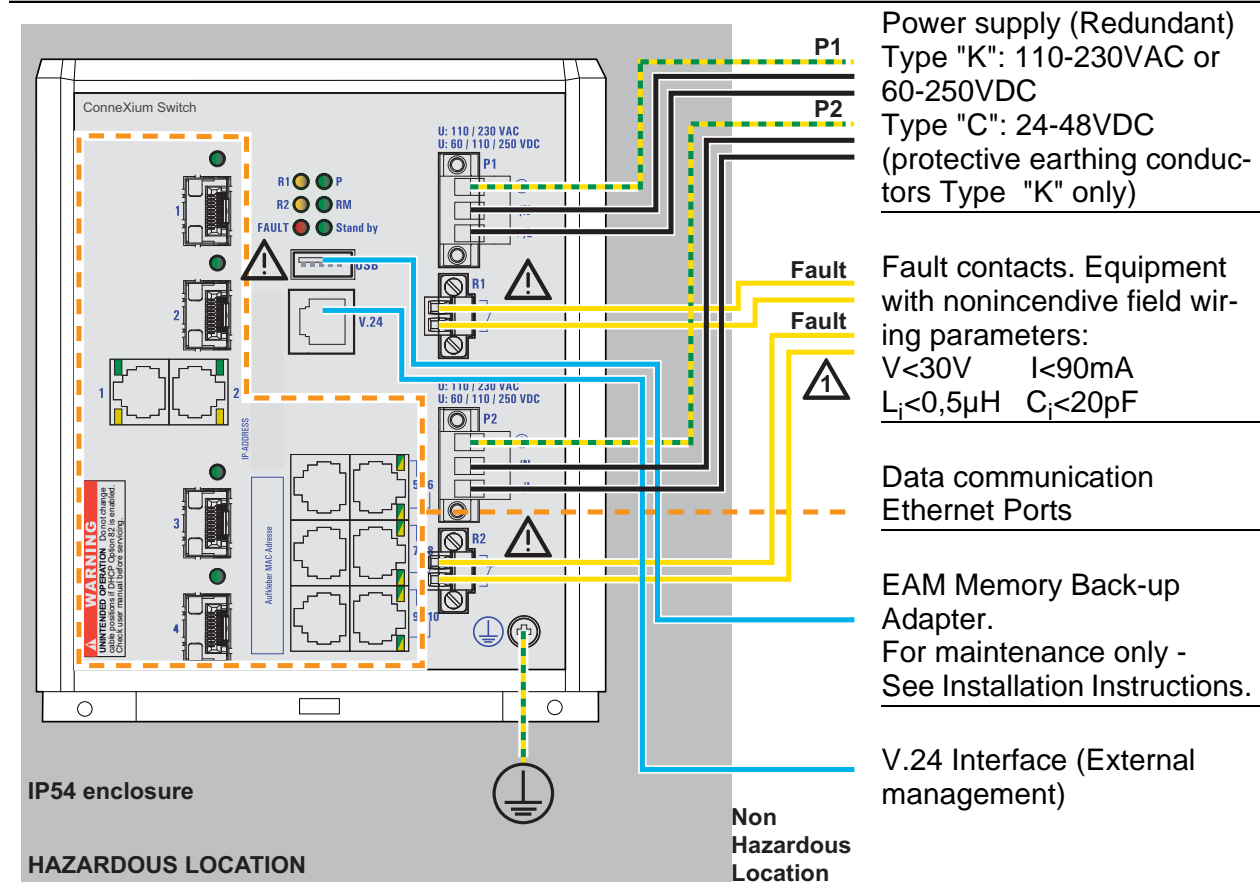

1

1 The nonincendive field wiring circuit concept allows interconnection of nonincendive field wiring apparatus and associated nonincendive field wiring apparatus using any of the wiring methods permitted for unclassified locations when certain parametric conditions are met.

$$C_a \geq C_j + C_{\text{cable}} ; L_a \geq L_j + L_{\text{cable}}$$

Nonincendive field wiring circuits must be wired in accordance with the National Electrical Code (NEC), NFPA 70 , article 501.

Nonincendive Field Wiring Parameters:

Entity Parameters for Class I Division 2 Groups A,B,C,D	V_{\max} [V]	I_{\max} [mA]	C_i [pF]	L_i [μH]
Connector: 2 pole, Contacts: Fault contacts	30	90	20	0.5



Warnung!

EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR HAZARDOUS LOCATIONS OR EXPLOSIVE ATMOSPHERES.

EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.

DO NOT OPEN WHEN ENERGIZED.

Table 1: CONTROL DRAWING for TCSESM-E family
Document No.: 000144941DNR

1 Device description

1.1 General device description

The TCSESM-E devices are designed for the special requirements of industrial automation. They meet the relevant industry standards, provide very high operational reliability, even under extreme conditions, and also long-term reliability and flexibility.

The devices allow you to set up switched industrial ETHERNET networks that conform to the IEEE 802.3 and 802.3u standards using copper wires or optical fibers in a line or ring structure.

The devices work without a fan.

The voltage is supplied redundantly.

Mount the devices by

- ▶ simply snapping them onto a DIN rail

Depending on the device variant, you can choose various media to connect terminal devices and other infrastructure components:

- ▶ twisted pair cable
- ▶ multimode F/O
- ▶ singlemode F/O

The twisted pair ports support:

- ▶ Autocrossing
- ▶ Autonegotiation
- ▶ Autopolarity

There are a number of convenient options for managing the device.

Administer your devices via:

- ▶ a Web browser
- ▶ Telnet
- ▶ a V.24 interface (locally on the Switch)

Product configuration data can be provided by:

- ▶ diagnosis displays
- ▶ displaying the operating parameters
- ▶ a label area for the IP address

The devices provide you with a large range of functions:

- ▶ Redundancy functions
 - ▶ Rapid Spanning Tree Protocol (RSTP)
 - ▶ HIPER-Ring
 - ▶ Media Redundancy Protocol (MRP)

- ▶ Redundant coupling
- ▶ Redundant power supply
- ▶ Security
 - ▶ Protection from unauthorized access
 - ▶ Blocking of unauthorized messages (MAC or IP based)
- ▶ Synchronized system time in the network
- ▶ Network load control
- ▶ Network filter
- ▶ Operation diagnosis
- ▶ Diagnostics (hardware self-testing)
- ▶ Reset
- ▶ Priority
- ▶ VLAN
- ▶ Topology Discovery
- ▶ Web-based Interface
- ▶ Command Line Interface CLI
- ▶ SNMP
- ▶ 802.1x port authentication
- ▶ Real Time Clock

1.2 Device versions

Part number	Part number	Description
8 port version	TCSESM083F23F1	8 x 10/100 TX managed
	TCSESM063F2CU1	6 x 10/100 TX managed 2 x 100 FX-MM managed
	TCSESM063F2CS1	6 x 10/100 TX managed 2 x 100 FX-SM managed
Accessories	TCSEAM0100 Adapter	Memory Back-up Adapter
	490NTRJ11 cable	Terminal cable

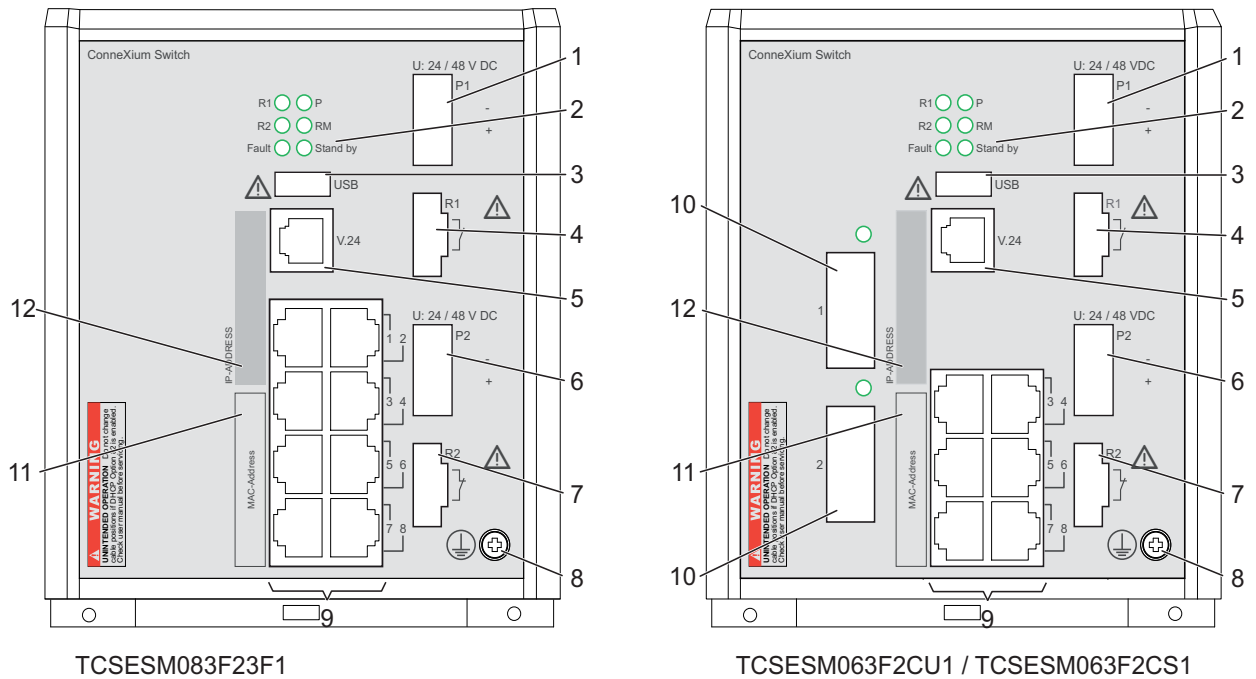


Figure 1: The figure shows the 4-port versions of the TCSESM-E.

1 – voltage range 1 (nominal voltage 24 V DC to 48 V DC)

2 – LED display elements

3 – USB interface

4 – signal contact 1

5 – V.24 connection for external management

6 – voltage range 2 (nominal voltage 24 V DC to 48 V DC)

7 – signal contact 2

8 – protective earth ground

9 – ports in compliance with 10/100BASE-T(X) (RJ45 connections)
– LAN only

10 – port 1 + port 2:

TCSESM063F2CU1: Multimode FX, DSC, 100 Mbit/s – LAN only

TCSESM063F2CS1: Singlemode FX, DSC, 100 Mbit/s – LAN only

11 – MAC address field

12 – IP address field

2 Assembly and start-up

2.1 Safety instructions

■ Staff qualification requirements

Only appropriately qualified staff should work on or near this equipment. Such staff must be thoroughly acquainted with all the warnings and maintenance measures contained in these operating instructions.

The proper and safe operation of this equipment assumes proper transport, appropriate storage and assembly, and careful operation and maintenance.

Qualified staff are persons familiar with setting up, assembling, starting up, and operating this product, and who have appropriate qualifications to cover their activities, such as:

- ▶ knowledge of how to switch circuits and equipment/systems on and off, ground them, and identify them in accordance with current safety standards
- ▶ training or instruction in accordance with current safety standards of using and maintaining appropriate safety equipment
- ▶ first aid training

■ Recycling note

After usage, this product must be disposed of properly as electronic waste, in accordance with the current disposal regulations of your county, state and country.

2.2 Installing the device

2.2.1 Overview of installation

Having two or more devices with the same IP address can cause unpredictable operation of your network.



WARNING

DUPLICATE ADDRESS HAZARD

Establish and maintain a process for assigning unique IP addresses to all devices on the network.

Failure to follow these instructions can result in death, serious injury, or equipment damage.



WARNING

UNINTENDED OPERATION

Do not change cable positions if DHCP Option 82 is enabled. Check the Basic Configuration user manual before servicing (refer to DHCP OPTION 82 topic).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

On delivery, the device is ready for operation.

The following steps should be performed to install and configure a switch:

- ▶ Unpacking and checking
- ▶ Insert data in label area
- ▶ Connect the terminal block for voltage supply and signal contact and connect the supply voltage
- ▶ Install the basic module on the DIN rail, grounding
- ▶ Install the terminal block, start-up procedure
- ▶ Connecting the data lines

2.2.2 Unpacking and checking

- ☐ Check whether the contents of the package are complete ([see page 33 "Scope of delivery"](#)).
- ☐ Check the individual parts for transport damage.

2.2.3 Insert data in label area

The information field for the IP address on the front of the device helps you to structure your network installation clearly.

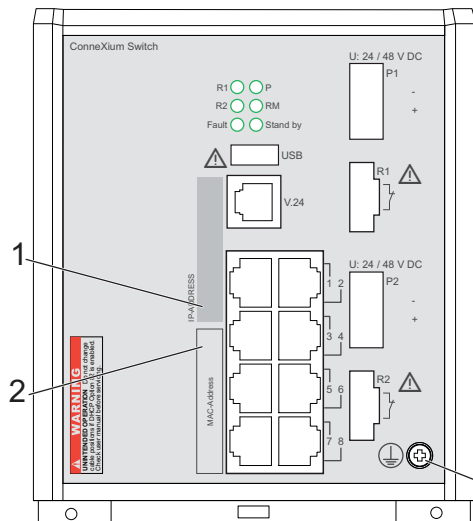


Figure 2: Label area for IP address of device
 1 – IP address of device (label area)
 2 – MAC address of device (label)

2.2.4 Connecting the terminal blocks for supply voltage and signal contact

The supply voltage is connected via a 2-pin terminal block with screw locking.
 The signal contacts are connected via a 2-pin terminal block with screw locking.

■ Supply voltage

DANGER

HAZARD OF ELECTRIC SHOCK OR BURN

When the module is operated with direct plug-in power units, use only:

- SELV supply units that comply with IEC 60950/EN 60950 and
- (in USA and Canada) Class 2 power units that comply with applicable national or regional electrical codes

Connect the ground wire to the PE terminal before you establish any further connections. When you remove connections, disconnect the ground wire last.

Failure to follow these instructions will result in death, serious injury, or equipment damage.

The supply voltage can be connected redundantly. Both inputs are uncoupled. There is no distributed load. With redundant supply, the power supply unit supplies the device only with the higher output voltage. The supply voltage is electrically isolated from the housing.

Note: With non-redundant supply of the main voltage, the device reports a loss of power. You can avert this message by applying the supply voltage via both inputs, or by changing the configuration in the Management.

The supply voltage is connected via pin 1 and pin 2.

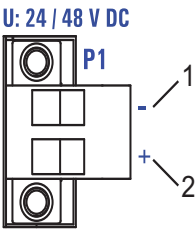
Figure	Pin	Assignment	Power supply
	1	Minus terminal of the supply voltage	Nominal voltage DC: 24 - 48 V Voltage range DC: 18 - 60 V (incl. max. tolerances), SELV Connection type: 2-pin terminal block Power failure bridging: > 10 ms for 20.4 V DC Fuse: installed in power supply unit
	2	Plus terminal of the supply voltage	

Table 2: Connecting the supply voltage

- ☐ Pull the terminal block off the device.
- ☐ Connect the supply voltage lines.

Note: Relevant for North America:

The tightening torque for field wiring terminals is max. 4.4 lb in (0,5 Nm).

■ Signal contact

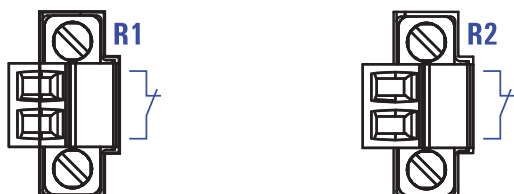


Figure 3: Pin assignment of the signal contact

You have two signal contacts for each device.

- The signal contact (“FAULT”, for pin assignment of terminal block, see [fig. 3](#)) monitors the functioning of the device, thus enabling remote diagnostics. You can specify the type of function monitoring in the Management.
- You can also use the switch Web page to switch the signal contact manually and thus control external devices.

A break in contact is used to report the following conditions via the potential-free signal contact (relay contact, closed circuit):

- The detected inoperability of at least one of the two voltage supplies (voltage supply 1 or 2 is below the threshold value).

- ▶ The loss of connection at at least one port. The report of the link status can be masked by the Management for each port. In the delivery state, link status monitoring is deactivated.
- ▶ The temperature threshold has been exceeded or has not been reached.
- ▶ The removal of the Memory Back-up Adapter.

The following condition is also reported in RM mode:

- ▶ Ring redundancy reserve is available. On delivery, there is no ring redundancy monitoring.
- ☐ Pull the terminal block off the device.
- ☐ Connect the signal lines.

Note: Relevant for North America:

The tightening torque for field wiring terminals is max. 4.4 lb in (0,5 Nm).

2.2.5 Installing the device and grounding

You can mount the device on the DIN rail.

■ Mounting on the DIN rail


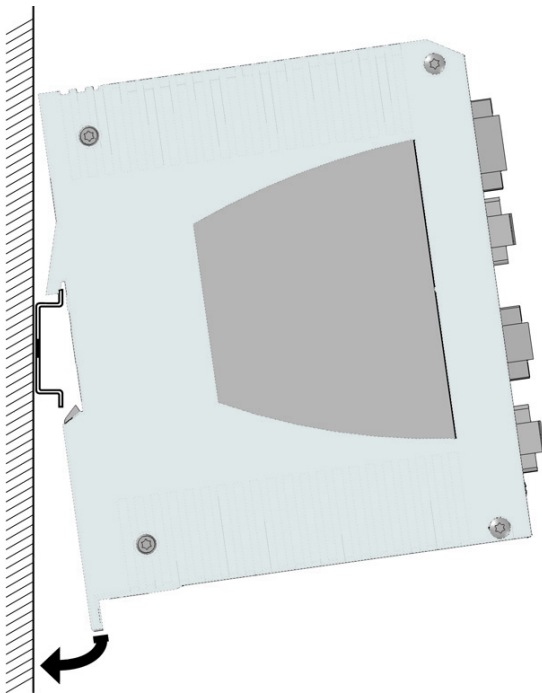


Figure 4: Mounting on the DIN rail

- ☐ Mount the device on a 35 mm DIN rail in accordance with DIN EN 60175.
- ☐ Attach the upper snap-in guide of the device into the DIN rail and press it down against the DIN rail until it snaps into place.

Note: The shielding ground of the industrial connectable twisted pair lines is connected to the lower panel as a conductor.

■ Dimension drawings

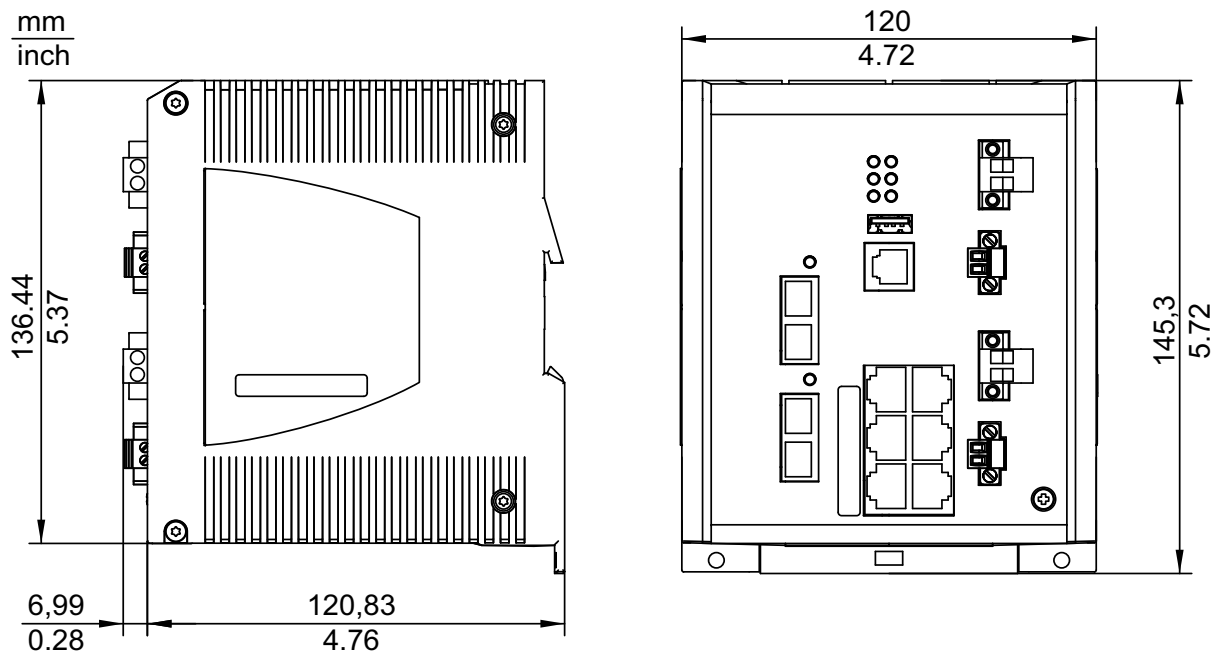

■ Grounding

The device is grounded via the separate ground screw on the front panel of the device.

The devices have a protective conductor connection.

- ☐ Connect the protective conductor to the ground screw of the device.
- ☐ Connect the protective conductor before you set up the other connections. When removing the connection, you remove the protective conductor last.
- ☐ Connect both protective conductors if your device is equipped with two power supplies units.

2.2.6 Installing the terminal blocks; start-up procedure

■ Mounting the terminal blocks

- ☐ Mount the terminal blocks for the voltage supply and signal contact on the front of the device using screws.

■ Installation

By connecting the voltage supply via the terminal blocks, you start the operation of the device.

2.2.7 Connecting the data lines

You can connect terminal devices and other segments at the ports of the device via twisted pair cables or F/O cables.

□ Install the data lines according to your requirements.

■ 10/100 Mbit/s twisted pair connection

These connections are RJ45 sockets.

10/100 Mbit/s TP ports enable the connection of terminal devices or independent network segments according to the IEEE 802.3 10BASE-T/100BASE-TX standard.

These ports support:

- ▶ Autonegotiation (data rate and duplex mode)
- ▶ Autopolarity
- ▶ Autocrossing (if autonegotiation is activated)
- ▶ 100 Mbit/s half-duplex mode, 100 Mbit/s full duplex mode
- ▶ 10 Mbit/s half-duplex mode, 10 Mbit/s full duplex mode

State on delivery: autonegotiation activated.

The socket housing is electrically connected to the bottom panel.

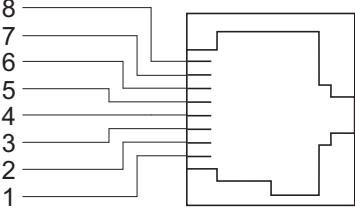
Figure	Pin	Function
	1+2	One line pair
	3+6	One line pair
	4,5,7,8	Not used

Table 3: Pin assignment of a TP/TX interface in MDI-X mode, RJ45 socket

Note: In substation applications, the RJ45 ports are used to connect to additional communication devices such as routers or telecommunication multiplexers that are installed in close proximity to the device (i.e. less than 3 meters / 9.83 ft). It is not recommended to use these ports for connection to field devices across longer distances which could cause a significant increase in the ground potential (Ground Potential Rise GPR, i.e. more than 2500 V).

■ 100 Mbit/s F/O connection

These connections are DSC connectors.

100 MBit/s F/O ports enable the connection of terminal devices or independent network segments in compliance with the IEEE 802.3 100BASE-FX standard.

These ports support:

► Full or half duplex mode
State on delivery: full duplex FDX

Note: Make sure that the SM ports are only connected with SM ports, and MM ports only with MM ports.

Note: LED or LASER components in compliance with IEC 60825-1 (2001):
CLASS 1 LASER PRODUCT
CLASS 1 LED PRODUCT

Light is emitted from the optical connections or from the ends of the connected optical fibers that are connected to the optical connections.
LIGHT EMITTING DIODE CLASS 2 M, wave length 650 nm, power <2 mW in accordance with DIN EN 60825-1:2003-10.
LIGHT EMITTING DIODE CLASS 1 - CLASS 1 LED PRODUCT



WARNING


EYE DAMAGE DUE TO LASER LIGHT

Do not look into the beam or view the beam directly with optical instruments (magnifying glasses, microscope). At a distance of less than 100 mm (3.94 in), failure to observe this precaution can cause injury to your eyes.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

2.3 Display elements

After establishing the operating voltage, the software starts and initializes itself. Afterwards, the device performs a self-test. During this process, various LEDs light up. The process lasts around 40 seconds.

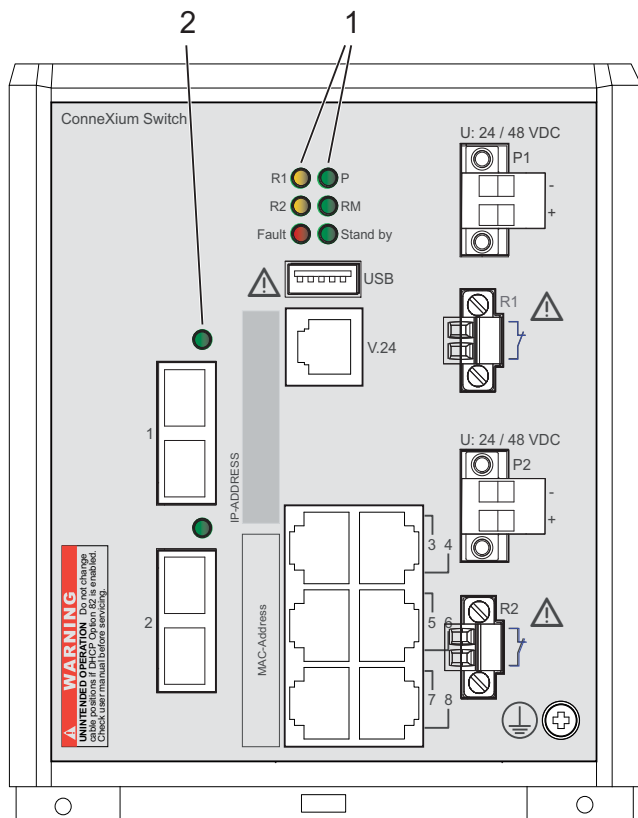

TCSESM063F2CU1 / TCSESM063F2CS1

Figure 5: LED display elements

1 – Device state

2 – Port state

■ Device state

These LEDs provide information about conditions which affect the operation of the whole device.

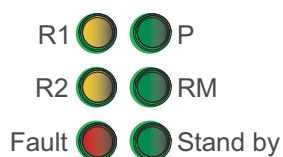


Figure 6: Device status LEDs

P - Power (green/yellow LED) Meaning

Glowing green	Device variants with 1 power supply unit: Supply voltage is on
Glowing yellow	Device variants with 2 power supply units: There is only one supply voltage (P1 or P2) on
Not glowing	Supply voltage is too low

RM - Ring Manager (green/yellow LED)

Glowing green	RM function active, redundant port disabled
Glowing yellow	RM function active, redundant port enabled

RM - Ring Manager (green/yellow LED)	
Not glowing	RM function not active
Flashing green	Incorrect configuration of the HIPER-Ring (e.g. the ring is not connected to the ring port).
Stand-by (green LED)	Meaning
Glowing green	Standby mode enabled
Not glowing	Stand-by mode not enabled
FAULT (red LED)	Meaning
Glowing red	Signal contact 1 is open, i.e. it is reporting an error.
Not glowing	Signal contact 1 is closed, i.e. it is not reporting an error.
R1 (yellow LED)	Meaning
Glowing yellow	Signal contact 1 closed in manual operation
Not glowing	Signal contact 1 open in manual operation
R2 (yellow LED)	Meaning
Glowing yellow	Signal contact 2 closed in manual operation
Not glowing	Signal contact 2 open in manual operation
RM and stand-by during read and write access - display saving processes	
Flashing alternately	Error during saving process.
LED's flash synchronously, two times a second	Loading configuration from the Memory Backup Adapter EAM.
LED's flash synchronously, once a second	Saving the configuration in the Memory Backup Adapter EAM.

If the manual adjustment is active on the signal contact, then the error display is independent of the setting of the signal contact.

■ Port state

These LED's display port-related information. During the boot phase, these LED's are used to display the status of the boot procedure.

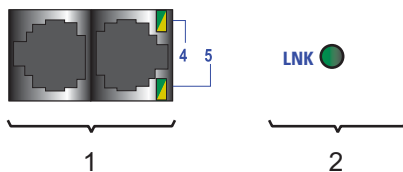


Figure 7: Port status LEDs

- 1 – Port status LEDs for double-row RJ45 sockets: one LED per port, glowing/flashing either green or yellow.
- 2 – Port status LEDs for DSC, SFP

1 to n - data, link status (green/yellow LED)	Meaning
Not glowing	No valid connection
Glowing green	Valid connection
Flashing green (1 time a period)	Port is switched to stand-by
Flashing green (3 time a period)	Port is disabled
Flashing yellow	Data reception at corresponding port

2.4 Basic set-up

The IP parameters must be entered when the device is installed for the first time.

The device provides the following options for configuring IP addresses:

- ▶ Configuration via V.24 connection
- ▶ Configuration via the switch configurator software
- ▶ Configuration via BOOTP
- ▶ Configuration via DHCP
- ▶ Configuration via the Memory Back-up Adapter (TCSEAM 0100)

Further information on the basic settings of the device can be found in the "Basic Configuration" user manual on the CD ROM.

■ Default settings

- ▶ IP address: The device looks for the IP address using DHCP
- ▶ Management password:
user, password: public (read only)
admin, password: private (read and write)
- ▶ V.24 data rate: 9,600 Baud
- ▶ Ring redundancy: disabled
- ▶ Ethernet ports: link status is not evaluated (signal contact)
- ▶ Optical 100 Mbit/s ports: 100 Mbit/s full duplex
All other ports: Autonegotiation
- ▶ Ring Manager: disabled
- ▶ Stand-by coupling: disabled
- ▶ Rapid Spanning Tree (RSTP): enabled

■ USB interface

The USB socket has an interface for the local connection of a Memory Back-up Adapter (EAM). The EAM is used for saving/loading the configuration data and diagnostic information, and for loading the software.

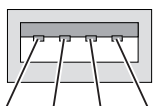
Figure	Pin	Function
	1	VCC (VBus)
	2	- Data
	3	+ Data
	4	Ground (GND)

Table 4: Pin assignment of the USB interface

■ V.24 interface (external management)

The V.24 interface is an RJ11 socket.

The V.24 interface is a serial interface which allows you to connect the following devices locally:

- ▶ An external management station (VT100 terminal or PC with appropriate terminal emulation). This enables you to set up a connection to the Command Line Interface (CLI) and to the system monitor.
- ▶ A Memory Back-up Adapter (EAM)

VT 100 terminal settings	
Speed	9,600 Baud
Data	8 bit
Stopbit	1 bit
Handshake	off
Parity	none

The socket housing is electrically connected to the front panel of the device.

The V.24 interface is not electrically isolated from the supply voltage.

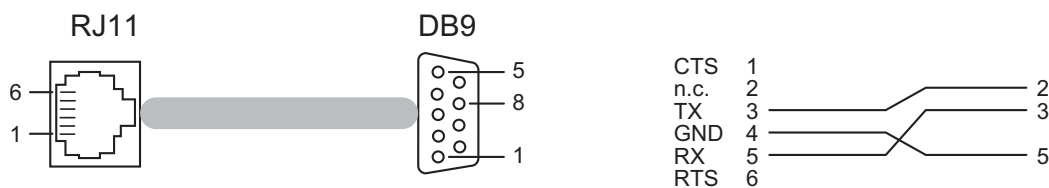


Figure 8: Pin assignment of the V.24 interface and wiring to the DB9 connector

Note: You can order the terminal cable separately (ref #: 490NTRJ11).

You will find a description of the V.24 interface in the “Basic Configuration User Manual” on the CD-ROM.

2.5 Disassembly

- Removing the device from the DIN rail
 - To take the device off the DIN rail, insert a screwdriver horizontally under the housing into the locking slide, pull it (without tipping the screwdriver) downwards and lift the device upwards.

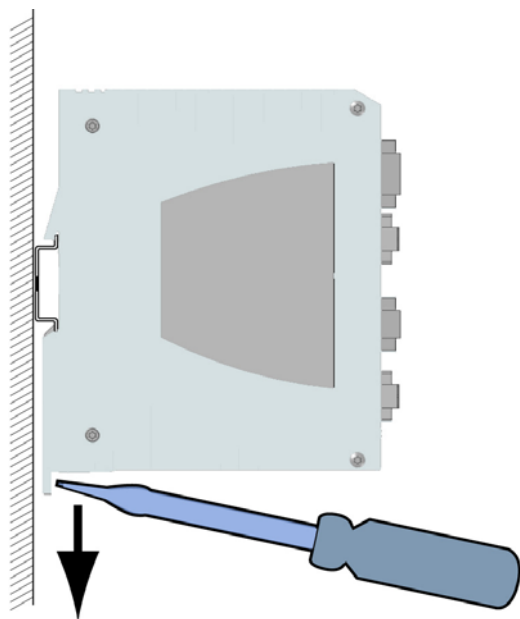


Figure 9: Removal from the DIN rail

3 Technical data

■ General technical data

Dimensions W x H x D	TCSESM-E	120 mm x 137 mm x 115 mm (4.72 in x 5.39 in x 4.53 in)
Weight	TCSESM-E	approx. 1 kg (2.20 lb)
Power supply	Nominal voltage DC	24 - 48 V
	Voltage range DC	18 - 60 V (incl. max. tolerances), SELV
	Connection type	2-pin terminal block
	Power failure bridging	> 10 ms for 20.4 V DC
	Fuse	installed in power supply unit
Signal contact	Nominal value	2 A at 30 V DC 0.2 A at 125 V DC 0.1 A at 250 V DC
	Connection type	2-pin terminal block
Environment	Storage temperature (ambient air temperature)	Standard: -40 °C to +85 °C (-40 °F bis +185 °F) Extended: -40 °C to +85 °C (-40 °F bis +185 °F)
	Humidity	10% to 95% (non-condensing)
	Atmospheric pressure	Up to 2000 m / 1.24 miles (795 hPa), higher altitudes on request
Operating temperature	Standard	0 °C to +60 °C (+32 °F to +140 °F)
Pollution degree		2
Protection classes	Laser protection	Class 1 according to EN 60825-1 (2001)
	Protection class	IP 30

■ EMC and immunity

IEC/EN 61850-3:2002 EMI TYPE tests, test in comp. with	Description	Test Level
IEC/EN 61000-4-2	ESD	
	Contact discharge	+/- 8 kV
	Air discharge	+/- 15 kV
IEC/EN 61000-4-3	Electromagnetic field 80 - 2700MHz	20 V/m
IEC/EN 61000-4-4	Burst	
	DC Power line	+/- 4 kV (2.5 kHz)
	AC Power line	+/- 4 kV (2.5 kHz)
	Data line	+/- 4 kV (2.5 kHz)
IEC/EN 61000-4-5	Surge	
	DC Power line	+/- 2 kV line / earth; +/- 1 kV line / line
	AC Power line	+/- 4 kV line / earth; +/- 2 kV line / line
	Data line	+/- 4 kV line / earth
IEC/EN 61000-4-6	Conducted interference voltage 50kHz - 80MHz	10 V

IEC/EN 61850-3:2002 EMI TYPE tests, test in comp. with	Description	Test Level
IEC/EN 61000-4-12	Damped oscillation	
	DC Power line	+/- 2.5kV line / earth; +/- 1kV line / line
	AC Power line	+/- 2.5kV line / earth; +/- 1kV line / line
	Data line	+/- 2.5kV line / earth; +/- 1kV line / line
IEC 60255-5	Electrical strength	
	DC Power line	500 VAC ^a
	Signal contact	2000 VAC

a. This voltage ist limited to 60 VDC (1 mA) by protective components.

IEEE 1613:2009 EMI TYPE tests, test in comp. with	Description	Test Level
IEEE C37.90.3	ESD	
	Contact discharge	+/- 8 kV
	Air discharge	+/- 15 kV
IEEE C37.90.2	Electromagnetic field 80 - 2700MHz	35 V/m (peak)
IEEE C37.90.1	Burst	
	DC Power line	+/- 4 kV (2.5 kHz)
	AC Power line	+/- 4 kV (2.5 kHz)
	Data line	+/- 4 kV (2.5 kHz)
IEEE C37.90.1	Damped oscillation	
	DC Power line	+/- 2.5kV line / earth; +/- 1kV line / line
	AC Power line	+/- 2.5kV line / earth; +/- 1kV line / line
	Data line	+/- 2.5kV line / earth; +/- 1kV line / line
IEEE C37.90	H.V. Impulse	
	DC Power line	+/- 5 kV line / earth
	AC Power line	+/- 5 kV line / earth
IEEE C37.90	Electrical strength	
	DC Power line	500 VAC ^a
	Signal contact	2000 VAC

a. This voltage ist limited to 60 VDC (1 mA) by protective components.

Environment TYPE tests, test in comp. with	Description	Test Level
IEC 60068-2-1	Cold	-40 °C (-40 °F), 16 hours
IEC 60068-2-2	Dry heat	+85 °C (+185 °F), 16 hours
IEC 60068-2-30	Relative humidity	95 % (non-condensed), +55 °C (+131 °F) 4 cycles
IEC 60068-2-6	Vibration, test Fc	2- 9 Hz with 3 mm amplitude1 g at 9 - 200 Hz1.5 g at 200 - 500 Hz
IEC 60068-2-27	Shock, test Ea	15 g at 11 ms

EMC emitted interference	
EN 55022	Class A
FCC 47 CFR Part 15	Class A
German Lloyd	Classification and Construction Guidelines VI-7-3 Part 1 Ed.2003

■ Network range

TP port	
Length of a twisted pair segment	max. 100 m / 300 ft (cat5e cable with 1000BASE-T)

Table 5: TP port 10BASE-T / 100BASE-TX / 1000BASE-T

Product code		Wave-length	Fiber	System attenuation	Expansion	Fiber data
TCSESM ...CU1	MM	1300 nm	50/125 μm	0-8 dB	0-5 km	1.0 dB/km, 800 MHz*km
TCSESM ...CS1	SM	1300 nm	9/125 μm	0-16 dB	0-25 km	0.4 dB/km; 3.5 ps/(nm*km)

Table 6: F/O port 100BASE-FX

MM = Multimode, SM = Singlemode, LH = Singlemode Longhaul

- Power consumption/power output, order numbers
You can obtain the product code for the devices (order number) from the above table ([see page 34 “Order numbers/product description”](#)) .

TCSESM-E device	Maximum power consumption	Power consumption
2 x FX port (100 Mbit/s) and 6 x TX port (100 Mbit/s)	12 W	41 Btu (IT)/h
8 x TX port (100 Mbit/s)	10 W	34 Btu (IT)/h

■ Scope of delivery

Device	Scope of delivery
TCSESMxx	Device
	Terminal block for supply voltage and signal contact
	Installation user manual on CD-ROM

■ Order numbers/product description



Part number	Part number	Description
8 port version	TCSESM083F23F1	8 x 10/100 TX managed
	TCSESM063F2CU1	6 x 10/100 TX managed 2 x 100 FX-MM managed
	TCSESM063F2CS1	6 x 10/100 TX managed 2 x 100 FX-SM managed
Accessories	TCSEAM0100 Adapter	Memory Back-up Adapter
	490NTRJ11 cable	Terminal cable

■ Underlying norms and standards

Name	
EN 61000-6-2:2005	Generic norm – immunity in industrial environments
EN 55022:2006 + A1:2007	IT equipment – radio interference characteristics
EN 61131-2:2003	Programmable logic controllers
EN 50121-4:2006	Railway applications - EMC - emitted interference and interference immunity for signal and telecommunication systems
FCC 47 CFR Part 15:2009	Code of Federal Regulations
IEC/EN 61850-3	Communications networks and systems in stations
IEEE 1613	Standard Environment and Testing Requirements for Communication Networking Devices in Electric Power Substations
50155:2001 + A1:2002 Declaration	Railway applications, electronic equipment used on rolling stock

Table 7: List of norms and standards. Certified devices are marked with a certification indicator.

■ Certifications

Norm	
cUL 508 / CSA C22.2 No.142	Safety for Industrial Control Equipment 
ISA 12.12.01 / CSA C22.2 No.213	Electrical Equipment for Use in Class I and Class II, Div.2 and Class III Hazardous (Classified) Locations 
Germanischer Lloyd	Ship Applications - Classification and Construction Guidelines VI-7-3 Part 1 Ed.2003

The ESM switches have CE certifications.