

Rowe Technologies Inc.

PyAutoWaves User Guide

PyAutoWaves 1.1.0

Rev. A



Trademark Information

Rowe Technology, Inc. PyAutoWaves, the Rowe Technologies Inc. PyAutoWaves logo design, Rowe Technologies Inc. the Rowe Technology, Inc. logo design are trademark of Rowe Technologies Inc in the United States and various other countries.

All other trademarks are the property of their respective owners.

Patent Information

The accompanying product is protected by one or more U.S. and foreign patents and/or pending patent applications held by Rowe Technology, Inc.

© 2019 Rowe Technologies, Inc. All rights reserved.

Rev. A



Rowe Technologies Inc.

12655 Danielson Court, Suite 306

Poway, CA 92064

USA

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Rowe Technologies Inc. Under the law, reproducing includes translating into another language or format. As between the parties, Rowe Technologies Inc. retains title to, and ownership of, all proprietary rights with respect to the software contained within its products. The software is protected by United States copyright laws and international treaty provision. Therefore, you must treat the software like any other copyrighted material (e.g. a book or sound recording). Every effort has been made to ensure that the information in this manual is accurate. Rowe Technology, Inc. is not responsible for printing or clerical errors. Information in this document is subject to change without notice.

Rev. A



Date	Author	Rev	App Rev	Comments
04/23/2019	Rico	A	1.1.0	Initial Writing.

Rev. A



About this Guide

The Rowe Technologies Inc. PyAutoWaves User Guide is for administrators and users of the Rowe Technologies Inc. PyAutoWaves software, Acoustic Doppler and Imaging technologies.

The following related documents for the Rowe Technologies Inc. instruments are available:

- RTI ADCP DVL User Guide

CONTENTS

Overview	9
Quick Start	10
Wave Setup.....	12
Number of Ensembles in Burst	12
Number of Ensembles in Average.....	13
New Avg File (Hours).....	14
Output Directory	14
Wave Setup	14
Selected Bin 1.....	14
Selected Bin 2.....	15
Selected Bin 3.....	15
Correlation Threshold	16
Height Source.....	16
Pressure Sensor Height	17
Pressure Sensor Offset.....	17
Latitude	17
Longitude	17
Vertical Beam Data	17
Monitor View	19
Burst Ensemble Count	19
Average Ensemble Count	20
Wave Files	20
Waves Burst File Viewer	21
Terminal.....	22
Serial Comm Port	22
Scan Button	22
Serial Baud Rate	22

Serial Connect Button	23
Disconnect Button	23
ADCP Output	23
ADCP Input	24
Additional Commands	24
ADCP Buttons	25
Start Ping Button	25
Stop Ping Button	25
BREAK Button	26
Clear Button	26
Record Button	26
Playback	27
Plots	28
Water Height Plot	28
East Velocity Plot	28
North Velocity Plot	28
Velocity Magnitude Plot	28
Water Direction Plot	29
Burst MATLAB File Format	30
TXT	30
LAT	30
LON	30
WFT	30
WDT	30
WHP	31
WHV	31
WUS	31
WVS	31

WZS	32
WB0	32
WB1	32
WB2	33
WB3	33
WZ0	33
WHG	33
WPH	34
WRL	34
WPS	34
WTS	35
WHS	35
AVERAGE CSV Format	36
Data Type	36
Excel Pivot Tables	38

OVERVIEW

Rowe Technologies Inc. PyAutoWaves software is used to configure, communicate and view live and recorded data from acoustic dopplers and imaging instruments.

Supported **communication** to the doppler and imaging device for Pulse are serial (RS-232, RS-485 and RS-422). The user will connect the instrument to their computer and PyAutoWaves will establish communication with the instrument. With communication established, the user can then configure and record data from the instrument.

PyAutoWaves will allow the user to **view and record live data** from the instrument. This is typically called working with a *Direct-Reading* instrument. Reviewing the live data will allow the user to verify communication with the instrument and allow the user to validate the data. After configuring the instrument, the user can then see in real time the changes made to verify all instrument commands are set properly. When the user is satisfied with the data from the instrument, the user can then use PyAutoWaves to record the live data. The data will be recorded to binary raw file (RTB), AutoWaves MATLAB file and CSV average file. These file types are different and have their own benefits for each user. Refer to the file format sections to get more information on the file formats.


PyAutoWaves will allow the user to **configure** an instrument. Before recording data, the user may need to modify the commands to the instrument to account for the specific environment they are in. Pulse assist the user in choosing the proper options for each command in the instrument. Pulse will help the user understand the consequences for each command change which can include loss in range, increased power consumption and increased data output size.

Pulse will allow the user to **recover data** from the instrument after a deployment. Instruments that recorded data internally are typically called *Self-Contained* instruments. When a Self-Contained instrument is recovered, the data is stored within the instrument on a SD memory card. PyAutoWaves will playback the data and convert it to the correct formats.


QUICK START

- Open the application
- On the menu bar, select

Setup->Wave Setup

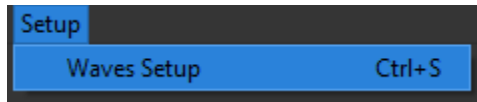


- Set the Output Directory to the location where you want the data stored.

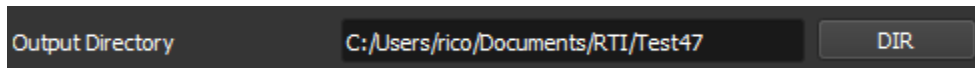

- Close the Setup window




- Set the Terminal COMM port and Baud rate

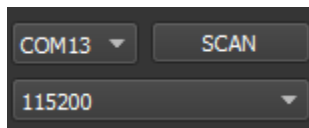


- Click the Connect button



- Data will begin to stream in, and the progress bars should begin to update

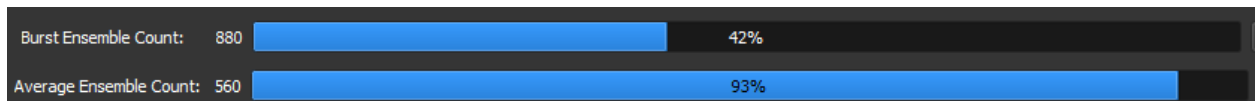


- Open any of the plots under the menu bar option Average Water

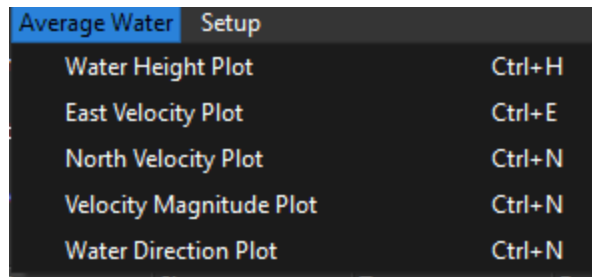

- Open WaveForce AutoWaves to begin monitoring the Output Directory

WAVE SETUP


The Wave Setup window allows the user to configure the application. This will set how the data is collected and where the data is stored. Most of the settings can be changed to see live updates.

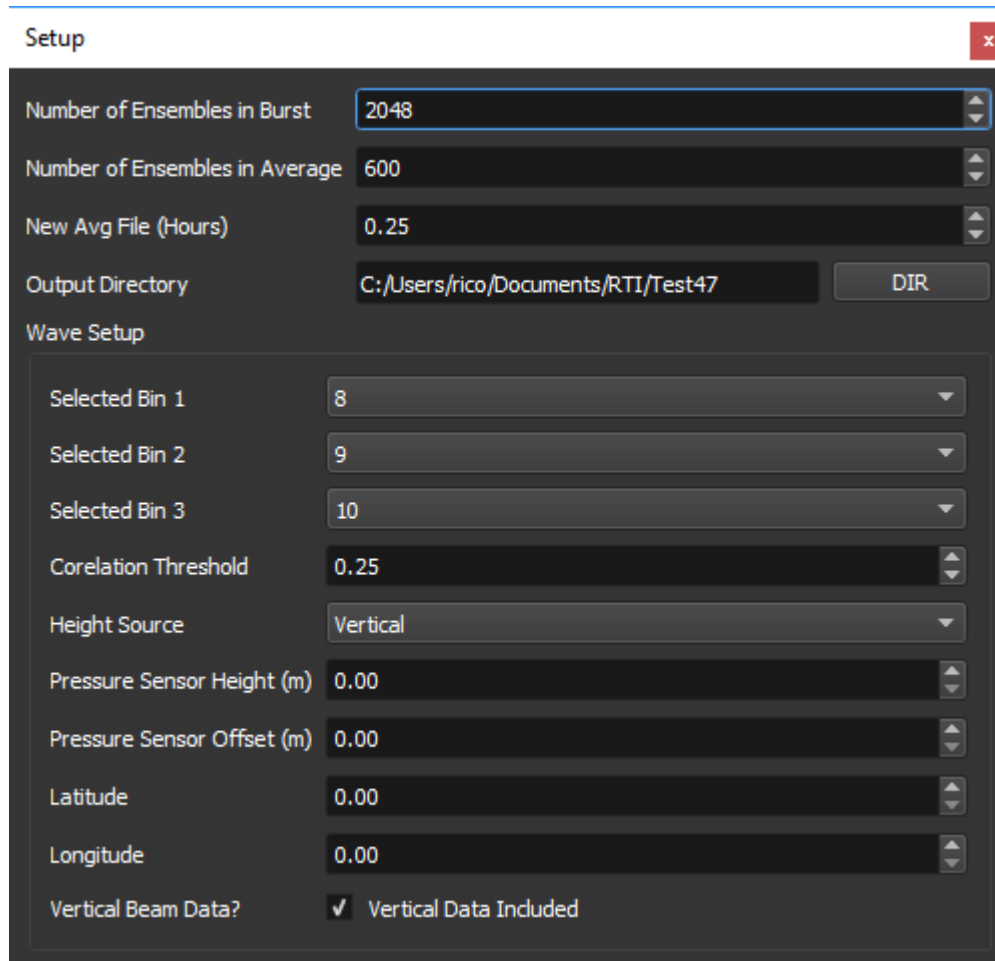

The screenshot shows the 'Setup' window with a dark theme. At the top, the title bar says 'Setup' with a close button. Below the title bar, there are several settings:

- Number of Ensembles in Burst:** A numeric input field with the value 2048.
- Number of Ensembles in Average:** A numeric input field with the value 600.
- New Avg File (Hours):** A numeric input field with the value 0.25.
- Output Directory:** A text input field with the value 'C:/Users/rico/Documents/RTI/Test47' and a 'DIR' button to the right.
- Wave Setup:** A section containing several settings:
 - Selected Bin 1:** A dropdown menu with the value 8.
 - Selected Bin 2:** A dropdown menu with the value 9.
 - Selected Bin 3:** A dropdown menu with the value 10.
 - Corelation Threshold:** A numeric input field with the value 0.25.
 - Height Source:** A dropdown menu with the value 'Vertical'.
 - Pressure Sensor Height (m):** A numeric input field with the value 0.00.
 - Pressure Sensor Offset (m):** A numeric input field with the value 0.00.
 - Latitude:** A numeric input field with the value 0.00.
 - Longitude:** A numeric input field with the value 0.00.
 - Vertical Beam Data?:** A checkbox labeled 'Vertical Data Included' which is checked.

NUMBER OF ENSEMBLES IN BURST



This is a close-up of the 'Number of Ensembles in Burst' setting. It shows a numeric input field with the value 2048 and up/down arrow buttons on the right side.

This option sets the number of ensembles in a burst. It is assumed the ADCP will be outputting data continuously at a minimum of 1Hz. A typical burst length should last at least 15 minutes. The user needs to determine how many ensembles is close to 15 minutes.

Default values are:

1Hz = **1024** ensembles = 17 minutes

2Hz = **2048** ensembles = 17 minutes

4Hz = **4096** ensembles = 17 minutes

Once this number is reached, a MATLAB file will be generated. This MATLAB file will then be processed by AutoWaves to generate a Waves report.

The MATLAB file will be shown in the file tree in the application. This file can be double clicked and viewed in the software.

This value will count the number of pairs of ensembles, not individual ensembles. A typical SeaWAVE ADCP will come with 5 beams. This counter will assume that the 4 beam and vertical beam are interleaved in the output with the vertical beam ensemble coming after the 4 beam ensemble. So, the counter will count every vertical beam ensemble. This will make it look like the Burst count and Average count do not match.

If no vertical beam data is included, uncheck the checkbox "Vertical Data Included" in Setup.

Default: **2048 Ensembles**

NUMBER OF ENSEMBLES IN AVERAGE

Rev. A



Number of Ensembles in Average 600

This option sets the number of ensembles in an average. A CSV is generated that contains an average for a period. This period is determined by the number of ensembles in this option and the data output rate. Calculating how many ensembles to use is again similar to the example above.

Default: **600 ensembles**

NEW AVG FILE (HOURS)

New Avg File (Hours) 0.25

This option sets how often a new CSV file should be generated in hours. The value can be a decimal number so it can be less than one hour. When this value is met, a new CSV file is created. The CSV file also has a maximum size of 16MB, so whichever is reached first.

OUTPUT DIRECTORY

Output Directory C:/Users/rico/Documents/RTI/Test47

DIR

Specify the directory where all the data will be recorded. This includes the MATLAB and average CSV file. All the plots will be saved here also. If you turn on recording the serial port, the recorded serial data will also be recorded to this directory.

When you tell WaveForce AutoWaves to monitor a folder, you want it to monitor this folder.

WAVE SETUP

These options are specific to the generation of a Burst. These values are used to process the data and give the data context.

SELECTED BIN 1

Selected Bin 1 8

Rev. A



The first selected bin should be the bin closest to the ADCP (bottom) that is close enough to the surface to see the orbital motion of the water. The first bin should be considered the deepest bin selected and the smallest bin number.

You want to select 3 points in the wave motion. The first bin should be the bottom most portion of the bin. The second selected bin is the middle of the wave. The last bin is the top of the bin, but below the surface. The bin should not be too close to the surface, because the wind and bubbles will affect the data.

This bin should be within the range of the data. If you set the ADCP to have 30 bins. This value should not exceed 30.

Default: **Bin 8**

SELECTED BIN 2

Selected Bin 2 9

The second selected bin should be the bin closest to the ADCP (bottom) that is close enough to the surface to see the orbital motion of the water. The second bin should be considered the middle bin selected and should be 1 to 3 bins larger than the first selected bin.

You want to select 3 points in the wave motion. The first bin should be the bottom most portion of the bin. The second selected bin is the middle of the wave. The last bin is the top of the bin, but below the surface. The bin should not be too close to the surface, because the wind and bubbles will affect the data.

This bin should be within the range of the data. If you set the ADCP to have 30 bins. This value should not exceed 30.

Default: **Bin 9**

SELECTED BIN 3

Selected Bin 3 10


The third selected bin should be the bin furthest from the ADCP (bottom) that is close enough to the surface to see the orbital motion of the water. The third bin should be considered the top bin selected and should be 1 to 3 bins larger than the second selected bin.

You want to select 3 points in the wave motion. The first bin should be the bottom most portion of the bin. The second selected bin is the middle of the wave. The last bin is the top of the bin, but below the surface. The bin should not be too close to the surface, because the wind and bubbles will affect the data.

This bin should be within the range of the data. If you set the ADCP to have 30 bins. This value should not exceed 30.

Default: **Bin 10**

CORRELATION THRESHOLD

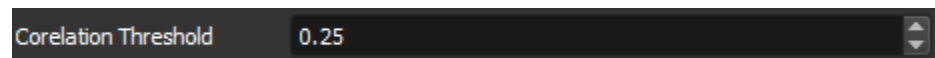A screenshot of a software interface showing a control for 'Correlation Threshold'. The label 'Correlation Threshold' is on the left, and the value '0.25' is displayed in a dark box with a small up/down arrow icon on the right.

This is a screening threshold to exclude data. If the correlation value for a bin is less than this value, then mark it as bad and do not use it in any calculations. A correlation of 100% is perfect data. Realistically, you will see the correlation around 80%.


Default: **0.25**

HEIGHT SOURCE

A screenshot of a software interface showing a dropdown menu for 'Height Source'. The label 'Height Source' is on the left, and the dropdown menu is open, showing 'Vertical' as the selected option.

Select the source to give the wave height, other than the pressure sensor. The user will choose between one of the beams, or the vertical beam. This will be stored with the MATLAB file.

The vertical beam is directly above the ADCP, where the other 4 beams are measured at an angle and not directly above the ADCP. But the 4 beams can be used as a backup or alternative.

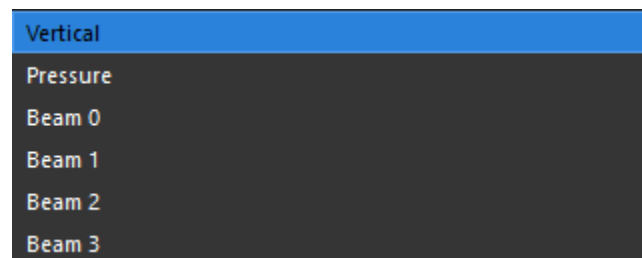A screenshot of a software interface showing a dropdown menu for 'Height Source'. The label 'Height Source' is on the left, and the dropdown menu is open, showing a list of options: 'Vertical', 'Pressure', 'Beam 0', 'Beam 1', 'Beam 2', and 'Beam 3'. 'Vertical' is highlighted in blue.

Default: **Vertical Beam**

PRESSURE SENSOR HEIGHT

Pressure Sensor Height (m) 0.00

This will set the depth of the transducer below the surface of the water in meters. This is used to know the environmental settings of the ADCP. This value will be stored in the WHP of the MATLAB file used in the WaveForce calculations.

Default: **0.5 m**

PRESSURE SENSOR OFFSET

Pressure Sensor Offset (m) 0.00

If there is a known pressure offset, this value can be used to add to the pressure value. If no pressure data is used, this can also be used to force a pressure value. The value is in meters

Default: **0.0 m**

LATITUDE

Latitude 0.00

Latitude position in decimal degrees. This is used for reference only.

LONGITUDE

Longitude 0.00

Longitude position in decimal degrees. This is used for reference only.

VERTICAL BEAM DATA

Rev. A




Vertical Beam Data? ☒ Vertical Data Included

When calculating the number of ensembles to process in a burst, it is assumed that the ensembles will be received interleaved with 4 beam and vertical beam ensembles. This means that the ensembles will come in pairs. First a 4-beam ensemble, then a vertical beam ensemble. And this sequence will continue. The software counts the number of pairs. When the number of pairs is met based off the “Number of Ensembles in Burst” setup value, a burst value will be generated. But if the data is not coming as a pair, uncheck this box, so it will not look for the vertical beam. If you also notice that the burst ensembles are not progressing, uncheck this box.

Default: **Check (Vertical beam included)**

MONITOR VIEW

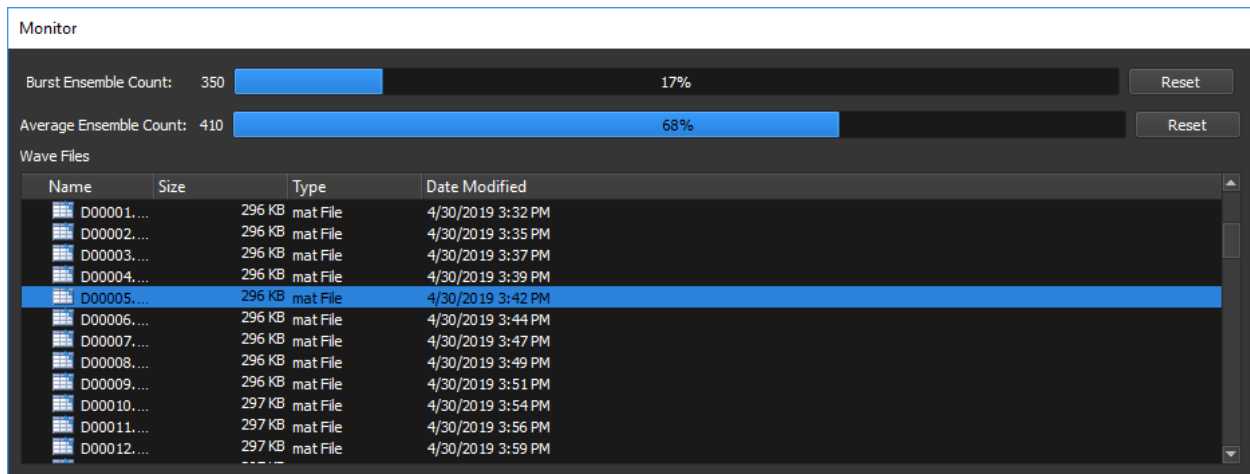

The Monitor view monitors the progress of the file creations. There are 2 files that are generated by this software: the MATLAB burst file and the Average CSV file.

The MATLAB burst file is used to be processed with WaveForce software like Wavector and AutoWaves. This data is collection of data taken during a period of time, usually around 15-17 minutes. The WaveForce software will create a waves report based off the data within the MATLAB file.

The Average CSV file is an average of data over a period of time. The period of time is set in the SETUP section based off the number of ensembles. The data is stored in a CSV format. The CSV data will then be plotted.

The progress bars show the status of how many ensembles are remaining before a file is generated. It also gives you feedback that data is being received.

There is also a file tree to show you all the files generated in the output folder. The MATLAB files can be double clicked to view the content of the file.

This window can be moved around and resized.

BURST ENSEMBLE COUNT



This will count the number of ensembles that are accumulated towards making a MATLAB burst file. The count is typically counting pairs of ensembles. A 4-beam ensemble and a vertical beam ensemble. The vertical beam ensemble should always be after the 4-beam ensemble to ensure the count is correct.

The reset button will clear the ensembles buffered to generate the MATLAB file and the progress bar will start over collected ensembles. This is useful if settings have changed and you do not want to keep the old data.

AVERAGE ENSEMBLE COUNT



This will count the number of ensembles that are used to create the Average CSV file. The average will be appended to the end of the CSV file. Eventually a new CSV will be created, either after the file reaches 16MB or the “New Avg File” setting is met.

The reset button will clear the ensembles buffered to generate the CSV file and the progress bar will start over collected ensembles. This is useful if settings have changed and you do not want to keep the old data.

WAVE FILES

Name	Size	Type	Date Modified
D00000....	296 KB	mat File	4/30/2019 3:30 PM
D00001....	296 KB	mat File	4/30/2019 3:32 PM
D00002....	296 KB	mat File	4/30/2019 3:35 PM
D00003....	296 KB	mat File	4/30/2019 3:37 PM
D00004....	296 KB	mat File	4/30/2019 3:39 PM
D00005....	296 KB	mat File	4/30/2019 3:42 PM
D00006....	296 KB	mat File	4/30/2019 3:44 PM
D00007....	296 KB	mat File	4/30/2019 3:47 PM
D00008....	296 KB	mat File	4/30/2019 3:49 PM
D00009....	296 KB	mat File	4/30/2019 3:51 PM
D00010....	297 KB	mat File	4/30/2019 3:54 PM
D00011....	297 KB	mat File	4/30/2019 3:56 PM
D00012....	297 KB	mat File	4/30/2019 3:59 PM
D00013....	297 KB	mat File	4/30/2019 4:01 PM
D00014....	297 KB	mat File	4/30/2019 4:04 PM

A file tree will display all the files in the output directory. This will allow the user to monitor that files are being generated for each burst and average. Also, when AutoWaves generates a file, the data will be seen in this window.

The burst MAT files can be double clicked. When double clicked, a window will appear displaying all the data in the MAT file. The user can then review the results of the burst.

Waves Data: C:/Users/rico/Documents/RTI/Test48/D00000.mat

C:/Users/rico/Documents/RTI/Test48/D00000.mat
 04/25/2019 13:36:08.810000 , Record No. 0, SNO 1300000000000000000000000000000000453
 Time Between Ensembles (sec): 0.43
 Time of First Ensemble: 2019-04-25 13:36:07
 Latitude: 0.0
 Longitude: 0.0
 Pressure Sensor Height (m): 0.0

Text	Selected Bin Depth	Range	Average Range	Selected Range	Water Temp	Beam Velocity Be
wr0, wr1, wr2, wr3, wvr						
	Beam 0	Beam 1	Beam 2	Beam 3	Vertical Beam	
1	-1.0	-1.0	-1.0	-1.0		
2	-1.0	-1.0	-1.0	-1.0		
3	-1.0	-1.0	-1.0	-1.0		
4	-1.0	-1.0	-1.0	-1.0		
5	-1.0	-1.0	-1.0	-1.0		
6	-1.0	-1.0	-1.0	-1.0		
7	-1.0	-1.0	-1.0	-1.0		
8	-1.0	-1.0	-1.0	-1.0		
9	-1.0	-1.0	-1.0	-1.0		
10	-1.0	-1.0	-1.0	-1.0		
11	-1.0	-1.0	-1.0	-1.0		

Rev. A



TERMINAL

Terminal

COM13

SCAN

115200

CONNECT

DISCONNECT

START PING

STOP PING

BREAK

RECORD

SEND

CLEAR

SEND

CLEAR

The terminal allows the user to connect to the ADCP through the serial port. It allows the user to configure the ADCP and see data output. It allows the user to record the raw serial data.

SERIAL COMM PORT

Set the serial port COMM port.

SCAN BUTTON

This button will scan for any available COMM ports on the user's computer.

SCAN

SERIAL BAUD RATE

Set the serial baud rate.

115200

Rev. A




SERIAL CONNECT BUTTON

Once the serial port options are selected. Click the Connect button to make a serial connection to the ADCP. Once a connection is made, if the ADCP is configured to output data, then you will start to see data output in the terminal. If you do not see any data, click the BREAK button to wakeup the ADCP and see a wakeup banner. If you see the wakeup banner, you can then configure the ADCP and click the START PING button to begin outputting data. If you see garbage output when you click the BREAK button, then your baud rate is most likely incorrect. Review the link to set your serial port correctly.


http://rowetechinc.co/wiki/index.php?title=ADCP_Communication

http://rowetechinc.co/wiki/index.php?title=ADCP_Quickstart

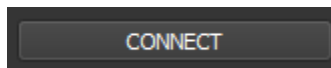


DISCONNECT BUTTON

Disconnect the serial port. This used to disconnect the serial port freeing it so other applications can use the serial port.

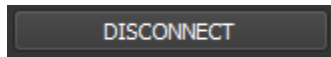

ADCP OUTPUT

As data is received, you will see characters displayed in the terminal. The characters are not human readable unless the ADCP is set to DVL, ASCII or a special mode.

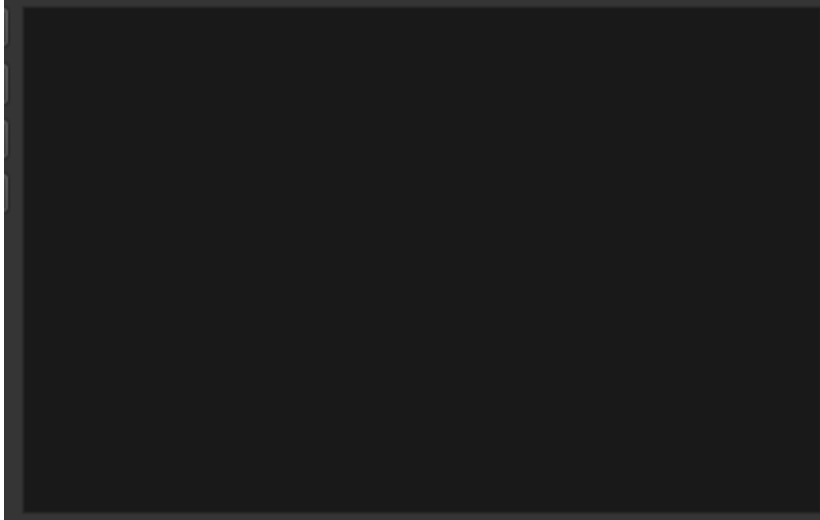


ADCP INPUT

This textbox allows the user to enter in a command to send to the ADCP. The textbox will remember passed commands. Once the command is entered into the textbox, press the SEND button to send it to the ADCP.



ADDITIONAL COMMANDS

This will allow the user to load a file of additional commands. It will also allow the user to reuse a set of commands.

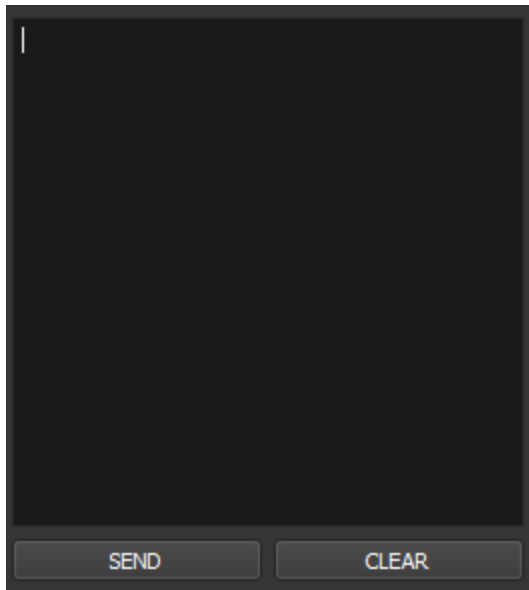


ADCP BUTTONS

These buttons are common commands sent to the ADCP. They include starting and stopping pinging, sending a BREAK and a CSHOW.



START PING BUTTON

This button will send the command to the ADCP set the current time to the ADCP and to start pinging. The current time is sent to so the ADCP has a date and time. Then the START command is sent to start pinging.

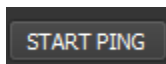


STOP PING BUTTON

Rev. A




This button will send the command to the ADCP to stop pinging.

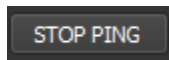

BREAK BUTTON


This button will send a BREAK to the ADCP. The BREAK is used to wakeup the ADCP. The ADCP will output a banner message when the BREAK is received.

First a hard BREAK is sent to the ADCP. A hard BREAK is a hardware BREAK. If no banner is received from the ADCP, a soft BREAK is sent to the ADCP. A soft BREAK is a software BREAK where the command BREAK is sent. If neither of these commands wakeup the ADCP, then most likely there is an issue with the connection to the ADCP.

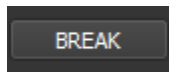


CLEAR BUTTON

This button will clear the ADCP serial output display.

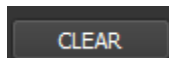

RECORD BUTTON

This button allows the user to record the raw serial data. This is useful for post processing the data. The raw data can be played back with the settings changed to generate new Burst MAT files and Average CSV files.

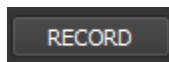

PLAYBACK

Playback is used to reprocess the raw data. It is also used to generate any plots.

Select all the RAW RTB (Rowe Tech Binary) ensemble files you would like to include in the processing. The files can be burst files or continuous files. Once the files have been selected, the processing will begin automatically.

File	Average Water	Setup
Playback		Ctrl+P
Exit		Ctrl+Q

PLOTS

Average Water	Setup
Water Height Plot	Ctrl+H
East Velocity Plot	Ctrl+E
North Velocity Plot	Ctrl+N
Velocity Magnitude Plot	Ctrl+N
Water Direction Plot	Ctrl+N

WATER HEIGHT PLOT

The height data is based off the height source chosen when the MATLAB file was created. It was either one of the 4 beams or the vertical beam. The plot's data is generated by the latest CSV Average data.

EAST VELOCITY PLOT

Plot the east velocity values for the selected bins. These values are found from the Earth Velocity data in the binary data. The velocities are plotted for each sample at the selected bin. The plot's data is generated by the latest CSV Average data.

NORTH VELOCITY PLOT

Plot the north velocity values for the selected bins. These values are found from the Earth Velocity data in the binary data. The velocities are plotted for each sample at the selected bin. The plot's data is generated by the latest CSV Average data.

VELOCITY MAGNITUDE PLOT

Plot the East/North magnitude for each selected bin. The plot's data is generated by the latest CSV Average data.

WATER DIRECTION PLOT

Plot the East/North direction for each selected bin. The plot's data is generated by the latest CSV Average data.

Rev. A



BURST MATLAB FILE FORMAT

This will give a description of all the variables in the MATLAB file format. Each MATLAB file will be a collection of ensembles called a burst. The number of ensembles within the burst is based off the CBI command. There will be 3 selected bins to collect the data from each sample (ensemble).

TXT

This will give a text description of the burst. This will include the record number, the serial number and the date and time the burst started.

Data Type: Text

Rows: 1

Columns: Text Length

txt = 2013/07/30 21:00:00.00, Record No. 7, SN013B0000000000000000000000000000

LAT

The latitude location where the burst was collected.

Data Type: Double

Rows: 1

Columns: 1

lat = 32.865

LON

The longitude location where the burst was collected.

Data Type: Double

Rows: 1

Columns: 1

lon = -117.26

WFT

First sample time of the burst. The value is in hours of a day. $WFT * 24 = \text{hours}$.

Data Type: Double

Rows: 1

Columns: 1

wft = 7.3545e+05

WDT

Time between each sample. The time is in seconds.

Data Type: Floating Point

Rows: 1

Columns: 3

wdt = 0.50000

WHP

Pressure sensor height in meters.

Data Type: Floating Point

Rows: 1

Columns: 3

whp = 0.65000

WHV

Wave cell depth in meters. This is the wave height for each selected bin.

Data Type: Floating Point

Rows: 1

Columns: 3

whv =

1.1501 2.1501 2.6501

WUS

East velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

wus =

4.1217e-01 -5.3776e-01 -1.1071e+00
4.2764e-01 -8.8026e-01 -1.6288e+00
6.0827e-01 1.0991e-01 -2.0296e-01
...

WVS

North velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Rev. A



Columns: 3

WVS =

-6.5988e-02	9.4322e-01	-1.1511e+00
1.4117e-01	4.4475e-01	5.6886e-01
7.5457e-01	4.9238e-02	1.4024e-01

...

WZS

Vertical velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

WZS =

-5.1074e-01	-2.2284e-01	7.4548e-02
3.7416e-02	9.5439e-04	-2.1598e-01
1.5141e-01	-1.2996e-01	-9.9256e-03

...

WB0

Beam 0 beam velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

wb0 =

1.0128e+00	-1.2829e-01	7.5696e-04
3.6575e-02	-6.1568e-01	-4.6019e-01
-1.1937e-01	9.9974e-02	1.4221e-01

...

WB1

Beam 1 beam velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

wb1 =

8.2430e-01	6.1270e-01	-1.2160e-01
-7.7283e-02	6.0340e-04	8.8888e+01
4.6664e-03	8.4763e-02	3.0490e-01

...

Rev. A



WB2

Beam 2 beam velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

wb2 =

1.6416e-01	7.9276e-02	-5.0224e-01
8.9448e-02	6.6506e-02	-1.0250e-01
1.0159e-02	1.8974e-01	-2.5725e-01
...		

WB3

Beam 3 beam velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

wb3 =

8.8888e+01	-5.1399e-02	5.8452e-01
-1.9667e-01	3.3825e-01	5.0058e-01
-6.3540e-01	1.0748e-01	-2.1207e-01
...		

WZ0

Vertical beam velocity values for each selected bin. The values are in meters per second.

Data Type: Floating Point

Rows: Number of Samples

Columns: 3

wz0 =

-5.6031e-01	-3.3704e-01	-5.7669e-01
8.8888e+01	-8.8736e-03	2.0687e-01
-9.9038e-01	-5.8064e-01	8.8888e+01
...		

WHG

The heading value in degrees for each sample.

Data Type: Floating Point

Rows: Number of Samples

Rev. A



Columns: 1

whg =

320.35
320.40
320.67
...

WPH

The pitch value in degrees for each sample.

Data Type: Floating Point

Rows: Number of Samples

Columns: 1

wph =

-4.1934
-4.1980
-4.1989
...

WRL

The roll value in degrees for each sample.

Data Type: Floating Point

Rows: Number of Samples

Columns: 1

wrl =

1.9210
1.9278
1.9021
...

WPS

The pressure value in meters for each sample.

Data Type: Floating Point

Rows: Number of Samples

Columns: 1

wps =

5.9431
5.9438
5.9442
...

Rev. A



WTS

The water temperature value in degrees Fahrenheit for each sample.

Data Type: Floating Point

Rows: Number of Samples

Columns: 1

wtS =

17.004

17.004

17.004

...

WHS

The wave height based off the wave height source selected. This can be any of the 4 beams or the vertical beam's value.

Data Type: Floating Point

Rows: Number of Samples

Columns: 1

whs =

5.2956

5.3744

5.4217

...

AVERAGE CSV FORMAT

The CSV data is represented so that it is easily viewed and graphed in Excel using Pivot tables.

The CSV data has the following column format:

```
["datetime", "data_type", "ss_code", "ss_config", "bin_num", "beam_num", "blank", "bin_size", "value"]  
2019/02/23 15:23:22.56, EARTH_VEL, 4, 1, 2, 2, 7.5, 1.245
```

DATA TYPE

The data_type column will state the type of data the row represents.

The following data_type options are available:


Date Type Name	Desc
Amp	Amplitude data
Corr	Correlation Data
BeamVel	Beam Velocity data
InstrVel	Instrument Velocity data
EarthVel	Earth Velocity data
GoodBeam	Good Beam data (number of ensembles in average)
GoodEarth	Good Earth data (number of ensembles in average)
Pressure	Pressure data (bar)
XdcrDepth	Transducer Depth (Pressure data in meters)
Heading	Heading data
Pitch	Pitch data
Roll	Roll data
WaterTemp	Water Temperature data
SysTemp	System Temperature data
SpeedOfSound	Speed of Sound data
FirstPingTime	First Ping Time
LastPingTime	Last Ping Time

Status	System Status
RT	Range Tracking Range
BT_Heading	Bottom Track Heading
BT_PITCH	Bottom Track Pitch
BT_ROLL	Bottom Track Roll
BT_PRESSURE	Bottom Track Pressure
BT_XdcrDepth	Bottom Track Transducer Depth
BT_Status	Bottom Track Status (Searching for Bottom status)
BT_Range	Bottom Track Range
BT_BeamVel	Bottom Track Beam Velocity
BT_BeamGood	Bottom Track Beams Good (number of ensembles in average)
BT_InstrVel	Bottom Track Instrument Velocity
BT_InstrGood	Bottom Track Instrument Good (number of ensembles in average)
BT_EarthVel	Bottom Track Earth Velocity
BT_EarthGood	Bottom Track Earth Good (number of ensembles in average)
RT_Range	Range Tracking (Range to surface)
RT_Pings	Range Tracking Ping
RT_BeamVel	Range Tracking Beam Velocity
RT_InstrVel	Range Tracking Instrument Velocity
RT_EarthVel	Range Tracking Earth Velocity
GPS_Heading	GPS Heading
GPS_VTG	GPS Speed of Vessel
NMEA	NMEA String
Voltage	System Voltage
Magnitude	Water Velocity Magnitude
Direction	Water Direction

EXCEL PIVOT TABLES

Use the following options in the image below to generate plots in Excel using Pivot Tables. The user can then select which bins or subsystems quickly.

- Open the CSV file in Excel
- Click Insert->Pivot Table in the Menu
- Use the images below to select the correct options to view the data in the pivot table
- Select Insert->Chart to plot the data

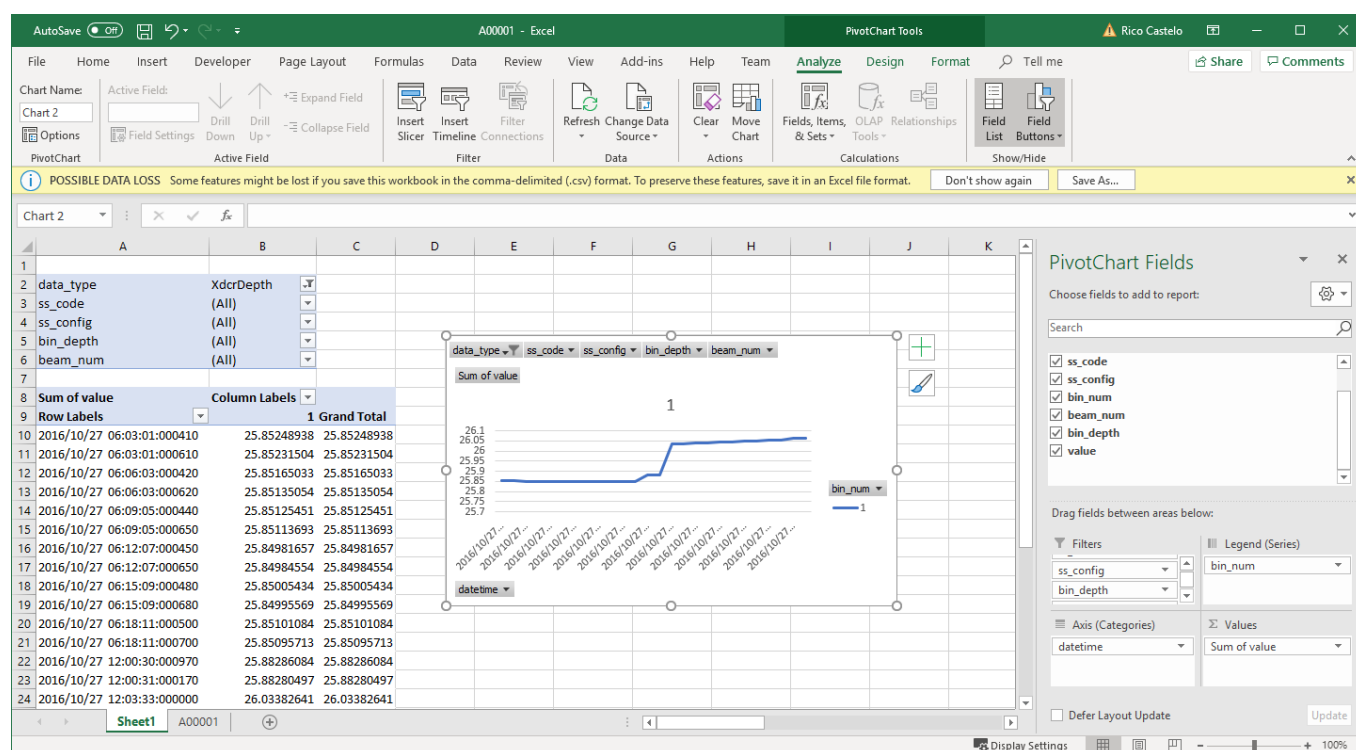

Rev. A



PivotChart Fields



- ☒ ss_code
- ☒ ss_config
- ☒ bin_num
- ☒ beam_num
- ☒ bin_depth
- ☒ value

 Filters

ss_config

bin_depth

Legend (Series)

bin_num

Axis (Categories)

datetime

Σ Values

Sum of value


☐ Defer Layout Update

Update

WAVEFORCE AUTOWAVES

Ensure the WaveForce dongle is installed in the USB port. Open AutoWaves. It can sometimes take a couple of minutes for AutoWaves to load. Click Accept for the License. Then click Modify in the AutoWaves application.

Modify

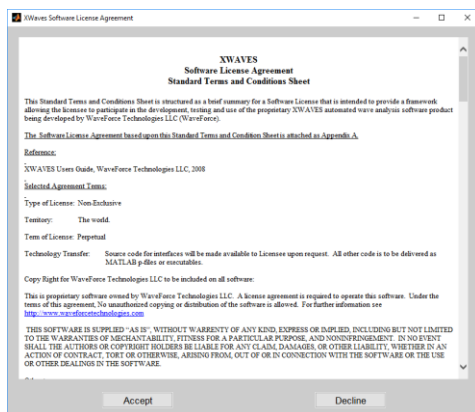

Rev. A



AUTOWAVES SETUP

XWaves - AutoWaves - Initialization Table

Input Data

Parameter Set Name: DEFAULT

Data Type: Rowe Tech Inc

☒ Automatic Update: 0.1 Interval (h)

☐ Windows Service Updates

XWaves Data File: [Browse]

NetCDF Data File: [Browse]

Data Processing

Import: Rowe Tech Inc Default

☐ Select Multiple Stations: 0 Selected

☐ Wave Systems: Disabled

☐ Spectral Fit: Disabled

☒ Sea State: Default

☒ Display Waitbars

☐ Error Log Option

Output Files

☒ Save Data (.mat) To: C:\Users\rico\Documents\RTI\Test47\autowaves.mat

Save Data Options: Single Continuous File

☒ Save Plots: 43 Selected

☐ Export Wizard: Disabled

Save Export Wizard To: [Please Select a File]

☐ Save 2D Spectra To: [Please Select a File]

☐ Save Spectral Coeff. To: [Please Select a File]

☐ Single Record per Spectral Coefficient Text File

Save BlueFat Table To: [Please Select a File]

Path to Ship Heading File: [Please Select a File]

☐ Save Wave Height Recurrence Table To: [Please Select a File]

☐ Save Wind Speed Recurrence Table To: [Please Select a File]

EXPORT EXIT

DATA TYPE

Data Type: Rowe Tech Inc

Data Type = Rowe Tech Inc.

Rev. A



AUTOMATIC OR WINDOWS UPDATES

<input checked="" type="checkbox"/> Automatic Update	<input type="text" value="0.1"/>	Interval (h)
<input type="checkbox"/> Windows Service Updates		

Select which option you want to look for updates in the folder containing the MATLAB Waves bursts. Automatic will check periodically based off the time given.


Windows Service Updates will use Windows to tell the application when an update has occurred in the folder.

DATA PROCESSING IMPORT MODIFY

If you want to process data already collected, you can click on the Modify button and select the files you want to reprocess.

Data Processing		
Import:	Rowe Tech Inc Default	Modify

MODIFY DATA PROCESSING

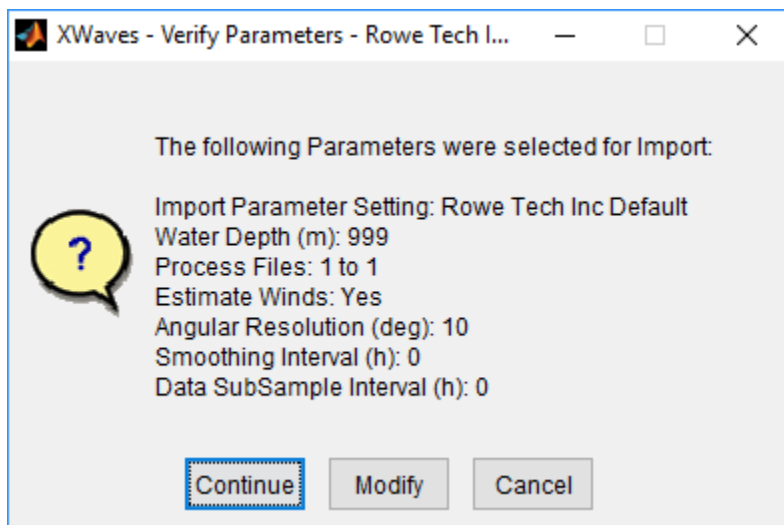

Click the Modify button to modify the settings for data processing.

IMPORT PARAMETERS

Rowe Tech Inc ?

Parameter Set Name Rowe Tech Inc Default Delete

Estimate Winds Yes - Select Wind File - Select

Water Depth (m) 999

First File to Process D00000.mat Select

Last File to Process D00241.mat Select Process All

Angle Bins 36 **Computed Resolution: 10 Degrees**

Smoothing Interval (h) 0

Data SubSample Interval (h) 0

SELECT CANCEL

Select the First file to begin processing. The Last File will automatically be entered in. You can modify this value, if the last few files have bad data when the ADCP was taken out of the water.

OUTPUT FILES – SAVE DATA TO

Rev. A



<input checked="" type="checkbox"/> Save Data (.mat) To:	C:\Users\rico\Documents\RTI\Test47\autowaves.mat	Browse
Save Data Options:	Single Continuous File	

Click Browse and select the folder to save the data to from AutoWaves. Give the file a name. A suggested name is autowaves.mat

SAVE PLOTS

<input checked="" type="checkbox"/> Save Plots:	43 Selected	Modify
--	-------------	---------------

Click the “Saves Plots” checkbox then click the Modify button and select all the plots you want generated for the waves report.

Plot Selection Table

Input Data	Wave System	Climatology	Spectral Fits	Sea State
<input checked="" type="checkbox"/> Data Summary		<input checked="" type="checkbox"/> Climatology Table		<input checked="" type="checkbox"/> Wave Peaks - PoT
<input checked="" type="checkbox"/> Wind Speed		<input checked="" type="checkbox"/> Wind Rose		<input checked="" type="checkbox"/> Wave Peaks - Annual Max
<input checked="" type="checkbox"/> Wind Direction		<input checked="" type="checkbox"/> Wave Height Rose		<input checked="" type="checkbox"/> Wind Peaks - PoT
<input checked="" type="checkbox"/> Significant Wave Height		<input checked="" type="checkbox"/> Wind Scatter		<input checked="" type="checkbox"/> Wind Peaks - Annual Max
<input checked="" type="checkbox"/> Peak Period		<input checked="" type="checkbox"/> Height Period Scatter		<input checked="" type="checkbox"/> Wave Recurrence - GPD
<input checked="" type="checkbox"/> Mean Period (Tz)		<input checked="" type="checkbox"/> Period Direction Scatter		<input checked="" type="checkbox"/> Wave Recurrence - GEV
<input checked="" type="checkbox"/> Friction Velocity		<input checked="" type="checkbox"/> Height Direction Scatter		<input checked="" type="checkbox"/> Wave Recurrence - Gumbel
<input checked="" type="checkbox"/> Peak Direction		<input checked="" type="checkbox"/> Height Period Direction 3D Scatter		<input checked="" type="checkbox"/> Wave Recurrence - Weibull
<input checked="" type="checkbox"/> Spectrograph		<input checked="" type="checkbox"/> Wind Speed Histogram		<input checked="" type="checkbox"/> Wave Recurrence - All
<input checked="" type="checkbox"/> Frequency Spectrum		<input checked="" type="checkbox"/> Wind Direction Histogram		<input checked="" type="checkbox"/> Wind Recurrence - GPD
<input checked="" type="checkbox"/> Direction Spectrum		<input checked="" type="checkbox"/> Wave Height Histogram		<input checked="" type="checkbox"/> Wind Recurrence - GEV
<input checked="" type="checkbox"/> Contour 2D Spectrum		<input checked="" type="checkbox"/> Wave Period Histogram		<input checked="" type="checkbox"/> Wind Recurrence - Gumbel
<input checked="" type="checkbox"/> Polar 2D Spectrum		<input checked="" type="checkbox"/> Wave Direction Histogram		<input checked="" type="checkbox"/> Wind Recurrence - Weibull
<input checked="" type="checkbox"/> Cartesian 2D Spectrum				<input checked="" type="checkbox"/> Wind Recurrence - All
<input checked="" type="checkbox"/> Wind Vectors				<input checked="" type="checkbox"/> Hs-Tp Scatter - Bulk

Select All **Clear All**

Save Plots To Folder: C:\Users\rico\Documents\RTI\Test47\ **Browse**

Plot File Format: Portable Network Graphics (.png)

Frequency Axis Scaling: Log


SAVE **CANCEL**

EXPORT


Click the Export button the finish

EXPORT

PARAMETER FILE NAME

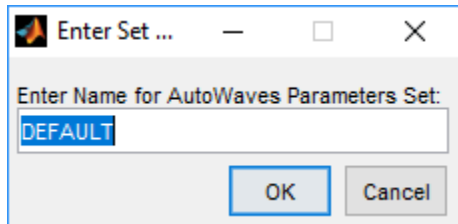

A window will pop up and ask for a parameter file name. You can use the default name. Click OK then Save.

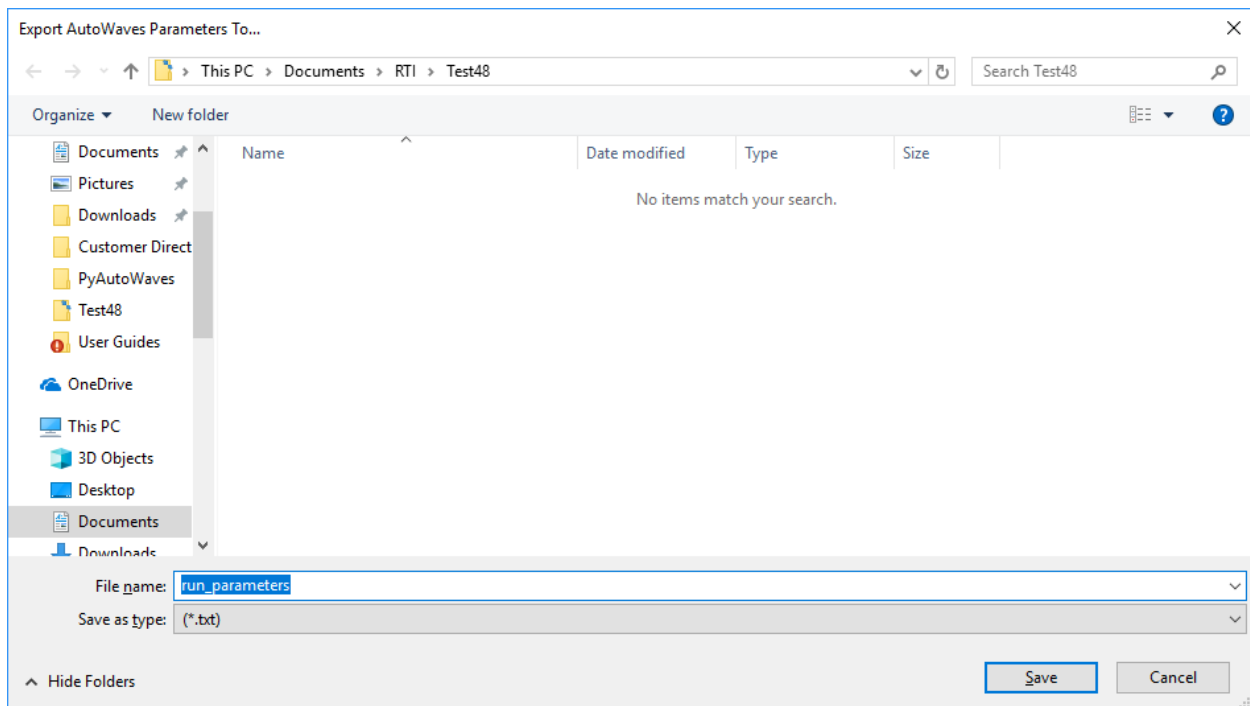


RUN

Rev. A



After all the settings have been modified, click the RUN button to begin monitoring for changes in the files in the output directory.

DATA PROCESSING

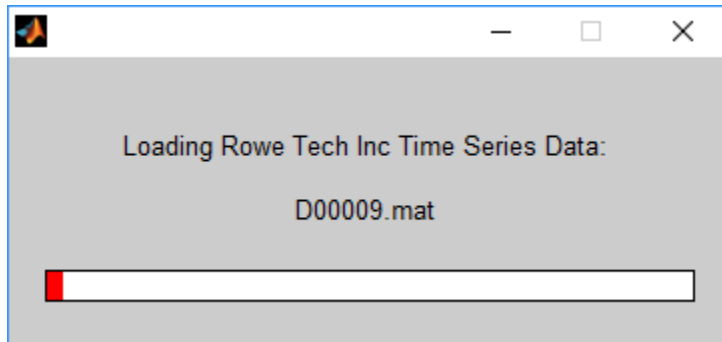

Data processing will then begin and display a progress bar. When all the initial files have completed processing, the waves report and plots will be generated in the folder. Then the folder will be monitored for any additional files added to the folder.